

BT3206



© 2020 Koninklijke Philips N.V.
All rights reserved




>75 % recycled paper
>75 % papier recyclé


2



3

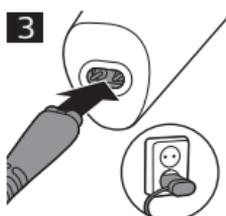


4

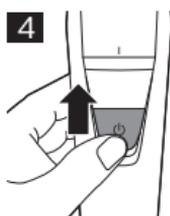


5



6

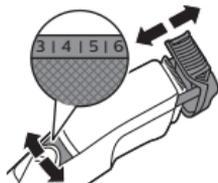

7

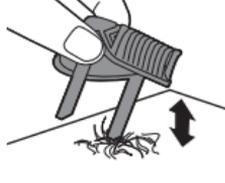


8




9




10

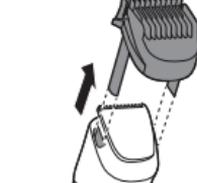


11

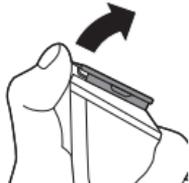

12

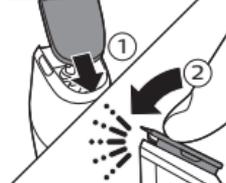

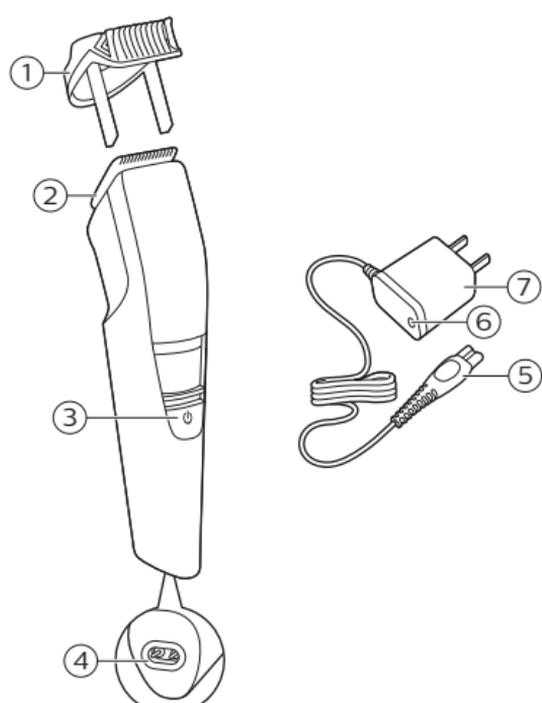1

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (fig. 1)

- 1 Trimming guard
 - 2 Cutting unit
 - 3 On/off button
 - 4 Socket for small plug
 - 5 Small plug
 - 6 Battery charge indicator
 - 7 Supply unit
- not shown: cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- This appliance contains batteries that are non-replaceable.
- Do not open the appliance to replace the rechargeable battery.

Caution

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap (Fig. 2).
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.
- Maximum noise level: Lc = 75 dB(A).

Charging

Charge the appliance fully before you use it for the first time and after a long period of disuse.

It takes approximately 10 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 45 minutes.

- 1 Make sure the appliance is switched off.
 - 2 Insert the small plug into the appliance (Fig. 3).
 - 3 Put the supply unit in the wall socket.
- The charging light on the supply unit lights up green to indicate that the product is charging.

Note: The charging light on the supply unit does not change color and does not go out when the product is fully charged.

- 4 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Optimizing the lifetime of the rechargeable battery

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

- Slide the on/off button up to switch the product on or off (Fig. 4).

Using the appliance

Note: Switch off and clean the appliance after each use.

Always comb the beard and/or moustache with a fine comb before you start trimming.

Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Trimming with comb

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

Use the trimming comb attached to the cutting element to trim your beard and moustache in your preferred style. Turn the zoom wheel to choose from 11 length settings ranging from 0.5 mm to 10 mm (1/32 in. to 13/32 in.).

- 1 Slide the trimming comb straight into the guiding groove of the appliance (Fig. 5).
- 2 Turn the zoom wheel to the desired setting (Fig. 6). The desired hair length setting is shown in the center of the zoom wheel.
- 3 Switch on the appliance.
- 4 To trim most effectively, move the appliance against the hair growth direction. Make sure that the surface of the comb always stays in contact with the skin.

Note: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.

- 5 Regularly remove cut hair from the comb. If a lot of hair has accumulated in the comb, remove it from the appliance and blow and/or shake out the hairs (Fig. 7). The selected hair length setting does not change when the comb is removed.
- 6 Switch off and clean the appliance after each use.

Trimming for 'stubble look'

- 1 Be certain trimming comb is attached to the appliance and use setting 0.5mm (1/32in.) to create a 'stubble look' trim (Fig. 8).

Trimming without comb

Use the trimmer without the trimming comb to trim the edges and single hairs.

Be careful when you trim without the comb as the cutting unit will remove every hair it touches.

- 1 Pull the trimming guard straight off the appliance (Fig. 10).
- 2 Switch the appliance on.
- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (Fig. 9).

Cleaning

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

Caution: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Switch off the appliance and disconnect it from the power outlet.
- 2 Wipe the housing of the appliance with a dry cloth.

Caution: Never immerse the appliance in water, or rinse it under the tap. Only the cutting unit can be rinsed under the tap.

- 3 Remove the comb (Fig. 10) and clean it with the cleaning brush and/or rinse it under the tap.
- 4 Remove the cutting unit by pushing against the teeth of the cutting unit (Fig. 11) and clean it with the brush or rinse it under the tap.
- 5 Carefully shake off excess water and let air dry completely.
- 6 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 12).

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC). Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Check if there are screws in the back or front of the appliance. If so, remove them.
- 2 Remove the back and/or front panel of the appliance with a screwdriver. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.