

Firmware upgrade procedure for BTM3360/BTB3370

Introduction:

Philips strives to continually bring you the best experience from our products. To obtain the optimal playback and latest features, you are highly recommended to upgrade the firmware of your product.

Upgrade the firmware for your product:

1. Download firmware.

- Click on the Download icon on the screen to download the new firmware package to your computer.



2. Transfer firmware to a USB thumb drive.

- Extract the .ali and .bin file (boot.ali & nemo.bin) from the downloaded file.
- Put the .ali and .bin file into the root directory of a USB thumb drive.
Note: Make sure there are no other files in the USB thumb drive to avoid corruption.

3. Upgrade the firmware to the product:

- Turn on the player.
- Switch the source to USB.
- Insert the USB thumb drive to the USB slot.
- The player will automatically update the firmware with 2 short beeping notification. On the display 'CD UPGRADE' will be shown.
Note: Do not interrupt the player to avoid corruption.
- Upon upgrade completion, the device will beep continuously.
- Disconnect the main power to the player.
- Remove the USB thumb drive.
- Reconnect the main power.
- Check the firmware version - when the display shows "--:--", press and hold STOP button for 3 seconds. The firmware version will be shown. If the firmware is not updated successfully, please repeat Step1 to Step3 again.