

Quick Start Guide










Step A **Connect**

Step B **Setup**

Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

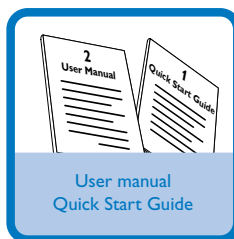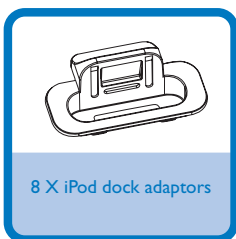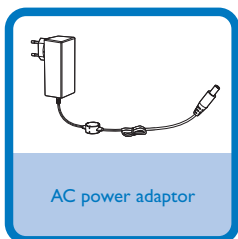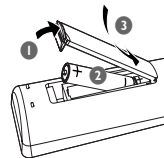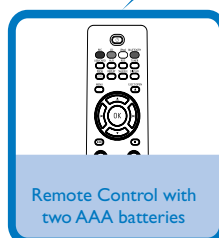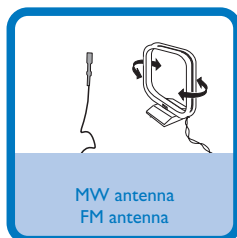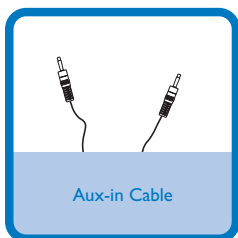

PHILIPS

Step A *Connect*

1

Connect the MW and FM antennas.


2

Connect the AC power adaptor of the system.

Tips

– See the *User Manual* for how to connect other equipment to this system.

– Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!

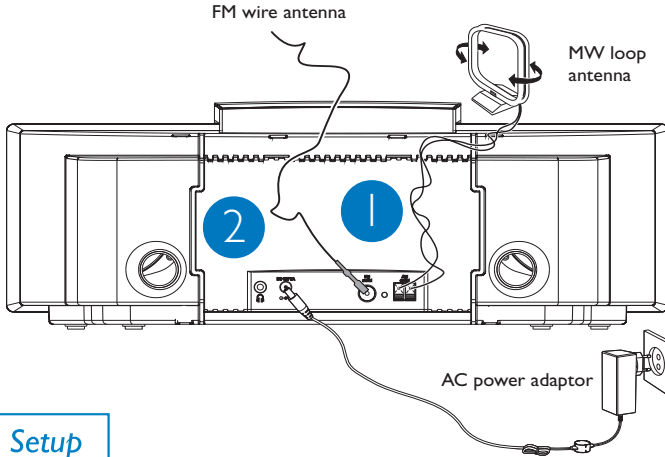

Step B *Setup*

Setting the clock

1

In standby mode, press **PROG** on the system (or **PROG/CLOCK** on the remote control).
→ **SET CLOCK** is displayed briefly. Then, **12HR** or **24HR** is displayed.

2

Press **ALBUM-PRESET +/-** on the system (or **▲/▼** on the remote control) to select clock mode. Press **PROG** on the system (or **PROG/CLOCK** on the remote control) to confirm.
→ The clock digits for the hours continue to flash.

3

Press **ALBUM-PRESET +/-** on the system (or **▲/▼** on the remote control) to set the hours.

4


Press **PROG** on the system (or **PROG/CLOCK** on the remote control) again.
→ The clock digits for the minutes flash.

5

Press **ALBUM-PRESET +/-** on the system (or **▲/▼** on the remote control) to set the minutes.

6

Press **PROG** on the system (or **PROG/CLOCK** on the remote control) to confirm the time.

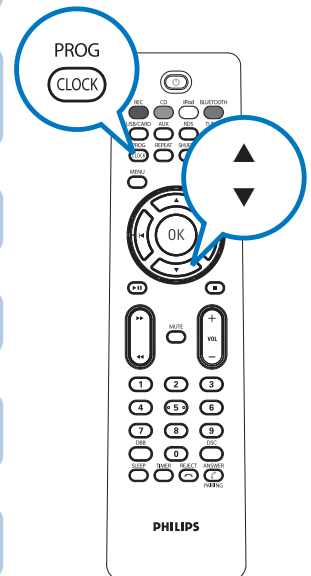

Step C Enjoy

Playing a disc

1

Insert a disc into the disc loader.
→ Make sure the label side is facing up.

2

In DISC mode, press **▶ ||** to start playback.

3

To stop playback, press **■**.

Operating a Bluetooth-enabled device via the system

1

Place a Bluetooth-enabled device for pairing within 10 meters from the system.

2

Press **SOURCE** on the top of the system (or **BLUETOOTH** on the remote control) to select the Bluetooth source.

3

Press and hold **ANSWER/PAIRING** on the top of the system or the remote control for more than 3 seconds.

4

Set the Bluetooth-enabled device to search for other available Bluetooth devices until it recognizes "PHILIPS BTM630".

5

Select "PHILIPS BTM630" and wait until you hear a double beep from the system and the Bluetooth icon turns on.
→ Enter "0000" when prompted for a keyword.


6

For a paired HFP and/or HSP mobile phone, you can receive, reject or hold a call via the system with the **ANSWER/PAIRING**, **REJECT** and **■** buttons respectively.
● For a paired A2DP device, you can enjoy music from it with the **▶ ||**, **◀ |**, **▶ |**, **◀ ◀** and **■** buttons via the system.

Playing a USB mass storage device/SD/MMC card

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards.

1

Insert the USB device's USB plug into the socket  or fully insert the SD/MMC card into the **SD • MMC** slot on the top of the system.

2


Press **SOURCE** once or more (or **USB/CARD** on the remote control) to select **USB/ CARD**.

3

Play the available audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

- 1 Press **SOURCE** repeatedly (or **TUNER** on the remote control) to select the tuner source.
- 2 Press **PROG** on the system (or **PROG/CLOCK** on the remote control) for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM-PRESET +/-** on the system (or **▲/▼** on the remote control) until the desired preset station is displayed.

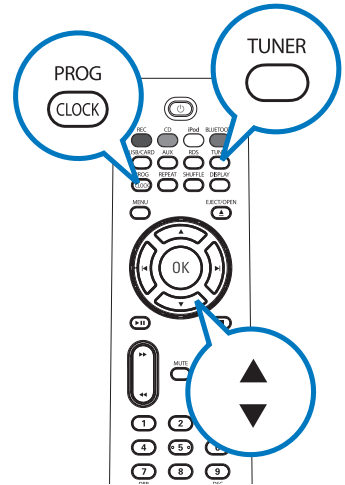

Playing Apple iPod using BTM630

- 1 Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.
- 2 Correctly place the compatible iPod player into the dock.
- 3 Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.
- 4 Power on your iPod player.
- 5 Select and play your favourite songs stored in the iPod player.

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example CD, TUNER).
- Then select the desired function (for example **II**, **◀**, **▶**).

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

