

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for a clipper that has fallen into water. Unplug immediately.
- This appliance is NOT a toy. The appliance is an electric hair clipper. Keep the appliance out of reach of young children.
- Use clipper only in a dry condition. Do not use while bathing or in a shower.
- Do not place or store clipper where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this clipper from the electrical outlet immediately after using, except when clipper is (re)charging.
- Unplug clipper and remove power supply cord from clipper before cleaning.
- The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Close supervision is necessary when this appliance and accessories is used by, on, or near children or invalids.
- Use this clipper and accessories for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
- Never operate this clipper if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. For assistance call 1-800-243-3050.
- Do not rinse or immerse the clipper handle in water or any other liquid.
- Keep the clipper, cord and any attachments away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate, charge, clean or plug in clipper outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutters, cutting unit and combs before using the clipper. Do not use the clipper if cutters, cutting unit or combs are damaged, as injury may occur.
- Always attach plug to clipper first, then to outlet. To disconnect, turn clipper OFF, then remove plug from outlet.
- To prevent possible damage to the cord, do not wrap cord around the clipper.
- Never put clipper in direct sunlight or store at a temperature above 140°F.
- This clipper is for use on human hair only. Do not use this clipper for any other purpose.
- Always store your clipper, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the clipper.
- Only use the power plug and other accessories supplied with the appliance.

SAVE THESE INSTRUCTIONS


IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Registration


Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register

Features

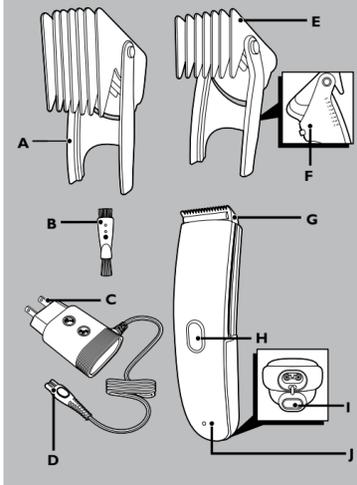

- A Large Comb
B Cleaning Brush
C Appliance Plug
D Adaptor
E Small Comb
F Hair Length Selector
G Cutting Unit
H On/Off Button
I Adaptor Cover
J Charging Light
Full Two-Year Warranty
45-Day Money-Back Guarantee

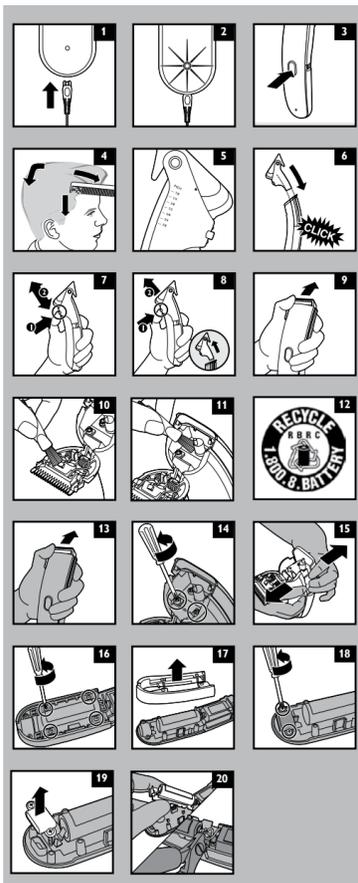

Put It To The Test

Like many new products, your Philips Norelco Kids Hair Clipper may take a little getting used to. If you are using an electric Clipper for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Hair Clipper:

Your Kids Hair Clipper is quiet and easy to use with rounded blades and comb tips that help prevent scratching the skin for a safe and pleasant haircut every time.

Put your new Hair Clipper to the test. We guarantee precise, professional results or Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

To Charge/Recharge

- Fully charge Clipper before using for the first time, after non-use for a long period of time or when the green charging light turns orange.
- Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifespan of the battery.
- Do not charge Clipper in a pouch.
- Always unplug Clipper from the electrical outlet immediately after use, except when Clipper is (re)charging.

1 Be certain Clipper is OFF.

2 Open the adaptor cover and insert the adaptor directly into the Clipper (fig. 1) and plug the appliance into any 120VAC outlet. Use only the cord provided.

An adaptor plug may be necessary for cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for power outlet.

3 After a few moments, the green Charging Light on the appliance will blink to indicate the Clipper is charging (fig. 2).

It will take approximately 8 hours to fully charge the Clipper for a cordless clipping time of up to 45 minutes.

4 After the Clipper is fully charged, the green Charging Light goes off.

5 Disconnect the cord and unplug from electrical outlet.

Corded Hair Clipping

1 Open the adaptor cover and insert the adaptor provided to Clipper and plug Clipper into electrical outlet (fig. 1).

2 Turn Clipper ON by pressing the ON/OFF Button once (fig. 3) and begin clipping.

3 Turn Clipper OFF and unplug.

Cordless Hair Clipping

1 Charge according to directions. Unplug Clipper from outlet and remove cord.

2 Turn Clipper ON by pressing the ON/OFF Button once (fig. 3) and begin clipping.

3 If the charge runs low while clipping, the green Charging Light will turn orange.

The Clipper still contains enough power for approximately 15 minutes of cordless clipping.

4 If the motor starts to run slowly, simply connect cord provided to Clipper and outlet to continue clipping.

Hair Clipping

Use this Clipper for its intended household use as described in this manual.

- Make sure that the appliance is fully charged before you start clipping hair.
- Before you start clipping, make sure that the head of the person whose hair you are cutting is at the same level as your chest so that all parts of his/her head are clearly visible and within easy reach.
- Only use the appliance on clean, dry hair.
- Do not use on wet hair.
- Before you begin, comb the hair in the direction of growth (fig. 4).
- To achieve optimal clipping results, always move the appliance slowly through the hair against the direction of hair growth.

Clipping with small or large comb

1 Be certain Clipper is OFF.

2 Select the comb attachment. The remaining hair length after clipping is indicated on the sides of each comb (fig. 5).
– Small comb: 1/8 – 7/8 in. (3-21mm)
– Large comb: 1 – 1 3/4 in. (24-42mm)

3 Slide the selected comb into the guiding grooves on both sides of Clipper and push until you hear it 'click' into place (fig. 6).

Make sure the comb attachment locks properly into position.

4 Press the Hair Length Selector (1) and slide it to the desired setting (2) (fig. 7).

5 The setting indications on the sides of the comb show the selected setting.

When you are clipping for the first time, start at the maximum clipping length setting (7/8 in./21mm or 1 3/4 in./42mm) of the small or large comb to familiarize yourself with the appliance and prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust the Hair Length Selector to desired trimming length.

6 Make sure that the flat part of the comb is always in full contact with the scalp to obtain an even result.

7 Since all hairs do not grow in the same direction, move the appliance slowly over the crown from different directions (i.e. upwards, downwards and across) to achieve an even result.

8 Always move the appliance against the direction of hair growth.

9 Make overlapping passes over the head to ensure that all hair that should be cut has been cut.

10 For best results with curly, sparse or long hair, use a styling comb to guide the hair towards the Clipper.

11 Turn the Clipper off regularly during clipping and remove the hair comb to blow and/or shake out hair that has accumulated.

REMEMBER: You must reset the hair length selector back to your desired setting every time you replace the hair clipping comb on the appliance.

TIP: Write down the settings you have used to create a certain hairstyle as a reminder for future clipping sessions.

The Fade

This cut allows you to achieve a smooth transition from longer hair on top of the head to shorter hair on the back and sides of the head.

1 Slide the large comb into the guiding grooves on both sides of the Clipper and push until you hear it 'click' into place (fig. 6).

2 Press the Hair Length Selector (1) and slide it to the maximum setting (2) of 1 3/4 in./ 42 mm (fig. 7).

3 Clip the desired areas of the head.

4 Then choose a shorter setting and cut all parts of the head except the top where you want the hair to be longer.

5 Repeat until all hairs have the desired length.

Cutting over a Styling Comb or Fingers

This technique can be used to obtain hair lengths over 1 3/4 in./42 mm.

1 Remove the hair comb attachment by pressing the Hair Length Selector (1) and sliding the comb off the Clipper (2) (fig. 8). *Never pull off a comb by grasping the flexible top portion. Always pull off by the bottom part of attachment.*

2 Comb a small section of hair upwards.

3 Lift the hair with a styling comb and hold it between your fingers.

The amount of hair you wish to cut should extend beyond your fingers.

4 Cut the hair extending from the fingers or comb.

5 Continue this procedure, working from the front to the back of the head.

6 Comb hair often to remove trimmed hair and to check for uneven areas.

Contouring without a comb attachment

Remove the hair comb if you are:

- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hairs

Be careful when you are clipping without comb attachment as when the Clipper is turned on it will remove every hair it touches.

1 Be certain Clipper is in the OFF position.

2 Remove the hair comb attachment by pressing the Hair Length Selector (1) and sliding the comb off the Clipper (2) (fig. 8). *Never pull off a comb by grasping the flexible top portion. Always pull off by the bottom part of attachment.*

3 To contour the hairline around the ears, comb the hair ends over the ears.

4 Tilt the Clipper in such a way that only one edge of the cutter blades touches the hair ends when you shape the contours around the ears.

Only cut the hair ends. The hairline should be close to the ear.

5 To contour the nape of the neck or sideburns, turn the Clipper and hold it with the cutter blades pointing downwards.

6 Move the Clipper slowly and smoothly following the natural hairline.

Cleaning

- Clean the Clipper and combs after each use.
- Always switch Clipper OFF, unplug and remove power supply cord from the Clipper before cleaning.
- Do not use compressed air, abrasive cleaning agents, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the Clipper and attachments.
- Never clean, replace or remove Clipper attachments with motor ON.
- Never rinse or immerse the Clipper handle in water or any other liquid.
- Do not apply pressure to cutters.
- Do not touch cutters with hard objects as this may damage them.
- Use a soft, dry cloth to clean the Clipper handle.

During Use:

If cut hairs have accumulated in the comb area, remove hairs by shaking, blowing or using cleaning brush provided. Remember to adjust the clipping length back to your selected setting where you replace the comb on the Clipper.

After Each Use:

1 Make sure the Clipper is switched OFF and disconnected from the electrical outlet.

2 Remove the hair comb attachment by pressing the Hair Length Selector (1) and sliding the comb off the Clipper (2) (fig. 8).

3 Push the center top end of the cutter blade upwards with your thumb until it opens (fig. 9).

4 Clean the cutting unit with the cleaning brush supplied (fig. 10).

5 Clean the inside of the Clipper with the brush supplied (fig. 11).

6 Clean the handle, combs and the adaptor with the cleaning brush supplied or with a dry cloth.

7 Close the cutting unit until it 'clicks' into place.

Replacing The Cutting Unit

If your cutters become damaged or worn, do not continue using the Clipper. Replace cutters immediately.

1 Open the cutting unit (fig. 9).

2 Remove the old cutting unit by pulling it upwards and then pull off the Clipper.

3 Place the notch of the new cutting unit into the slot.

4 Push the cutting unit back onto the Clipper until you hear a 'click'.

This Clipper has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

- Be sure the Clipper is turned OFF. Remove cord from outlet and Clipper before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the Clipper when storing.
- Store cord in a safe location where it will not be cut or damaged.
- Do not place or store the Clipper where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Assistance

For assistance, call toll free:

1-800-243-3050
or visit our website:
www.philips.com/norelco

Information is available 24 hours a day, 7 days a week.

Battery Removal

- This Philips Norelco Clipper contains a rechargeable Lithium-Ion battery which must be disposed of properly (Fig. 12).
- Battery may only be removed when the Clipper is to be discarded.
- For assistance, visit our website, www.philips.com/support or call toll free: 1-800-243-3050

1 Unplug electrical cord from outlet and Clipper before dismantling Clipper.

2 Allow Clipper to run until the battery is empty/depleted.

3 Turn Clipper OFF.

4 Remove any comb attachment.

5 Push the middle part of the cutting unit upwards with your thumb until it opens (Fig. 13).

6 Undo the two screws in the hair chamber (Fig. 14).

7 Use both hands to separate the front part of the housing from the back part and remove the front part of the housing (Fig. 15).

8 Undo the 4 screws next to the battery (Fig. 16).

9 Remove the bumper (Fig. 17).

10 Undo the 2 screws of the socket at the bottom of the appliance (Fig. 18).

11 Remove the socket from the appliance (Fig. 19).

12 Lift the rechargeable battery and the printed circuit board out of the appliance and cut the connecting wires (Fig. 20).

13 Do not attempt to replace battery. Insulate battery ends by covering with tape and/or place battery in a small plastic bag.

14 Discard your Clipper. Do not attempt to plug electrical cord into the outlet or recharge the Clipper after the battery has been removed.

15 Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbrcc.com for battery drop-off locations.

PHILIPS

NORELCO

Kids
Hair Clipper



CC5059

Rechargeable
Cordless/Cord

Always here to help you

Register your product and get support at www.norelco.com/register



4222 002 8401 1

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips Norelco product, Model CC5059 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specific voltage. * Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you. *Read enclosed instructions carefully.

Manufactured for:
Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.

© 2013 Philips Electronics North America Corporation. All Rights Reserved.

PHILIPS

NORELCO

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Philips Norelco Clipper send the product back and we'll refund you the full purchase price.

The Clipper must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail. The Clipper must be postmarked no later than 45 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.

Delivery of refund check will occur 6–8 weeks AFTER receipt of returned product.