

Register your product and get support at
www.philips.com/welcome

CD290
CD295



Quick start guide

1

Connect

2

Get started

3

Enjoy

PHILIPS

What is in the box



Base station
(CD295)



Base station
(CD290)



Charger*



Handset*



Power adapter*



Line cord**



User manual, quick start guide, guarantee

Note

* In multi-handset packs, there are additional handsets, chargers and power adapters.

** In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Caution

 
 
- Use only the supplied batteries and power adapter.

1 Connect

Connect the base station



- 1 Connect each end of the power adapter to:
 - the DC input jact at the back of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the back of the base station;
 - the telephone socket on the wall.

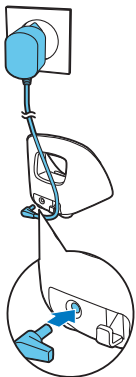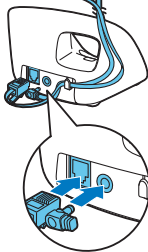 




For multi-handset version only:

- 3 Connect each end of the power adapter to:
 - the DC input jact at the back of the base station;
 - the power socket on the wall.

 
2 Get started

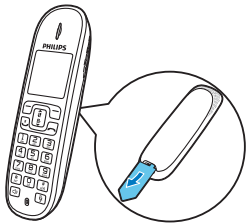Configure your phone



- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
- 3 Please set the country and language if prompted.
- 4 Set the date and time.
 - If the time is in 12-hour format, press  or  key to select **[am]** or **[pm]**.

Charge your phone

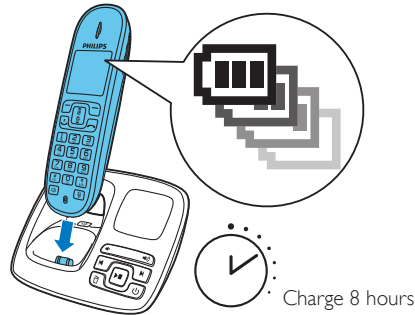




Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

Note




- Charge the batteries for 8 hours before first use.

Check the battery level



Icon	Status
	When the handset is off the base station/charger, the bars indicate the battery level (full to low).
	When the handset is on the base station/charger, the bars flash until charging completes.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.

3 Enjoy

Call

- To make a call, press  and dial the phone number.
- To answer a call, press  when the phone rings.
- To end a call, press .

Adjust the earpiece volume

Press  or  to adjust the volume during a call.

Add a contact in the phonebook

 
- 1 Select **[Menu]** > **[Phonebook]** > **[Add new]**, then press **[OK]** to confirm.
- 2 Enter the name then press **[OK]** to confirm.
- 3 Enter the number; then press **[Save]** to confirm.







Record an announcement

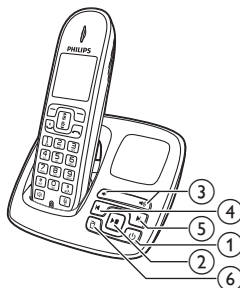(for CD295 only)

- 1 Press **[Menu]**.
- 2 Select **[Answ. Machine]** > **[Announcement]**, then press **[OK]** to confirm.
- 3 Select **[Answer only]** or **[Record also]**, then press **[OK]** to confirm.
- 4 Select **[Record new]**, then press **[OK]** to confirm.
- 5 Recording starts after the beep.
- 6 Press **[OK]** to stop recording or the recording stops after 3 minutes.
 - ↳ You can listen to the newly recorded announcement on the handset.

Listen to messages recorded on the answering machine (for CD295 only)



- ① To turn on/off the answering machine in standby mode, press .
- ② To start/Stop listening, press .
- ③ To adjust the volume, press .
- ④ To play the previous message/Replay the current message, press .
- ⑤ To play the next message, press .
- ⑥ To delete the current message, press .



Note

- For more information, see the Telephone answering machine section in the user manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User manual

Refer to the user manual that came with your new phone.

Online help

www.philips.com/support

CE 0168



Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. All rights reserved.
© 2012 Koninklijke Philips Electronics N.V.



QSG_CD290-295
05_EN_V1.1
WK11502