







## Check the battery level

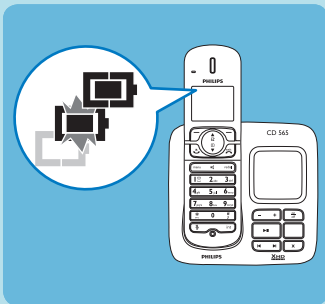

When the handset is off the base station/charger, the icon indicates the battery level:

-  Full (steady on)
-  Medium (flashing)
-  Low (empty)

When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.

-  When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.
-  When the charging completes, the battery icon keeps steady on.