

Welcome


Quick start guide




- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS


What's in the box

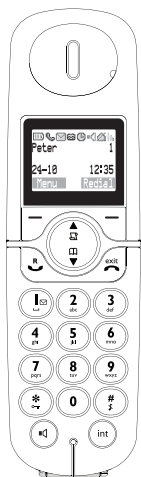

CD640/CD645 Handset

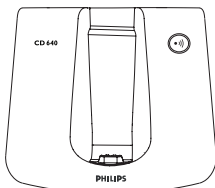


CD640 Base station
OR

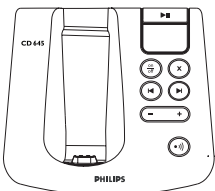

CD645 Base Station



 Power supply unit for
base station



Line cord



2 x AAA Rechargeable
batteries



Belt clip
(Country dependent)



CD640 or CD645
User manual



Guarantee



Quick start guide

The line adaptor may not be attached to the line cord. You may find the line adaptor in the box. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.
In multi-handset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.



Warning Always use the cables and batteries that are supplied with your phone.

I

Connect

Connect the base station

1. Insert the plug of the power cord into the socket under the base station.
2. Insert the plug of the line cord into the socket under the base station.
3. Connect the other end of the line cord together with the line adaptor if necessary, to the telephone line socket and the other end of the power cable to the electricity socket.

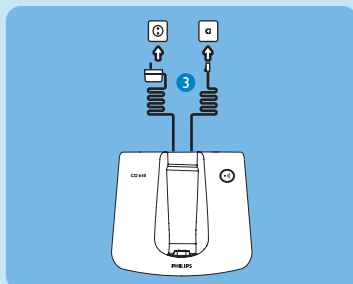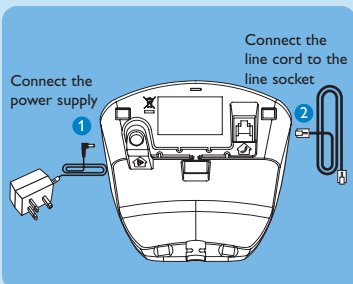


2


Install

Insert rechargeable batteries and charge

Insert batteries

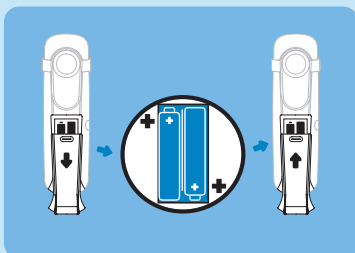

Charge handset for 24 hours

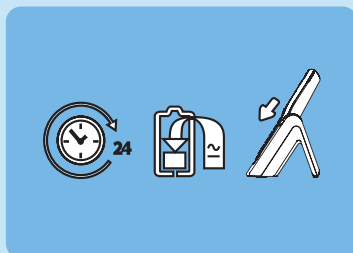




 


Configure your phone (if necessary)

After charging your phone for a few minutes, the Welcome screen appears.






 




1. Press to display the list of countries
2. Press to scroll to your country
3. Press to confirm your selection

 Set the time






 


1. Press  to access the main menu
2. Press / to select **Clock & Alarm**
3. Press  to select **Set Date/Time**
4. Press 
5. Enter the current time (HH:MM) in 24-hour format and the current date (DD/MM/YY)
6. Press  to save the settings

3 Enjoy


Set the alarm

1. Press  to access the main menu
2. Press / to select **Clock & Alarm**
3. Press  and / to select **Alarm**
4. Press  and / to select **Off, On Once, or On Daily**
5. Press  to save the settings



Rename your handset

1. Press  to access the main menu
2. Press / to select **Personal Set**
3. Press  and / to select **Handset Name**
4. Press  to enter the handset name
5. Press  to save the settings



Make a call

Press  and dial the number

OR

Dial the number and press  or .

Answer a call

When the phone rings, press  or .

End a call






 




Press 

 Set the earpiece volume






 




During a call:

 Press / to select the earpiece volume from level one to level five






 




Set a wallpaper to be displayed in standby mode

 1. Press  to access the main menu
2. Press / to select **Personal Set**
3. Press  and / to select **Wallpaper**
4. Press  and / to scroll to your desired wallpaper
5. Press  to save the settings












Adjust the contrast level

  1. Press  to access the main menu
2. Press / to select **Personal Set**
3. Press  and / to select **Contrast**
4. Press  and / to scroll to your desired contrast level
5. Press  to save the settings






 


Set the color theme

1. Press  to access the main menu
2. Press / to select **Personal Set**
3. Press  and / to select **Color Theme**
4. Press  and / to scroll to your desired color theme
5. Press  to save the settings





Set the ring melody

1. Press  to access the main menu
2. Press / to select **Personal Set**
3. Press  to select **Handset Tones**
4. Press  and / to select **Ring Melody**
5. Press  and / to scroll to your desired ring melody
6. Press  to save the settings









Store a number in the phonebook

1. Press  to access the main menu
2. Press / and  to select **Phonebook**
3. Press  to select **New Entry**
4. Enter the name (maximum 12 characters)
5. Press  to enter the number (maximum 24 digits)
6. Press  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>)
7. Press  to save the entry

Access the phonebook

1. Press  to access the phonebook
2. Press / to select your desired phonebook entry
3. Press  to view the details of your selected phonebook entry

Listen to new messages recorded on answering machine (applicable to CD645 only)

1. Press  on the base station to turn on the answering machine
2. Press  on the base station, playback of the oldest new message will begin.
3. Press  to skip the current message and play the next message
4. Press  to go back to previous message if it is pressed within one second of current message playback
5. Press  to replay current message if it is pressed after one second of current message playback
6. Press  to increase or  to decrease speaker volume during message playback
7. Press  to delete the current message

See CD645 user manual for details about the answering machine function.

Troubleshooting

For more information, see the user manual that came with your CD640 or CD645.

Problem


Solution

No dialing tone

- Charge the batteries for at least 24 hours
- Move closer to the base station
- Use the line cable provided

Poor audio quality

- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances

The  is blinking

- Register the handset to the base station
- Move closer to the base station

The handset LCD displays nothing

- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset
- Make sure the two supplied rechargeable batteries have been inserted into the battery compartment
- Make sure the supplied batteries are charged up

Caller Line Identification (CLI) service does not work

- Check your subscription with your network operator

Need help?

User Manual

See the User Manual that came with your CD640 or CD645.

Online help

www.philips.com/support