

Philips
CD Soundmachine with
Dynamic Bass Boost



CD6660

Sound mixer

Versatile sound mixer with CD play and CD synchro start recording on tape. Accompany your own vocals and instrumentals with prerecorded sounds from CD or cassette.

Enriched bass sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound

Enjoy your music from different sources

- CD player
- Autostop cassette deck

Easy to use

- CD program/repeat
- Fast forward and rewind functions
- Stereo headphone socket

PHILIPS

Specifications

Sound

- Output power (RMS): 20
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Volume Control: rotary

Loudspeakers

- Finishing: Cloth

Audio Playback

- Cassette Deck Technology: Mechanical
- Cassette Playback Modes: Cue, Fast Wind/Rewind, Full Auto Stop, Pause key, Tape Counter
- CD Playback Enhancements: Next/Previous Track, Repeat
- Loader Type: Top
- Number of decks: 1



Audio Recording

- Recording Media: Tape

Connectivity

- DC in: 12V
- Headphone: 3.5 mm
- Microphone: Built-in microphone

Convenience

- Display Digits: 4

Dimensions

- Product dimensions (W x H x D): 291 x 540 x 320 mm
- Product weight: 10.5 kg

Highlights

Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Dynamic Bass Boost

Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD player

CD player

Autostop cassette deck

Autostop cassette deck

CD program/repeat

CD program/repeat

Fast forward and rewind

Fast forward and rewind functions

Stereo headphone socket

Connect your own headphone for a more personal listening experience whenever you want it. You can enjoy your favorite music in great sound without disturbing others by connecting your headphones to the player.



Issue date 2014-02-05

Version: 1.0.2

12 NC: 9071 631 00009
EAN: 87 10101 34077 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com