

Audio CD Recorder

**CDR778**

- *Instructions for use*
- *Mode d'emploi*
- *Instrucciones de manejo*
- 使用説明書



*Let's make things better.*



**PHILIPS**

## AUSTRALIA

## Philips product warranty for Australia

### Philips Product Warranty (FOR AUSTRALIA ONLY)

#### Warranty conditions valid for Colour Television, Video Cassette Recorders, CD Recordable, DVD Players, Audio Systems, and Portable Audio.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

#### 12 months free service

#### Conditions of warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Center. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects occurring under normal use of the product when operated in accordance with the instructions.
3. Home service within the normal service area of one of our Authorised Service Centres will be provided for television receivers with screen size 48cm and above. All other products are to be brought or sent to your nearest Authorised Service Centre.
4. This warranty does not cover:
  - a) Mileage or traveling time, pickup or delivery, cost of insurance.
  - b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
  - c) Product failures caused by misuse, neglect, normal wear and tear, accidental breakage, transit damage, inexpert repairs or modification by unauthorised persons, lightning strikes, vermin infestation or liquid spillage.
  - d) Cleaning of video or audio heads.
  - e) Inadequate receiving antennae.
  - f) Replacement of worn or used batteries, styli or other consumables.

The conditions contained in this warranty replace and override the provision of the World-Wide Guarantee for products sold in Australia.

#### Philips Authorised Service Centres

To contact your nearest Philips Authorised Service Centre call **1300-36-13-92** from anywhere in Australia.

Sydney

Canberra

Adelaide

Newcastle

Melbourne

Hobart

Perth

Brisbane

Wollongong

Service is provided through 350 accredited service dealers throughout Australia. To find out about your nearest centre, call **1300 36 13 92**.

Please record the following information for your records and keep in a safe place.

Model No:.....

Serial No:.....

**Please retain your purchase receipt which is required to claim service under warranty.**

Philips Consumer Electronics Australia Limited  
ACN 008 445 743, 3 Figtree Drive  
Homebush NSW 2140

## NEW ZEALAND

## Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

#### Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.

5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

#### How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller  
Philips New Zealand Ltd.**

✉ P.O. Box 41.021

Auckland

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

# CONTENTS

|               |    |                 |
|---------------|----|-----------------|
| English ..... | 5  | <b>English</b>  |
| Français..... | 31 | <b>Français</b> |
| Español ..... | 57 | <b>Español</b>  |
| 中文 .....      | 83 | <b>中文</b>       |

## México:

NOM-135-11  
NVCCE

Es necesario que lea cuidadosamente su in-struct-ti-vo de manejo.



Descripción: .....Grabadora de CD  
Modelo : .....CDR778  
Alimentación:.....110–127/220–240 V; ~50–60 Hz  
Consumo: .....20 W  
Importador: .....Philips Mexicana, S.A. de C.V.  
Domicilio:.....Norte 45, # 669, Col. Industrial Vallejo  
Localidad y Telefono:....C.P. 02300 México D.F., Tel. 7284200  
Exportador:.....Philips HK, Ltd.  
País de Origen: .....China  
Nº de Serie: .....\_\_\_\_\_

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO  
ANTES DE USAR SU APARATO.**

## LASER SAFETY

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

### LASER

|                 |                                |
|-----------------|--------------------------------|
| Type            | Semiconductor laser GaAlAs     |
| Wave length     | 775–795 nm (at 25° C)          |
| Output Power    | 2,5 mW (Read)<br>35 mW (Write) |
| Beam divergence | 60 degree.                     |

## CAUTION

**USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE OR OTHER UNSAFE OPERATION.**

## CAUTION

INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM

**Note : This warning is located inside the enclosure**

## For Customer Use:

Read carefully the information located at the back plate of your CD recorder/player and enter below the Serial N°.  
Retain this information for future reference.

Model No. ....CDR778.....

Serial No.....

**CLASS 1  
LASER PRODUCT**

Es necesario que lea cuidadosamente su instructivo de manejo.



## POLIZA DE GARANTÍA

### ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor. Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación**, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestra central de servicio al tel.: 728 42 52, y en el interior del país LADA sin costo al 01 800 506 92 00 en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles**, contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

**La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.**

**Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada y firmada por la casa vendedora**, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

### ESTA POLIZA NO SE HARÁ EFECTIVA EN LOS SIGUIENTES CASOS:

- Cuando el aparato sea utilizado en condiciones anormales y los daños o desperfectos que manifieste sean causados por mal trato, descuido o mal uso.
- Cuando el aparato no haya sido operado de acuerdo a su instructivo de uso, en donde se señalan las condiciones normales de operación, los valores nominales y las tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.
- Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.
- Cuando los datos de esta póliza hayan sido alterados o modificados.
- Por fenómenos naturales no imputables a la empresa tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos, etc.

### PERIODOS DE GARANTÍA

**12 MESES.** – Televisores, videocaseteras, proyectores, cámaras de video, decodificadores de señal (IRD), T.V. hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, equipos modulares, sintonizadores.

**6 MESES.** – Radio grabadoras con y sin compact disc, mini reproductores de cassette, reproductor de CD portátil, radio relojes, radios A.M.F.M., auto estéreos, teléfonos inalámbricos.

**3 MESES.** – Accesorios, controles remotos y bocinas.

## Table of contents

### GENERAL INFORMATION AND DISCS

|                          |   |
|--------------------------|---|
| Welcome .....            | 6 |
| About this manual.....   | 6 |
| Technical data .....     | 6 |
| Discs for recording..... | 7 |
| Discs for playback.....  | 7 |
| Maintenance .....        | 7 |
| Accessories .....        | 7 |

### CONTROLS AND CONNECTIONS

|                               |   |
|-------------------------------|---|
| Controls on the front.....    | 8 |
| Connections at the back ..... | 9 |

### DISPLAY

|                          |    |
|--------------------------|----|
| DISPLAY indications..... | 9  |
| DISPLAY messages .....   | 10 |
| MENU messages.....       | 11 |

### INSTALLATION

|  |    |
|--|----|
| Connections general .....                          | 11 |
| Analogue connections CD recorder & CD player ..... | 12 |
| Analogue connections CD player deck.....           | 12 |
| Digital coaxial connections CD recorder .....      | 13 |
| Digital optical connections CD recorder.....       | 13 |
| Power supply.....                                  | 14 |
| Setup recommendations.....                         | 14 |
| Inserting batteries in the remote control .....    | 14 |

### REMOTE CONTROL

|                               |    |
|-------------------------------|----|
| Remote control commands ..... | 15 |
| Inserting discs .....         | 15 |

### RECORDING

|   |    |
|---|----|
| Remarks about recording .....                                 | 16 |
| Recording modes.....  | 16 |
| High speed recording from internal CD player.....             | 17 |
| Listen mode recording from internal CD player .....           | 18 |
| Manual recording from external CD player.....                 | 19 |
| Autostart recording from external<br>CD player - CD SYNC..... | 20 |
| Finalising CDR & CDRW discs .....                             | 21 |
| Unfinalising CDRW discs .....                                 | 21 |
| Erasing CDRW discs .....                                      | 22 |

### PLAYING

|  |    |
|--|----|
| Play a 2-disc changer (Changer mode).....          | 23 |
| Playing CDs on Deck 1 and/or Deck 2 (DJ mode)..... | 23 |
| Selecting a track .....                            | 24 |
| Search .....                                       | 24 |
| Shuffle (random order) play .....                  | 24 |
| Repeat CD, track or program .....                  | 24 |

### PROGRAMMING

|                                |    |
|--------------------------------|----|
| Remarks about programming..... | 25 |
|--------------------------------|----|

### MENU MODE

|                                  |    |
|----------------------------------|----|
| Remarks about Menu mode.....     | 26 |
| General operation of Menu .....  | 26 |
| A. Text input .....              | 27 |
| B. Erasing text.....             | 27 |
| C. Reviewing CD Text memory..... | 28 |
| D. Auto track increment.....     | 29 |
| E. Balance.....                  | 29 |

### FIXING PROBLEMS

|                      |    |
|----------------------|----|
| Troubleshooting..... | 30 |
|----------------------|----|

## Welcome !

Thank you for buying this Philips Compact Disc Recorder / Player Double Deck.

In the eighties Philips invented a new audio system - the CD. The CD (compact disc) revealed to you the new dimensions of digital sounds and added to the pleasures of audio. Compact disc technology permits a high contrast in loud as well as in quiet passages, with perfect channel separation. Philips has now further developed compact disc technology and the result is the CD recorder.

With your Philips CD recorder/player, you can make your own high-quality audio CDs (subject only to legal restrictions on copying), either by recording at normal or high speed from the Player to the Recorder, or by recording from an external source. And naturally, you can also play all pre-recorded audio CDs, using one or both decks individually, or together as a 2-deck changer.

*It is forbidden to copy material protected by copyright, including computer programs, films, television and audio recordings. This appliance may not be used for such applications.*

### About this manual

This manual gives instructions for operating this CD recorder where:

- the figures (1) throughout the text indicate a sequence of actions necessary to perform a certain operation;
- the arrows (→) indicate the reaction from the recorder;
- the dots (•) indicate remarks, advice or special options within a sequence of actions. The dot-marked instructions are not necessary for the required operation.

### Technical data

*Subject to modification without notice.*

#### General

|                                    |                   |
|------------------------------------|-------------------|
| Power consumption .....            | 20 W              |
| Power consumption in Standby ..... | 6 W               |
| Operating temperature .....        | 5-35° C           |
| Weight .....                       | 4.5 kg            |
| Dimensions .....                   | 435 x 310 x 88 mm |

#### Audio

|   |                      |
|---|----------------------|
| Frequency response .....                          | 20Hz - 20000 Hz      |
| Playback S/N (A-weighted) .....                   | 100 dB               |
| Playback S/N .....                                | 100 dB               |
| Playback dynamic range CDR .....                  | 95 dB (90 dB)        |
| Playback dynamic range CD .....                   | 90 dB                |
| Playback total harmonic distortion CDR.....       | 88 dB = 0.0033 %     |
| Playback total harmonic distortion CD.....        | 85 dB = 0.0056 %     |
| Channel separation .....                          | 100 dB               |
| Recording S/N (A-weighted) .....                  | 98 dB                |
| Recording S/N digital without SRC .....           | equal to source      |
| Recording dynamic range.....                      | 92 dB                |
| Recording total harmonic distortion + noise ..... | .....                |
| .....   | .....85 dB (0.0056%) |

## Discs for recording

For recording use, special audio discs must be used (for music only). These Discs bear the logos as shown below. The text 'DIGITAL AUDIO' is present!

Your recorder uses two types of discs for recording purposes:

- **CD-Audio Recordable** (CDR) discs: fully recorded and finalised, these discs play on all CD players and recorders.



- **CD-Audio ReWritable** (CDRW) discs: can be recorded, erased and re-recorded hundreds of times. When finalised, they play on **CDRW compatible CD players** and recorders. In the course of 1999 most Philips CD players and recorders will be CDRW compatible.



### Important:

To ensure proper working of the set we recommend the use of **Philips** audio CDR and audio CDRW discs only.

## Discs for playback

Your CD recorder is able to play:


- All pre-recorded audio CDs.
- All Audio CDR and Audio CDRW.

*Note: CDR(W) discs recorded with a computer can only be used when they are correctly treated according the audio standard (IEC958: Consumer part). Single session only!*

## Maintenance

For recording it is very important to use dust and scratch free discs.


To clean a CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Write only on the printed side of a CDR or CDRW, and only with a soft felt-tipped pen.

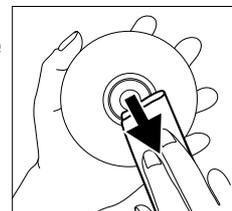

Clean the CD recorder with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.



Do not expose the CD recorder, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

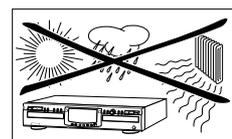


Always keep the tray closed to avoid dust on the lens.

The lenses may cloud over when the CD recorder is suddenly moved from cold to warm surroundings. It is not possible to play a CD then. Leave the CD recorder in a warm environment until the moisture evaporates.

## Accessories

- 2 Analogue audio cables (with red and white plugs)
- 1 Digital coaxial cable (with black plugs)
- Power cord
- 2 Batteries
- Remote control
- Guarantee

# CONTROLS AND CONNECTIONS

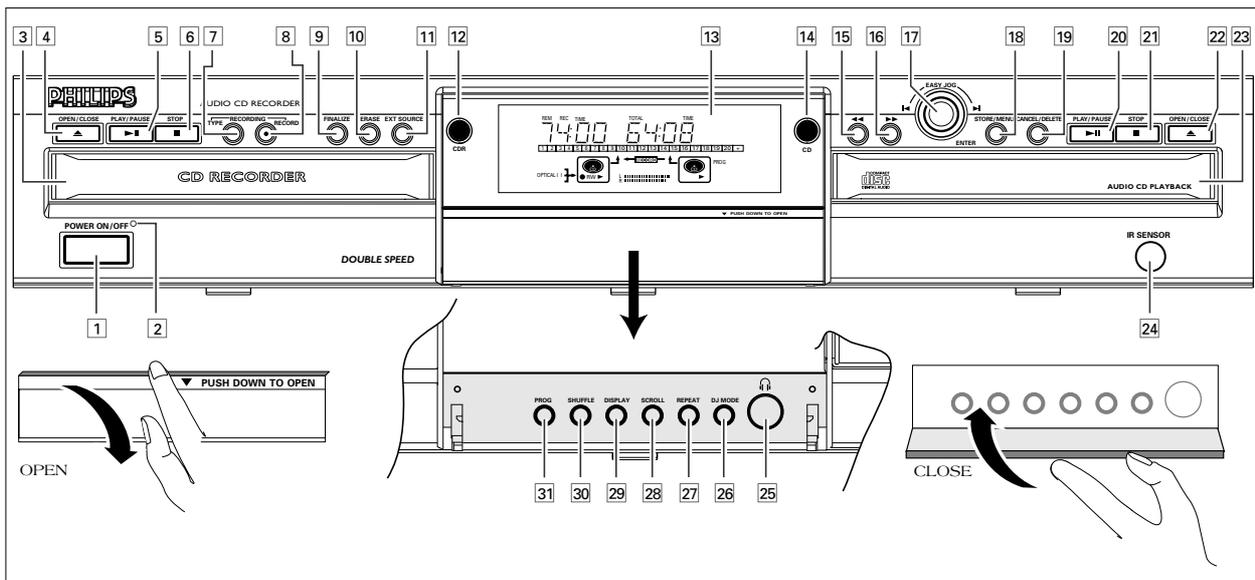

## Controls on the front

### CD recorder

- 1 **POWER ON/OFF** .....turns the CD recorder ON or OFF (if the recorder is in Standby mode, any key press will activate the CD recorder)
- 2 Standby indicator
- 3 Disc tray
- 4 **OPEN/CLOSE ▲**.....opens/closes disc tray
- 5 **PLAY/PAUSE ► II** .....starts play/interrupts play or recording
- 6 **STOP ■**.....stops/clears a program
- 7 **RECORDING-TYPE** .....selects recording modes
- 8 **RECORDING-RECORD**... starts recording, finalising, erasing
- 9 **FINALIZE** .....selects finalise mode
- 10 **ERASE**.....selects erasing mode (disc or track)
- 11 **EXT SOURCE** .....selects external input source
- 12 **CDR** .....selects CD recorder deck display/keys

### CD player


- 14 **CD** .....selects CD player deck display/keys
- 20 **PLAY/PAUSE ► II** .....starts play/interrupts play
- 21 **STOP ■**.....stops/clears a program
- 22 **OPEN/CLOSE ▲**.....opens/closes disc tray
- 23 Disc tray

### General

- 13 Display.....information screen
- 15 **◀◀** ..... - searches backward  
- cursor control in Menu/Prog. review mode
- 16 **▶▶** ..... - searches forward  
- cursor control in Menu/Prog. review mode

- 17 **◀ EASY JOG ▶** .....- previous/next track (Play and rotate)  
- Program mode  
- recording level control (recording)  
- selects settings (menu on)
- ENTER**..... - plays selected tracks  
- selects settings in Menu mode  
- programs track numbers
- 18 **STORE/MENU** ..... - enters Menu mode  
- stores Menu settings
- 19 **CANCEL/DELETE** ..... - deletes tracks from a program  
- deletes text in Menu mode  
- returns to a higher level in the menu
- 24 **IR sensor** .....receives signals from the remote control
- 25 .....socket for headphones
- 26 **DJ MODE** .....separate play of CD recorder deck and CD player deck
- 27 **REPEAT**.....repeats play (All, program or track)
- 28 **SCROLL**.....activates scrolling of text over the display (once)
- 29 **DISPLAY** .....selects display information, permanent text scrolling and time
- 30 **SHUFFLE**.....plays CD(RW) or program in random order
- 31 **PROG(ram)** .....opens/closes program memory


*Note: Unless stated otherwise, all controls are on the front of the CD recorder. When provided on the remote control, you can also use the corresponding buttons, after selecting the CD recorder deck or CD player deck by pressing CDR or CD.*

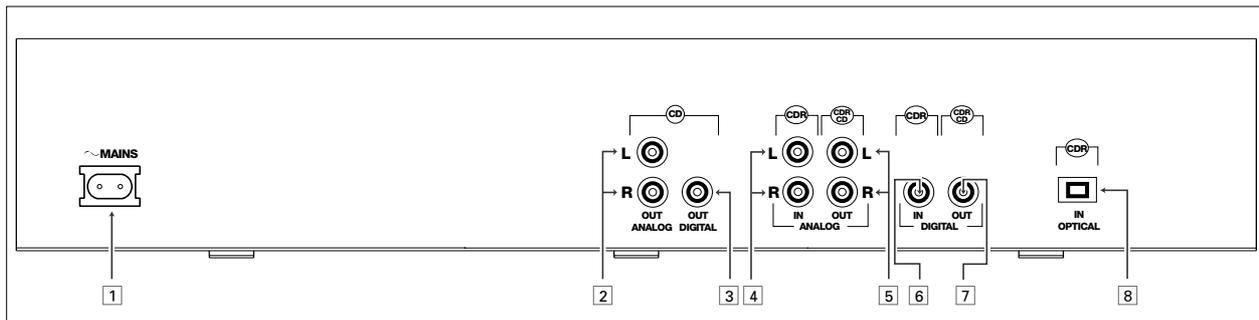

**Connections at the back**

- 1 Connection to power supply
- 2 **ANALOG OUT CD** .....connects CD player deck to the line input of an amplifier (left and right)
- 3 **DIGITAL OUT CD** .....connects CD player deck to the digital coaxial input of e.g. amplifier or recording device
- 4 **ANALOG IN** .....connects to the line output of an amplifier (left and right)
- 5 **ANALOG OUT CDR & CD** .....connects to the line input of an amplifier (left and right)
- 6 **DIGITAL IN** .....connects to the digital coaxial output of an external CD player
- 7 **DIGITAL OUT CDR & CD** .....connects to the digital coaxial input of e.g. amplifier or recording device
- 8 **OPTICAL IN** .....connects to the digital optical output of an external CD player

**DISPLAY indications**

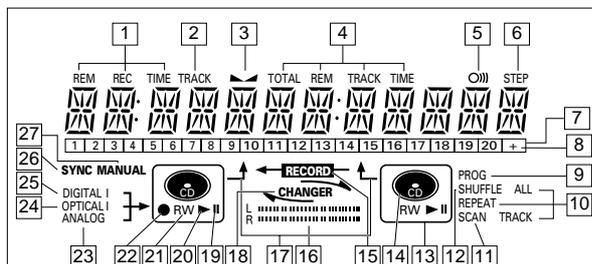

- 11 **SCAN** .....lights up when the first 10 seconds of each track are played.
- 12 **SHUFFLE**.....plays tracks in random order
- 13  ..... CD player deck selected
- 14  ..... CD inserted (a pre-recorded CD or finalised CDR or CDRW disc)
- 15 **← RECORD →** .....lights during recording from the internal CD
- 16 **L/R II II** .....record/play level bar. Indicates the audio signal level.
- 17 **↑ ↓** .....DJ mode selected
- 18 **↔ CHANGER ↔** .....changer mode selected
- 19 **II** .....pause function active
- 20 **▶** .....lights during play
- 21 **R(W)** .....unfinalised CDR(W) disc inserted
- 22  .....lights during recording
- 23 **ANALOG**.....- analogue input selected for external recording  
- analogue recording
- 24 **OPTICAL I** .....optical input I selected for external recording
- 25 **DIGITAL I** .....digital input I selected for external recording
- 26 **SYNC** .....automatic or synchronised start of external recording
- 27 **MANUAL** .....manual start of external recording
- 1 **REM/REC TIME** .....remaining time/remaining recording time/recording time
- 2 **TRACK** .....track number
- 3 **▲ ▼** .....balance (lights during balance adjustment)
- 4 **TOTAL REM TRACK TIME** .....total or remaining time of disc or track
- 5 **○)))**.....remote control active
- 6 **STEP** .....indicates the number of tracks in a program
- 7 **Track bar** .....indicates:  
- tracks on a disc or in a program  
- track in play
- 8 **+ 20** .....disc or program contains more than 20 tracks
- 9 **PROG(ram)** .....flashes during programming/lights in program mode
- 10 **REPEAT TRACK/ALL** ..lights up when a track/ complete disc (or program) is repeated.

# DISPLAY

## DISPLAY messages

Messages, as listed and explained here, may appear on the display for your guidance.

### General

|              |  |
|--------------|--|
| READING      | reading disc information                                       |
| OPEN         | during tray opening  |
| CLOSE        | during tray closing  |
| NO DISC      | no disc inserted, disc unreadable or disc inserted upside down |
| PROG FULL    | program full   |
| INSERT DISC  | insert disc or insert disc in correct way                      |
| WRONG DISC   | inserted disc is not an audio CD                               |
| UNFINALIZED  | unfinalised CDR(W) disc  |
| MEMORY xxP/○ | indicates the amount of text memory used for unfinalised discs |

### Recording

|              |   |
|--------------|---|
| WAIT         | - when STOP ■ is pressed during recording<br>- when STOP ■ is pressed during recording the first 4 seconds of a track |
| UPDATE       | updating disc contents  |
| DISC FULL    | no more recording possible  |
| DIGITAL 1    | digital coaxial input 1 selected  |
| OPTICAL      | digital optical input selected  |
| ANALOG       | analogue input selected   |
| COPY PROTECT | no digital recording can be made of the external source   |
| NOTFINALIZED | when opening the tray with an unfinalised disc inserted (CD recorder)   |
| RECORD FAST  | High Speed recording selected   |
| REC LISTEN   | Listen Speed recording selected   |
| MAKE CD      | High Speed Recording of a complete disc and Auto Finalise function selected   |
| REC EXT DISC | Synchronised start of recording from external source selected   |
| REC EXT MAN  | Manual start of recording from external source selected   |
| -xx DB       | level is being adjusted   |
| DOES NOT FIT | time left on CDR(W) disc is not enough for proposed recording   |
| ANALOG REC   | copy prohibited track found during recording. Track will be copied analogue (Copy Protection Regulations).            |
| ERASE TRACK  | when erasing one or more tracks   |
| ERASE DISC   | when erasing a disc   |
| FINALIZE CD  | when finalising a disc  |
| FINALIZED    | when trying to finalise an already finalised disc   |
| CHECK INPUT  | when RECORD is pressed while no digital source is detected  |
| xx xx ERASE  | time countdown when erasing a track or a disc   |

|              |  |
|--------------|--|
| xx xx FINAL  | time countdown when finalizing a disc  |
| PRESS RECORD | to start manual recording, finalizing or erasing   |
| START SOURCE | to start synchronised recording from a source (e.g. CD player)                             |
| FINALIZED CD | when trying to record on a finalised CDR or a prerecorded CD                               |
| UNFINALIZE/  | when trying to record on a finalised CDRW  |
| PRESS ENTER  | when a professional source is connected  |
| PROF SOURCE  | when a professional source is connected  |
| REC TEXT     | when reading CD text from source disc for recording  |
| TEXT PROTECT | when CD text of source disc is subjected to copy protection (CD text will not be recorded) |


### Play

|              |  |
|--------------|--|
| CHANGER MODE | CD changer-mode selected                                     |
| DJ-MODE      | DJ- mode selected when recording keys are pressed in DJ-mode |
| PROGRAM      | program mode selected  |
| ALBUM TITLE  | will be followed by album title                              |
| TRACK TITLE  | will be followed by track title                              |
| ALBUM ARTIST | will be followed by artist name                              |
| TRACK ARTIST | will be followed by track artist name                        |

### Others

|              |  |
|--------------|--|
| NO AUDIO TR  | when the recorder enters a data track during recording   |
| FINALIZE CD  | laser power calibration performed 96 times, finalise disc needed                                       |
| INITIALIZING | during laser power calibration for unfinalised discs   |
| DISC RECOVER | during disc recovering after power failure   |
| OPC ERROR    | OPC failure during OPC procedure (OPC = Optimum Power Calibration)                                     |
| RECORD ERROR | recording error in menu mode   |
| DISC ERROR   | when trying to record on or finalise a recovered disc  |
| MEMORY FULL/ | when text memory is full. To add a CD to the list, first finalise or erase another disc from the list. |
| FINALIZE CD  |  |
| NOT POSSIBLE | when trying to erase a CDR   |

**MENU messages - See Menu mode**

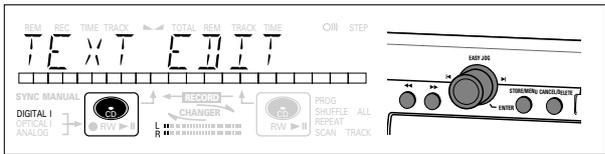

**Menu messages**

- NO TRACKS .....when attempting to edit text for a disc which has no tracks
- TEXT EDIT .....when entering Text Edit mode
- ALBUM ARTIST .....when editing or erasing an artist name
- ALBUM TITLE .....when editing or erasing a title
- ARTIST TR N.....when editing or erasing an artist name per track
- TITLE TR N.....when editing or erasing a title per track
- TEXT ERASE .....when entering Text Erase mode
- ALL TEXT .....when entering All Text mode
- ERASE OK .....when confirmation for erasing has to be given with ENTER key
- ERASE ALL OK .....when confirmation for erasing has to be given with ENTER key
- ERASE MEMORY .....when waiting for confirmation when erasing a disc
- MEMORY VIEW .....when selecting text review per unfinalised disc in memory
- MEMORY EMPTY .....when REVIEW is selected while no text is in memory
- AUTO TRACK .....when selecting auto track increment ON or OFF
- ON .....Auto Track increment on
- OFF .....Auto Track increment off
- SET BALANCE .....when selecting BALANCE
- NO TEXT .....no text stored for disc

**Connections general**

For playback on the CD recorder (and/or CD player deck) the following outputs are present:

- Digital coaxial output (CD & CDR);
- Analogue output (CD & CDR).

We advise you to connect these to the TAPE or CDR input on your amplifier.

For external recording the following inputs are present:

- Digital optical input;
- Digital coaxial input;
- Analogue input.

For playback of CD player deck separately (DJ mode) from the CD recorder the following outputs are present:

- Digital coaxial output (CD);
- Analogue output (CD).

We advise you to connect these to the CD input on your amplifier.

The connections you make will depend upon the possibilities your audio equipment offers. Please refer to the user manuals for your other audio equipment first.

*Digital recordings (optical or coaxial) give the best performance in audio and usability (e.g. auto-track).*

(The digital optical connection is less sensitive to external disturbances).

If your equipment does not offer digital connections, the high quality Analogue-Digital-Convertor of your CD recorder will ensure very good audio performance when recordings are made from the analogue input.

Playback via the digital coaxial output of the CD recorder gives the best audio performance.

If your equipment does not offer digital connections, the high quality Digital-Analogue-Convertor of the CD recorder ensures a very good sound quality via the analogue output.


We advise you to always establish both digital and analogue connections. In this way you can always make analogue recordings when digital recording is not possible.

We have described the most common ways of connecting the CD recorder. If you still have difficulties with the connections you can always contact the Philips Consumer Service desk in your country.

# INSTALLATION

## Analogue connections CD recorder & CD player

This connection must be made for playback on the CD recorder deck as well as the CD player deck (cable ②). Cable ① is only required if you want to make recordings from an external analogue source.

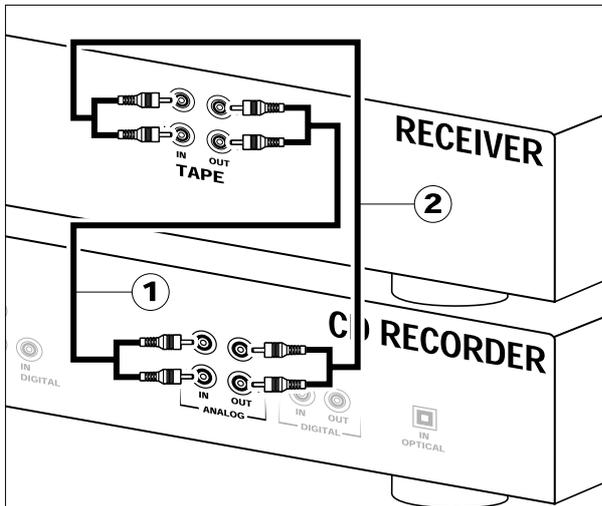

Use the audio cables supplied. Connect the red plugs to the R sockets, and the white plugs to the L sockets.

- 1 For recording, connect cable ① between the ANALOG IN-sockets on the CD recorder and the CDR LINE- or TAPE OUT-sockets of an amplifier.


*Note: For recording directly from a CD player, the analogue input of the CD recorder should be connected to the analogue output of the CD player.*

- 2 For playback, connect cable ② between the ANALOG OUT-sockets on the CD recorder and the input sockets of an amplifier e.g. TAPE IN, CDR or AUX.

*Note: Never use the PHONO input.*

## Analogue connections CD player deck

This connection is only required if you want to playback on the CD player deck separately from the CD recorder deck. This will be the case in DJ-mode.

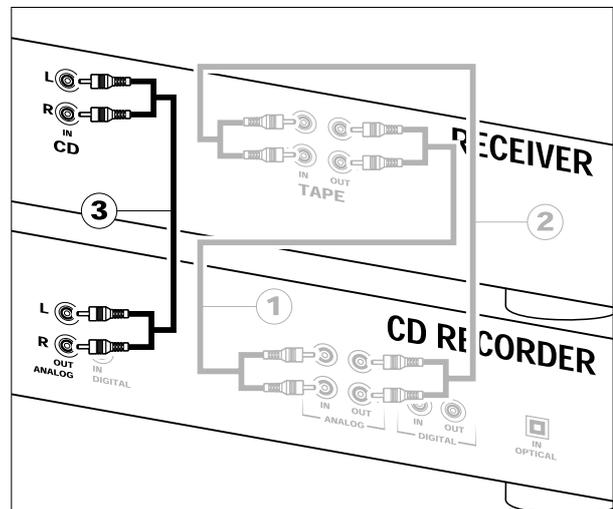


- 1 For separate playback on the CD player deck, connect a third cable ③ (not supplied) between the ANALOG OUT sockets of the CD recorder and the input sockets of an amplifier e.g. CD, or AUX. (Connect the red plugs to the R sockets, and the white plugs to the L socket.)

*Note:*

- Never use the PHONO input.
- Your CD recorder/player is equipped with a digital coaxial output for the CD player deck. This output can be used for digital playback.

## Digital coaxial connections CD recorder

This connection is only required if you want to make recordings from an external CD player with a digital coaxial output.

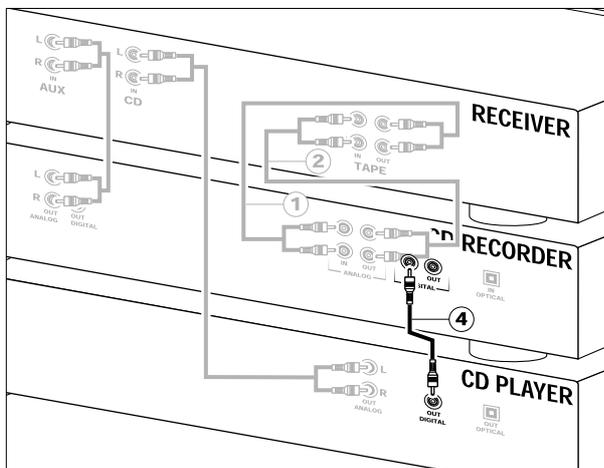



Use the digital coaxial cable supplied.

- 1 For external recording, connect the cable (4) between the DIGITAL IN-socket on the CD recorder and the DIGITAL OUT-socket of an external CD player.

*Note: Your CD recorder is equipped with a digital coaxial output (common output for CD recorder & CD player deck). This output can be used for digital playback.*

## Digital optical connections CD recorder

This connection is only required if you want to make recordings from an external CD player with a digital optical output.

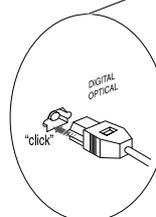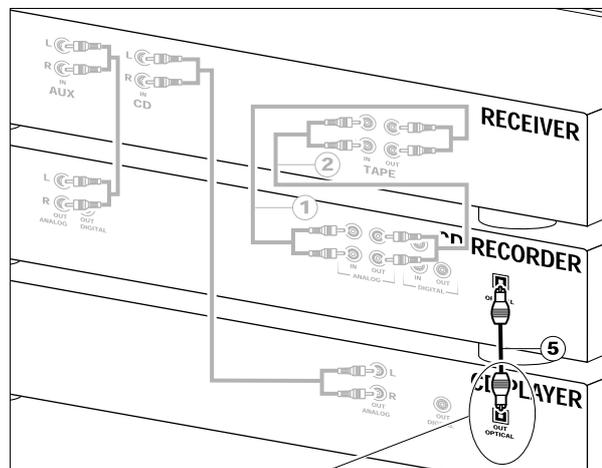


When connecting the Digital Optical cable, make sure it is fully inserted until there is a click.

- 1 Remove the dust caps from the digital optical connection. (We recommend you save the cap.)
- 2 For external recording, connect a fibre-optic cable (5) between the digital optical input of the CD recorder and the digital-optical output of an external CD player.

*Note: For playback, the digital coaxial outputs or analogue outputs of the CD Player and CD recorder should be connected to an amplifier*

# INSTALLATION

## Power supply

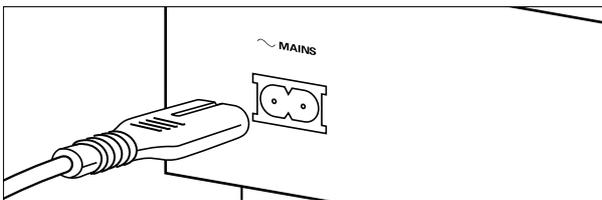

**1** Plug the power cord supplied into the MAINS connector on the CD recorder, then into a mains socket.

**2** Press POWER ON/OFF.

→ The CD recorder will be switched on.

### Note:

- If the CD recorder is in Standby mode (red led on), press any key to activate the recorder.
- The CD recorder will automatically adjust to the local mains voltage.
- When the CD recorder is in the 'OFF' position, it is still consuming some power. If you wish to disconnect your player completely from the mains, withdraw the plug from the AC outlet.


## Setup recommendations

- Place the CD recorder on a solid, vibration free surface.
- Do not place the CD recorder near a source of heat or in direct sunlight.
- Do not use the CD recorder under extremely damp conditions.
- If the CD recorder is placed in a cabinet, make sure that a 2.5 cm space remains free on all sides of the CD recorder/player for proper ventilation.

### Important:

- Do not put the CD recorder on top of other equipment that heats up the CD recorder (e.g. receiver or amplifier).

## Inserting batteries in the remote control

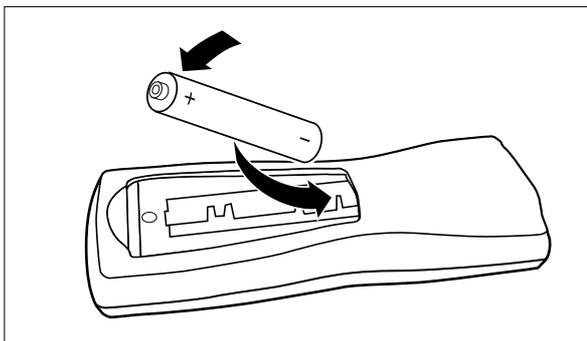

**1** Open the battery compartment cover.


**2** Insert 2 batteries ("AA", LR-6 or UM-3; as supplied) as shown.

**3** Replace the cover.

*Note: We recommend you use 2 batteries of the same type and condition.*


**Batteries contain chemical substances, so they should be disposed of properly.**

## Remote control commands

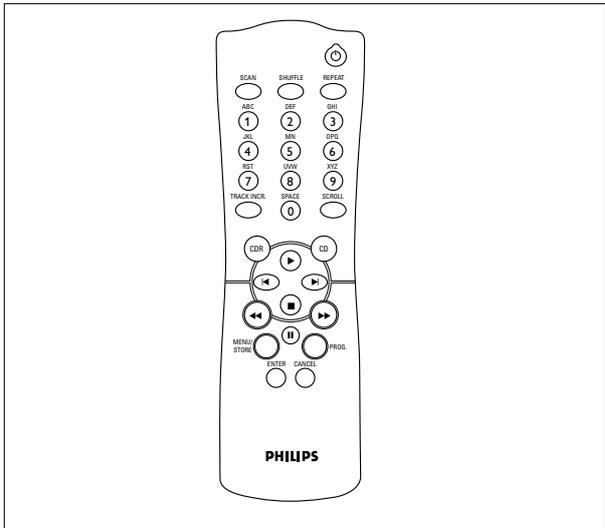


- STANDBY** ..... switches to Standby/On
- SCAN** ..... plays the first 10 seconds of each track
- SHUFFLE** ..... plays CD(RW) or program in random order
- REPEAT** ..... repeat play
- Number/alphabet keys 0 - 9** .....
  - selects a track by number
  - selects character for text input
- TRACK INCR(ement)** ..... increases track numbers during recording
- SPACE** ..... inserts a space character during text input
- SCROLL** ..... activates scrolling of text over the display
- CDR** ..... selects CD recorder deck
- CD** ..... selects CD player deck
- ▶** ..... starts CD(RW) play
- ◀** ..... - previous track (Play and Program mode)
  - cursor control in Menu/Prog. review mode
- ▶|** ..... - next track (Play and Program mode)
  - cursor control in Menu/Prog. review mode
- ..... stops CD(RW) and clears a program
- ◀◀** ..... searches backward
- ▶▶** ..... searches forward
- ||** ..... interrupts CD(RW) play/recording
- MENU/STORE** ..... - enters Menu mode
  - stores Menu settings
- PROG.(ram)** ..... opens/closes program memory
- ENTER** ..... - selects settings in Menu mode
  - programs track numbers
  - starts playback of selected track
- CANCEL** ..... - deletes tracks from a program
  - deletes text in Menu mode
  - returns to a higher level in the menu


## Inserting discs

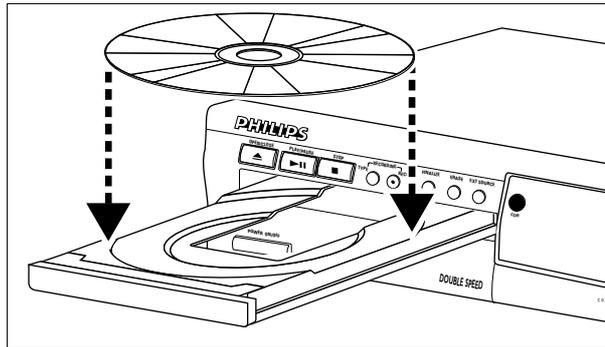


- 1** Press OPEN/CLOSE to open the disc tray.  
→ **OPEN** lights up.
- 2** Insert a CD, CDR or CDRW in the appropriate recess in the tray, label side up.
- 3** Press OPEN/CLOSE to close the tray (see also Playing a CD).  
→ **CLOSE** lights up, followed by **READING** and the display will show the type of disc you inserted.

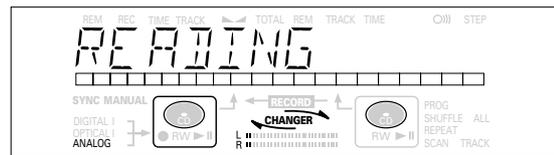

- If you insert a blank or partly-recorded CDR or unfinalised CDRW, the CD recorder will calibrate the disc for optimum recording. During this process the display will first show **INITIALIZING** and then the number of audio tracks. Calibration can take up to 25 seconds.

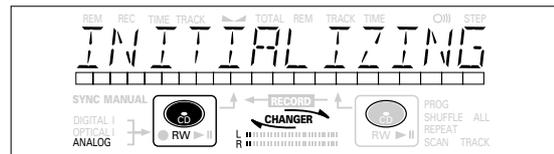

- If a CDR(W) is finalised it will show **CD** on the display.
- If CD-text is available the **TITLE/ARTIST** will scroll by.

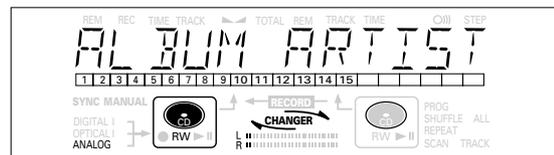

**Note:**

- Only Audio CDs will be accepted. If a non-audio disc is inserted, the display shows **WRONG DISC / USE AUDIO CD**.
- Reading an unfinalised disc in the CD recorder deck could take approximately 1 minute
- For recording it is important that the blank disc is completely free from dust particles or scratches. (see maintenance).

# RECORDING

## Remarks about recording

You will soon discover how easy it is to make your own CDs. Nevertheless, it is advisable to use a CDRW disc for your first try.

We will describe:

- Recording from internal CD player deck: high speed or listen mode.
- Recording from an external CD player deck: synchronised start with CD player or manual start. (analogue or digital)

- If the disc is a CDRW and is already finalised you must unfinalise it first.
- The recording procedure is the same for CDRs and CDRWs.
- If the disc already contains recordings, the CD recorder will automatically search for the end of the last track, so that recording can start from there.
- CD text can be added to a recording in Stop mode and during recording.
- CD text can not be recorded from an external CD player. (Text information is not available on the output of the CD player.)
- The CD recorder deck is able to record CD text from the internal CD player deck. (If not subjected to copy protection.) This may take up to 2 minutes.
- There must be at least 7 seconds of recording time left on the disc, otherwise you will not be able to enter record standby mode. *DOES NOT FIT* then lights up.
- If the display indicates *COPY PROTECT*, no digital recording can be made of the source material. Recording will not start.
- The **Serial Copy Management System (SCMS)** only allows digital recording under specific conditions:
  - This means that it is not possible to make a digital copy from a digital copy.
  - Analogue recording is always possible !
  - The number of recordings from the original is unlimited.
- A maximum of 99 tracks can be recorded on a disc. Minimum allowable track length is 4 seconds.
- Recordings from DAT or DCC players will not always stop automatically.

### Important:

**If you want to play the recorded CDR disc on any regular CD player, it must first be finalised. See finalising discs.**

**Finalised CDRW discs play only on CDRW compatible CD players.**

**For recording from CD changers always use *REC EXT DISC*.**


## Recording modes

Your recorder offers several recording modes.

### For recording from internal CD-deck:

- *RECORD FAST* (high speed digital recording) - fast recording of a disc or programmed tracks.
- *REC LISTEN* (normal speed digital recording) - listening to a recording while making it.
- *MAKE CD* (high speed digital recording and auto-finalise) - fast recording of a disc or programmed tracks. Recording will be finalised automatically.

**Warning:** *No more recording possible after finalising CDR disc!*

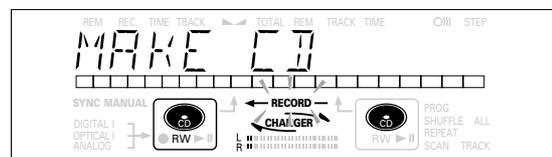

### For recording from external sources:


- *REC EXT DISC* (automatic start of recording) - to make an automatic recording of an external source simply by starting the source.
- *REC EXT MAN* (manual start of recording) - to start a manual recording from an external source.

### Some remarks on recording:

- During high speed recording, the original recording quality will be maintained.
- When Auto track is on (default setting), track numbers will automatically be increased during recording.
- By programming tracks first, a compilation can be recorded.
- If a finalised CD recordable disc is inserted in the CD recorder, *FINALIZE CD* will be displayed when RECORDING-TYPE is pressed. Recording is not possible.
- If a finalised CD rewritable disc is inserted in the CD recorder, *UNFINALIZE* and *PRESS ENTER* will be displayed when the RECORDING-TYPE is pressed. If ENTER is pressed, the disc will be unfinalised.

*Note: If during recording *ANALOG REC* appears, the track will be recorded as analogue, at normal speed. All other tracks will be copied normally (at double speed).*

## High speed recording from internal CD player

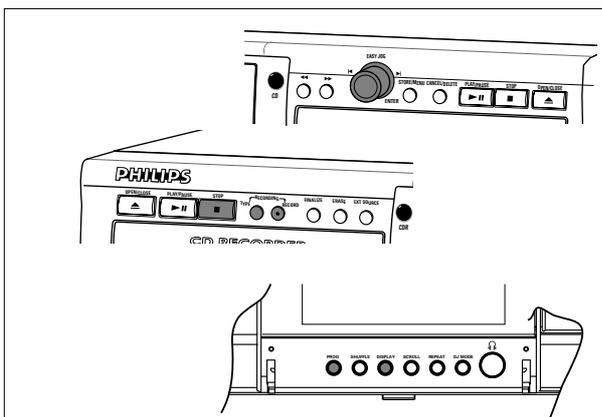




During high speed recording the sound is not audible.

### Preparing for high speed recording

- 1 Make sure that the recording disc is absolutely free of scratches and dust particles.
- 2 Press RECORDING-TYPE to choose the type of recording:

*once*: to select 'RECORD FAST' if you wish to make a fast recording of a disc or programmed tracks;  
*three times*: to select 'MAKE CD' if you wish to make a fast recording of a disc or programmed tracks and to automatically finalise the recording.

→ The display first shows the selection. The ← **RECORD** — label starts blinking. After 3 seconds the display shows the remaining CDR(W) recording time on the left and total time of source on the right. (every 2 seconds *PRESS RECORD* is displayed.) The left selection indicator is lit.

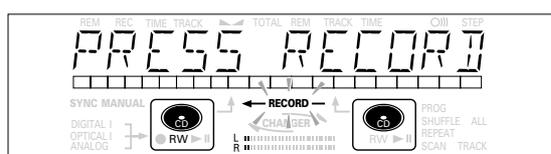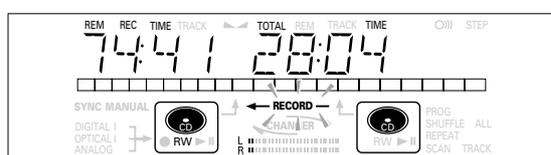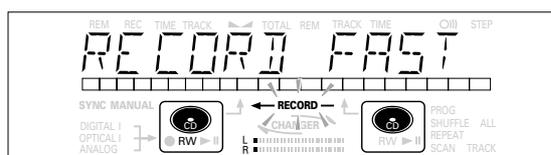

- If *DOES NOT FIT* appears on the display, there is not enough recording space left on the CDR(W) disc. You can press RECORDING-RECORD: only complete tracks that still fit on the CDR(W) will be recorded.

or

You can press PROG to select one or more tracks for recording (see programming):

- rotate the EASY JOG/ENTER key to the required track number, then press the key (or ENTER on the remote control)
- or
- directly select the track number via the 10-keypad on the remote control then press the ENTER key to confirm your selection and go to the next step.

### Start high speed recording

- 1 Press RECORDING-RECORD to start recording. → *WAIT* lights up. The display shows the total remaining time for the selected recording. High speed recording starts. ← **RECORD** — lights continuously.

- To check the track number and track time, press DISPLAY. This can be done during recording.

- Recording will stop automatically.

*Note: Copy prohibited tracks will be copied analogue. ANALOG REC is displayed.*

- 2 To stop recording manually, press STOP. → *UPDATE* lights up, ← **RECORD** — goes out and recording stops. (Minimal track length must be 4 seconds otherwise silence will be added to the track.)

- If STOP was pressed within 3 seconds after RECORDING-RECORD, no recording will take place.

After recording, the display shows *UPDATE* for several seconds. The Total time indications can differ slightly. However, no music information is lost.


*Note: In this Recording mode, the Pause function is not operative.*

**Important:**  
**If you want to play the recorded CDR disc on any regular CD player, it must first be finalised. See finalising discs.**

**Finalised CDRW discs play only on CDRW compatible CD players.**

# RECORDING




## Listen mode recording from internal CD player

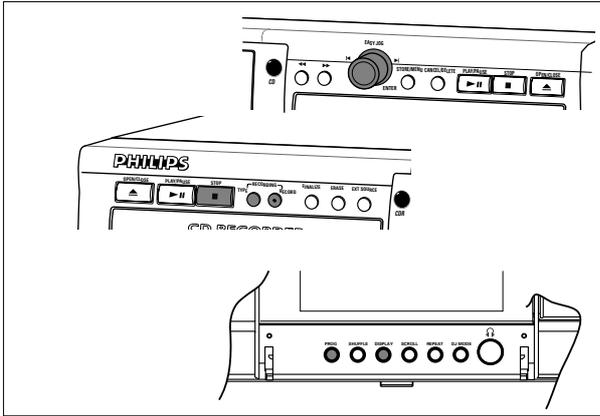

During Listen mode recording you listen to the recording while you are making it.

### Preparing for Listen mode recording

- 1 Make sure that the recording disc is absolutely free of scratches and dust particles.
- 2 For recording, press RECORDING-TYPE twice:
  - the display first shows the selection.
  - the ← **RECORD** — label starts blinking. After 3 seconds the display shows the remaining CDR(W) recording time on the left and total time of source on the right. (every 2 seconds *PRESS RECORD* is displayed) The left selection indicator is lit.

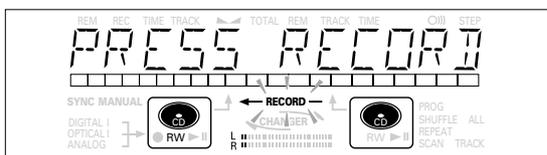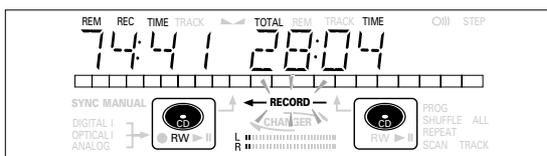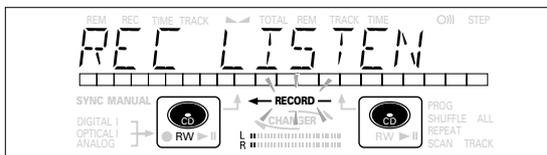

- If *DOES NOT FIT* appears on the display, there is not enough recording space left on the CDR(W) disc. You can press RECORDING-RECORD: only complete tracks that still fit on the CDR(W) will be recorded.

or

You can press PROG to select one or more tracks for recording (see programming):

- rotate the EASY JOG/ENTER key to the required track number, then press the key (or ENTER on the remote control)

or

- directly select the track number via the 10-keypad on the remote control then press the ENTER key to confirm your selection and go to the next step.

- 3 Play the source first to set the optimal recording level on the CD recorder.
- 4 Rotate the EASY JOG/ENTER key until, on the Record/Play Level bar, all the blue segments are alight, but the red segments do not light continuously during the loudest passages.
  - Display shows  $-XX \text{ dB}$  (Decibel, e.g.  $-30 \text{ dB}$ ).
- 5 Stop the source.

### Start Listen mode recording

- 1 To start recording, press RECORDING-RECORD.
  - *WAIT* lights up. ← **RECORD** — lights continuously and the selected track or program is copied at normal speed. The track number and the recording time left will appear.

- To check the track time, press DISPLAY. This can be done during recording.

- Recording will stop automatically.

*Note: Copy prohibited tracks will be copied analogue. ANALOG REC is displayed.*

- 2 To stop recording, press STOP.
  - *UPDATE* lights up, ← **RECORD** — goes out and recording stops. (Minimal track length must be 4 seconds otherwise silence will be added to the track.)

- If STOP was pressed within 3 seconds after RECORDING-RECORD, no recording will take place.

After recording, the display shows *UPDATE* for several seconds. The Total time indications can differ slightly. However, no music information is lost.


*Note: In this Recording mode, the Pause function is not operative.*

### Important:

**If you want to play the recorded CDR disc on any regular CD player, it must first be finalised. See finalising discs.**

**Finalised CDRW discs play only on CDRW compatible CD players.**

## Manual recording from external CD player

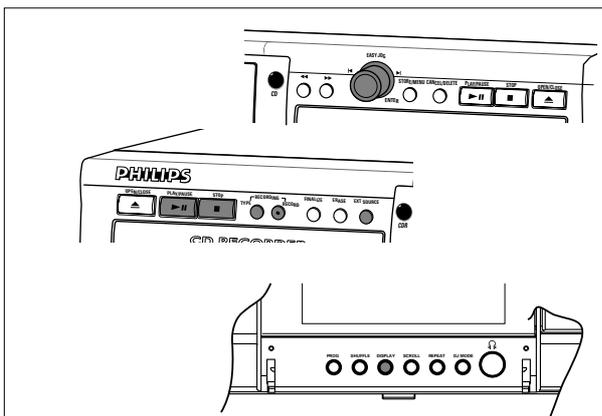


### Important:

- Recording from CD-changers should always be started in the Auto-Start mode.
- Only make analogue recordings when digital recording is not possible.

### Preparing for manual recording

- 1 Make sure the disc is absolutely free of scratches and dust particles.
- 2 Press EXT(ernal) SOURCE repeatedly until (depending on the connection used):
  - DIGITAL I, OPTICAL I or ANALOG lights up and DIGITAL 1, OPTICAL or ANALOG appears on the display.

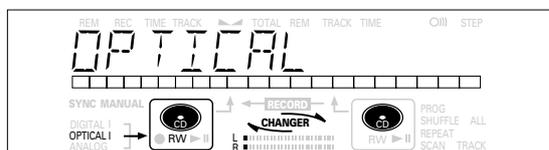

- When Auto Track is On (default setting), track numbers will automatically be increased during recording.
- To switch off the Auto Track function you have to enter Menu mode. If you wish to increase track numbers manually, press TRACK INCR(ement) on the remote control. For further instructions see Menu mode.

ON (AUTO): The track increments are automatically taken over from the digital source material or after 2.7 seconds silence during analogue recording.


OFF (MANUAL): While recording track numbers can be incremented manually by pressing TRACK INCR(ement) on the remote control. (Minimum track length is 4 sec.) (This can also be done in Auto track ON mode.)

- Track numbers cannot be changed after recording.

Note: Auto track works only with Consumer Sources with a digital output signal according to the IEC 958 (consumer part) audio standard.

- 3 With the recorder stopped, press RECORDING-TYPE five times to enter the Manual Record standby mode.

→ **MANUAL** starts to flash and the display shows **REC EXT MAN** followed by **WAIT**. After a few seconds **PRESS RECORD** followed by the remaining time and track number appear on the display.

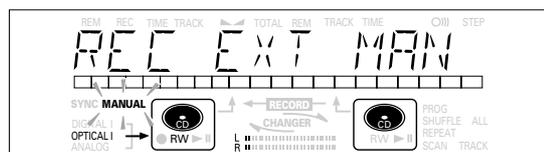

- 4 Play the source first to set the optimal recording level on the CD recorder.
- 5 Rotate the EASY JOG/ENTER key until, on the Record/Play Level bar, all the blue segments are alight, but the red segments do not light continuously during the loudest passages.
  - Display shows **-xx dB** (Decibel, e.g. **-30dB**).
- 6 Stop the source.

### Start manual recording

- 1 To start recording, press RECORDING-RECORD on the CD recorder and immediately start the source (from Pause or Stop-mode).
  - **RECORD** lights continuously. The track number and recording time left appear on the display.
- If **CHECK INPUT** message also flashes, the digital connection is incorrect.
- To record a 3-second silence at the start of a track, press PAUSE on the CD recorder before starting the source.
- To check the total remaining recording time, press DISPLAY on the CD recorder. (This can also be done during the recording.)
- 2 To stop recording, press STOP on the CD recorder.
  - **UPDATE** lights up and **RECORD** goes out.
- If STOP was pressed within 3 seconds after RECORDING-RECORD, no recording will take place.
- To interrupt recording, press PAUSE on the CD recorder.
  - **RECORD** starts to flash. Press PAUSE again to restart recording. (A new track will always be made.)

After recording the display will show **UPDATE** for several seconds.

Note: With **AUTO TRACK ON**, the recorder will stop and go to **REC STANDBY** for 1 minute and then goes to Stop mode automatically. Recordings from **DAT, DCC** or recordings made analogously will stop after 20 seconds silence. With **AUTO TRACK OFF**, the auto stop mode is disabled.


### Important:

If you want to play the recorded CDR disc on any regular CD player, it must first be finalised. See finalising discs.

Finalised CDRW discs play only on CDRW compatible CD players.

# RECORDING


## Autostart recording from external CD player CD-SYNC

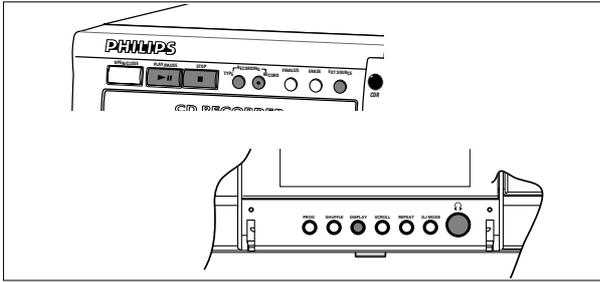

The CD-SYNC feature enables you to make fast and easy recordings of a CD. Track increments are automatically detected from the source material. Track increments cannot be added manually. In analogue source material a silence of 2.7 seconds or more is automatically detected as a track increment.

### Preparing for autostart recording


- 1 Make sure the disc is absolutely free of scratches and dust particles.
- 2 Press EXT(ernal) SOURCE repeatedly until (depending on the digital connection used):  
→ DIGITAL I, OPTICAL I or ANALOG lights up and DIGITAL 1, OPTICAL 1 or ANALOG appears on the display.

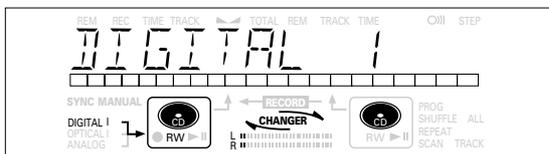

- 3 With the CD recorder stopped, press RECORDING-TYPE four times:

if you wish to record a complete disc or program.

- **REC** and **EXT** start to flash and the display shows **REC EXT DISC** and **WAIT** followed by the track number, the total remaining time and **START SOURCE**.

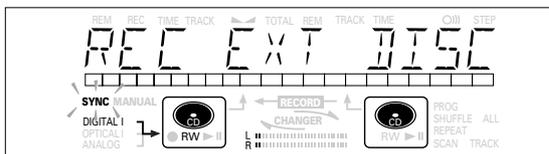

- If input label (DIGITAL I) flashes, the digital connection is incorrect.

### Start autostart recording

- 1 To start recording, press PLAY on the selected source.  
→ The CD recorder automatically starts to record and **REC** lights continuously. The track number and track time appear on the display.

- If, however, you start the source during a track, CD-SYNC recording starts at the beginning of the next track or after 2.7 seconds of silence in analogue recordings.
  - To check the remaining recording time on the CDR(W), press DISPLAY. (This can also be done during recording)
  - The EASY JOG/ENTER key can be used to adjust the recording level.
  - The recorder stops automatically.
- 2 To stop recording manually, press STOP on the CD recorder.  
→ **UPDATE** lights up and **SYNC** and **REC** go out.
- If STOP ■ was pressed within 3 seconds after pressing PLAY, no recording will take place.
  - To interrupt recording, press PAUSE on the CD recorder.  
→ **REC** starts to flash. (Autostart recording is disabled.) To resume, press RECORDING-RECORD on the CD recorder.

After recording the display will show **UPDATE** for several seconds.

#### Note:

- Recordings from DAT, DCC or analogue sources will only stop after 20 seconds silence.
- Auto track is always active.

#### Important:

**If you want to play the recorded CDR disc on any regular CD player, it must first be finalised. See finalising discs.**

**Finalised CDRW discs play only on CDRW compatible CD players.**

**For recording from CD changers always use **REC EXT DISC**.**

## Finalising CDR & CDRW discs

During finalising the Table of Contents (TOC) is written to the disc.

Finalising is a simple procedure, necessary to:

- be able to play recordings on a CD PLAYER,
- avoid further unwanted recordings on a disc,
- avoid erasure of tracks on a CDRW,
- write CD text on a CDR(W).

### Auto finalising



Auto finalising is possible when using the MAKE CD recording function.

### Manual finalising

1 Make sure the disc (in the CD recorder deck) is absolutely free of scratches and dust particles.

2 With the recorder stopped press FINALIZE.

→ The display shows **FINALIZE CD** and **PRESS RECORD**.

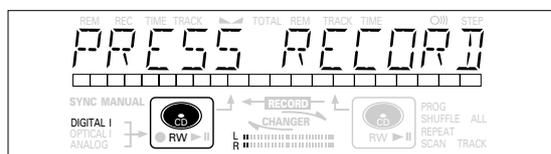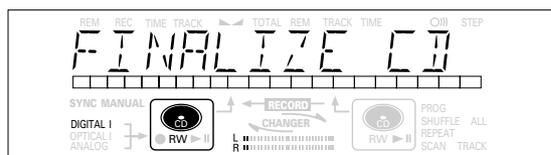

3 Press RECORDING-RECORD.

→ xx xx FINAL and the approximate finalization time appears on the display.

The display counts down through the finalization.

On completion, the total number of tracks and the total time recorded appears on the display.

For CDR(W),  changes to  on display.

Finalising will take at least 2 - 4 minutes.

Note:

- During finalization, the CD recorder accepts no operating commands.
- When a CDR is finalised no more recordings can be added.

## Unfinalising CDRW discs



**For CDRW discs only.**

If you want to make more recordings (or erasure of tracks) on a finalised disc you must unfinalise it first. The Table of Contents (TOC) will be removed. (This is not possible for CDR discs.)

To unfinalise:


1 With the CD recorder stopped, press RECORDING-TYPE or ERASE.

→ UNFINALIZE and PRESS ENTER will appear on the display.

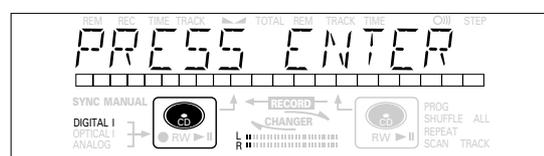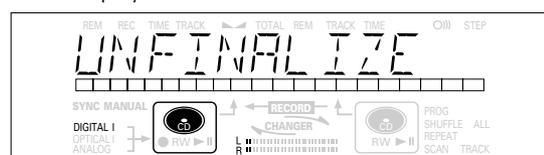

2 Press JOG (ENTER).

→ The disc will now be unfinalised and can be recorded on again and the Recording or Erasure mode is entered.

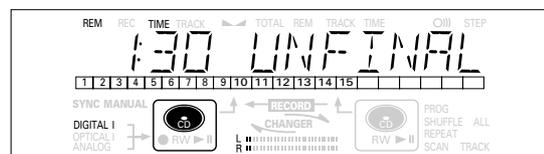


3 You can now start recording or erasing. If no further recording or erasure is required press STOP ■.

Note:

- Unfinalising will take approximately 1 minute 30 seconds.
- When unfinalising a CDRW disc with text on it available, this text will be transferred to the CD recorder memory. It may occur that the text memory is full. The message MEMORY FULL/FINALIZE CD will be displayed. To empty the recorders text memory you have to erase text from it. This can be done in two ways:
  - 1) Finalise one or more unfinalised discs for which CD text is available.
  - 2) Delete text of unfinalised discs with the 'memory view' option in the Menu mode.

# RECORDING


## Erasing CDRW discs

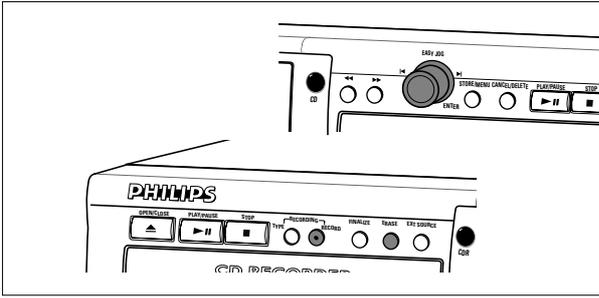

For unfinalised CDRW discs only.

You can erase:

 - Tracks can only be erased from the end.



- With the EASY JOG you can erase more tracks.



*Note: It is not possible to erase tracks within the sequence.*

- It is also possible to erase the entire disc at once.

### To erase one or more tracks from the end:

- 1 Press ERASE once.



→ The display shows the number of tracks and their total playing time. *ERASE TRACK* and *PRESS RECORD* lights up.

- If the disc is finalised, **CD** appears on the display after inserting a CDRW in the recorder. The recorder will ask you to confirm unfinalising first. Confirm by pressing the EASY JOG/ENTER key or ENTER on the remote control.

- 2 Select the track(s) you wish to erase by turning the EASY JOG/ENTER key to the left.

→ The selected track numbers start blinking on the track bar.

→ The display shows the remaining time after erasing the selected track(s), the shown track will also be included in the erasure of tracks.

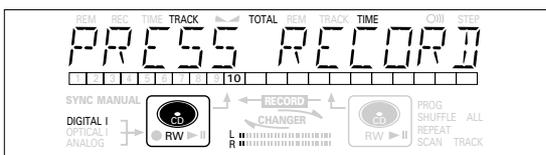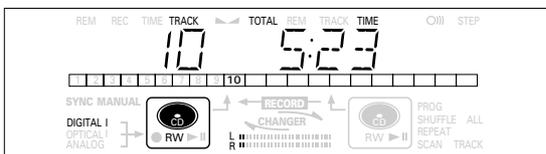

- 3 Press RECORDING-RECORD.

→ The display shows the total countdown time and *ERASE*.



→ After the selected track(s) have erased, the display shows the remaining tracks and their total playing time.

### To erase the entire disc:

- 1 Press ERASE twice.


→ The display shows the number of tracks and their total playing time. *ERASE DISC* and *PRESS RECORD* light up.

- If the disc is finalised, **CD** appears on the display after inserting a CDRW in the recorder. The recorder will ask you to confirm unfinalising first. Confirm by pressing the EASY JOG/ENTER key or ENTER on the remote control.

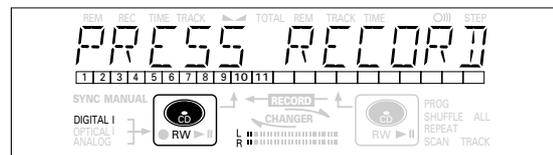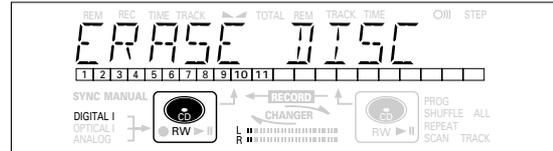

- 2 Press RECORDING-RECORD.

→ The display shows the total countdown time and *ERASE*. The complete disc will be erased.

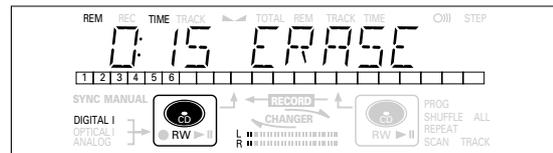


Erasure of a complete disc may take up to 15 seconds.

### Play a 2-disc changer (Changer mode)

Your CD recorder is able to play the two decks sequentially (CHANGER mode). This is the default setting.

1 Select Changer mode using the DJ MODE key.

→ CHANGER appears on the display and  
 lights up.

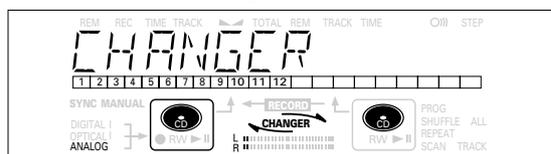

2 On the deck you want to play, press PLAY/PAUSE ► || to start CD play.

→ ► lights up, the track number and track time of the track in play appear on the display.

→ After playing the first disc the second disc will automatically be played.

• Press DISPLAY once, twice or three times to see:

→ Remaining track time, total remaining time, permanent text information (see Menu mode).

• To interrupt play temporarily, press PLAY/PAUSE ► || again.


→ || lights on the display.

• To continue play, press PLAY/PAUSE ► || again.

3 To stop play, press STOP ■.

→ The number of tracks and the total playing time appear on the display.

• If you want to see the information about the other deck, press the CDR key or the CD key in the display frame.

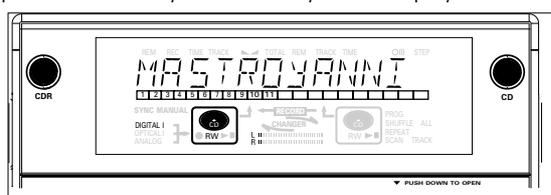


### Playing CDs on Deck 1 and/or Deck 2 (DJ mode)

With this double deck it is possible to play the CD recorder deck and/or the CD player deck individually (at the same time). In this case the extra CD output must also be connected to an amplifier.

1 Select DJ mode using the DJ MODE key.

→ DJ MODE appears on the display and  lights up.

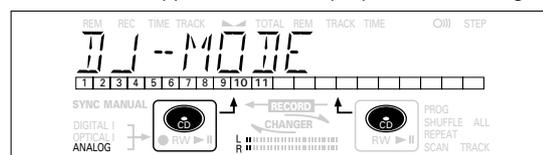

2 On the deck you want to play, press PLAY/PAUSE ► || to start CD play.

→ ► lights up and the track number and track time of the track in play appear on the display.

• You can also play the two decks at the same time. By pressing the CDR key or the CD key you can choose the deck you want to listen to.

• Press DISPLAY once, twice or three times to see:

→ Remaining track time, total remaining time, permanent text information (see Menu mode).

• To interrupt play temporarily, press PLAY/PAUSE ► || again.

→ || lights on the display.


• To continue play, press PLAY/PAUSE ► || again.

3 To stop play, press STOP ■.

→ The number of tracks and the total playing time appear on the display. If you want to see this information about the other deck, press CDR or CD.

# PLAYING

## Selecting a track

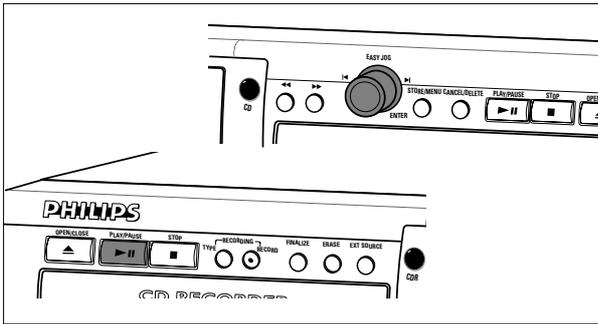


### Selecting a track during play

- Turn the EASY JOG/ENTER key until the required track number appears on the display.
  - Play skips to the beginning of the selected track.
- or  
Select CDR or CD on the remote control and key in the required track number using the numerical keys on the remote control. For 2-digit track numbers, press the keys in rapid succession. For tracks on the other disc, first press CD or CDR as applicable.
  - Play skips to the beginning of the selected track.
- or  
Press ◀ or ▶ on the remote control one or more times.
  - Play skips to the beginning of the present, previous or subsequent tracks, including tracks on the disc in the other deck. (Changer mode only.)

### Selecting a track when CD play is stopped

- Turn the EASY JOG/ENTER key until the required track number appears on the display.
- Press EASY JOG/ENTER or ENTER on the remote control to confirm or press PLAY/PAUSE ▶ II to start playing.
  - or
  - 1 Select CDR or CD on the remote control and key in the required track number using the numerical keys. For 2-digit track numbers, press the keys in rapid succession. Play starts.
  - or
  - 1 Briefly press ◀ or ▶ one or more times.
- Start playback by pressing PLAY/PAUSE ▶ II, EASY JOG/ENTER or ENTER on the remote control.

## Search

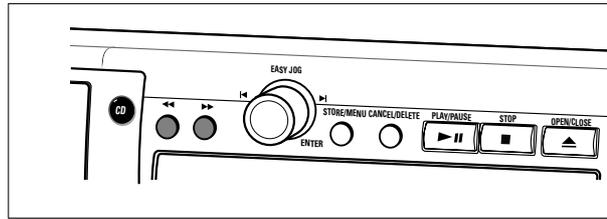

- Hold down ◀◀ or ▶▶ (in play mode).
  - The player first searches backwards or forwards at 10 times normal speed with sound at low volume, then goes to 50 times normal speed with sound muted.
- Release the button at the desired passage.
  - Play starts at the desired passage.

*Note: During Shuffle, Repeat Track or Programmed play, search is restricted to within the track being played at the time.*

## Shuffle (random order) play


Only in Changer mode

- Select Changer mode, if necessary, using the DJ MODE key.
- Press SHUFFLE before or during CD play to start shuffle play.
  - The tracks on the CD (or program if set) play in random order.
- Press SHUFFLE again to disable the Shuffle mode.
  - CD recorder goes to Stop mode.

*Note: Shuffle is also cleared if you open the disc tray.*

## Repeat CD, track or program

- Press REPEAT one or more times during CD play.
  - When **REPEAT TRACK** lights up, the current track plays repeatedly. When **REPEAT ALL** lights up, the disc or program plays repeatedly.

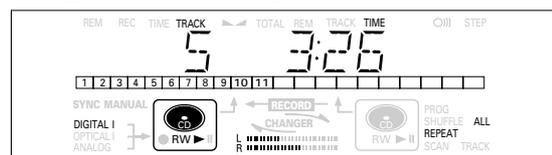

- To return to normal play, press REPEAT one or more times until:
  - **REPEAT** label disappears from the display.

*Note:*



- You can use shuffle in combination with **REPEAT ALL** or programmed play of the 2-disc changer.
- **REPEAT** is also cleared if you open the disc tray.

## Remarks about programming


- You can program up to 99 tracks to play in any desired sequence.
- Tracks can be programmed more than once, but each time counts as a track. **(STEP)**
- A program for playback can be made from both the disc in the recorder deck and the disc in the player deck. A program for recording can only be made from the disc in the player deck.

## Programming for playback

- 1 Select Changer mode or DJ mode using the DJ MODE key.  
→ **CHANGER** or **DJ MODE** appears on the display.
- 2 Press CDR or CD to select the required deck.  
→ Selected key lights up.
- 3 Press PROG(ram) to enter Program mode.  
→ **PROG** flashes and **PROGRAM** followed by track information appears on the display.

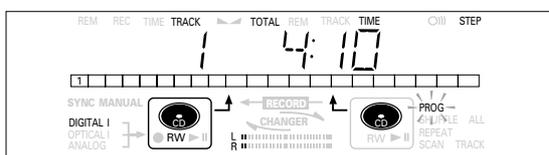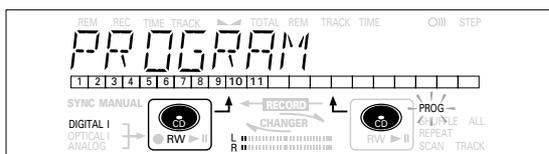

- 4 Select the required track numbers by turning the EASY JOG/ENTER key left or right and store by pressing ENTER.

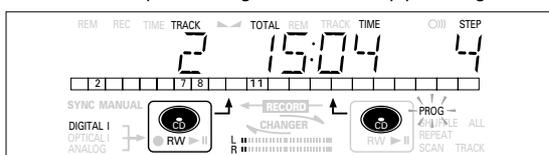

or:

Key in a track number with the number keys on the remote control and press ENTER to confirm. For 2-digit numbers, press the keys in rapid succession.

- The track will be stored in the program.
- The track number, total program time and the number of programmed tracks (**STEPS**) are displayed.

- 5 Repeat step 4 for all tracks to be programmed.
- 6 Press STOP or PROG(ram) to end programming.  
→ **PROG** lights continuously.
- 7 Press PLAY/PAUSE ►|| to start programmed play.

## Programming for recording

- 1 Press RECORDING-TYPE to select the required recording mode (see 'Recording').
- 2 Compile your programme as described in "programming for playback". (steps 3 to 5)
  - Only tracks from the disc in the CD player can be stored.
- 3 Press RECORDING-RECORD to start recording.

Note:

- To review the program, press PROG(ram), followed by ◀◀ or ▶▶ with the CD player or CD recorder in stop mode.
- To add more tracks to the program, repeat steps 1 to 7.
- If you try to store more than 99 tracks, **PROG FULL** appears on the display.

## Clearing a program

- 1 Press STOP ■ if necessary to stop programmed play.
- 2 Press STOP ■ again to clear the program.  
→ **PROG** disappears from the display.

- The program is also cleared if you open the disc tray.

## Erasing a track from a program

- 1 In Stop mode press PROG(ram) to enter Program mode.
- 2 Use ◀◀ or ▶▶ to select the track that has to be deleted.  
→ The track number and program step will be shown on the display.
- 3 Press CANCEL/DELETE to erase the track from the program.  
→ The remaining program steps and the remaining playing time of the program will be displayed.
- 4 Repeat step 2 and 3 for all tracks to be erased.
- 5 Press STOP ■ or PROG(ram) to end erasing.  
→ **PROG** lights continuously.

# MENU MODE

## Remarks about Menu mode


- In Menu mode you will have access to a number of features which are not available via the regular keys (on the deck's front and the remote control).
- The TEXT submenus (A-B) allow you to give names to discs and tracks. The disc and track names will be displayed during playback.
- In the RECORDING submenus (D-E) you can set Auto Track and Balance.
- All settings (except Balance) made in Menu mode will be stored in the deck's memory and can be called up and changed at any time.

## General operation of Menu


Menu active in Recording or Stop mode.

- 1 When using the remote control select first CDR.
- 2 Press STORE/MENU on the deck or the remote control to enter Menu mode.  
→ *TEXT EDIT* appears on the display.
- 3 Rotate EASY JOG/ENTER to select the required submenus.
- 4 Press EASY JOG/ENTER to confirm selections.
- 5 Rotate EASY JOG/ENTER to select options in the submenus.
- 6 Press EASY JOG/ENTER to confirm selections.
- 7 Press STORE/MENU to store settings and return to the submenu.
- 8 Press STOP ■ to store settings and exit Menu mode.

*Note: Text can only be edited for unfinalised discs. (Finalised CDRW discs must be unfinalised first.)*

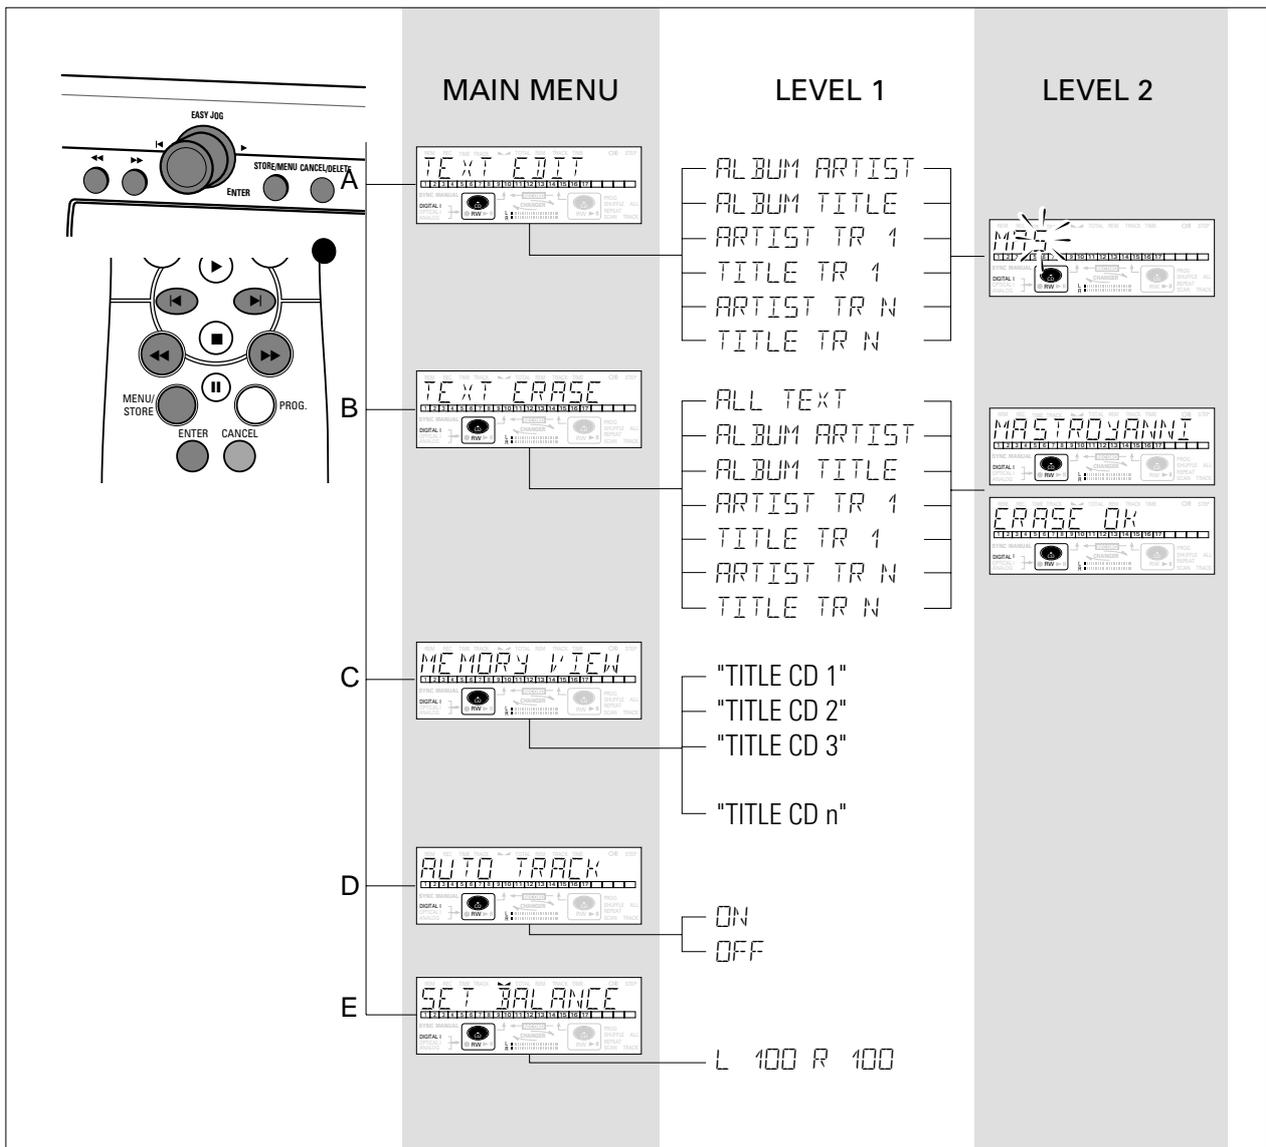


## A. Text input / text edit

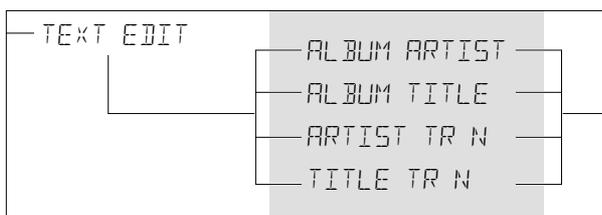

CD Text can be added to a recording or changed. This can be done in Stop mode or during recording.

Text will be stored in the recorder memory and can be edited until the CDR is finalised. Text on a (unfinalised) CDRW can be edited at any time.

- 1 Press STORE/MENU.  
→ *TEXT EDIT* appears on the display.
- 2 Press EASY JOG/ENTER to confirm.  
→ *ALBUM ARTIST* appears on the display.
- 3 Rotate EASY JOG/ENTER to select the required option in the submenu: *ALBUM ARTIST*, *ALBUM TITLE*, *ARTIST TR 1*, *TITLE TR 1*, etc.
- 4 Press EASY JOG/ENTER to confirm.  
→ The first character space appears on the display.
- 5 Select the characters by rotating the EASY JOG/ENTER key or by pressing the corresponding numeric/alphabet key on the remote control.
- 6 Press EASY JOG/ENTER to store each character and move to the next cursor position.
  - With the ◀▶ keys you can move to a required cursor position.
  - With the CANCEL key you can delete a character.

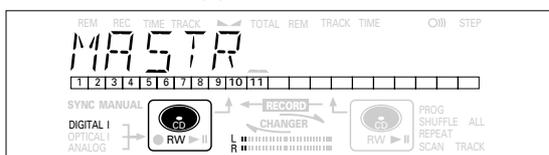


- 7 Press STORE/MENU to store a name you have entered and return to the submenu resume at 3 or STOP ■ to exit.

**Note:**

- A maximum of 60 characters can be stored per item.
- By pressing the EASY JOG/ENTER key or ENTER on the remote control without selecting a character first, you can insert a space between characters.
- When an artist's name has been stored for a certain track, the name will automatically be copied for the next track. The name can be confirmed by pressing STORE/MENU or a new name can be entered as described above.


## B. Erasing text / text erase

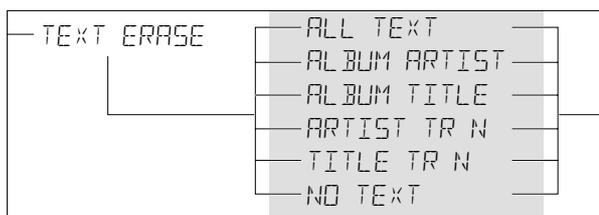

- 1 Press STORE/MENU.  
→ *TEXT ERASE* appears on the display.
- 2 Rotate the EASY JOG/ENTER key to select the TEXT ERASE submenu.  
→ *TEXT ERASE* appears on the display.
- 3 Press EASY JOG/ENTER to confirm.  
→ If text is available *ALL TEXT* appears on the display. (When there is no text available the message *NO TEXT* appears on the display.)
- 4 Rotate EASY JOG/ENTER to select the required option in the submenu: *ALL TEXT*, *ALBUM ARTIST*, *ALBUM TITLE*, *ARTIST TR 1*, *TITLE TR 1*, etc.
- 5 Press EASY JOG/ENTER to confirm.  
→ The display will ask you to reconfirm your selection. *ERASE OK* appears on the display.
- 6 Press EASY JOG/ENTER to reconfirm.  
→ *UPDATE* appears on the display.
- 7 Press STORE/MENU to return to the submenu or STOP ■ to exit.

# MENU MODE

## C. Reviewing CD Text in memory / memory view

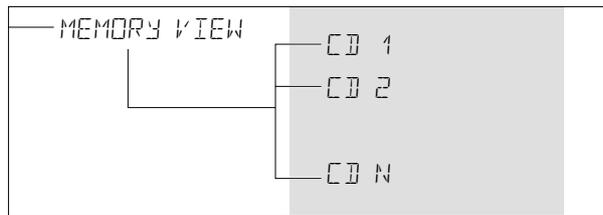


CD Text is stored in the recorders memory. When a CDR(W) will be finalised the CD Text will be written on the disc and removed from the recorders memory. With the MEMORY VIEW function one can view/delete the CD Text in the recorders memory per unfinalised disc. The amount of memory used is displayed each time the tray opens with an unfinalised CDR(W) inserted.  
(e.g. MEMORY 90/0)


### Note:

- If there are no discs in the memory, the message *MEMORY EMPTY* appears on the display.
- When the text memory of your CD recorder is full, the message *MEMORY FULL* will appear, followed by *FINALIZE CD*. If you want to add a CD to the list of discs for which text is stored, you have to erase a disc from this list or finalise another disc. ("for which text is stored")
- *MEMORY FULL/FINALIZE CD* may also appear when unfinalising a CDRW disc for which text was stored (see 'Unfinalising CDRW discs'). The same action(s) should be taken in order to obtain memory space.

- 1 Press STORE/MENU.  
→ *TEXT EDIT* appears on the display.
- 2 Rotate the EASY JOG/ENTER key to select the MEMORY VIEW submenu.  
→ *MEMORY VIEW* appears on the display.
- 3 Press EASY JOG/ENTER to confirm.  
→ The first album title in the recorder memory appears on the display.
- 4 Select the album title you wish to erase by rotating the EASY JOG/ENTER key.

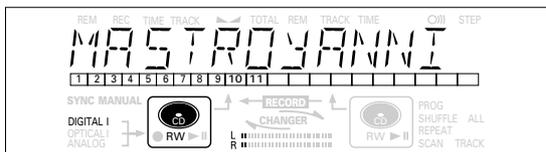


- 5 Press EASY JOG/ENTER to confirm.  
→ *ERASE MEMORY* appears on the display.

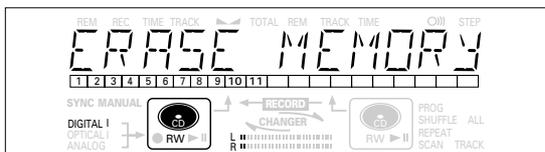


- 6 Press the EASY JOG/ENTER key to confirm the erasure of the text for that particular disc.  
→ *UPDATE* appears on the display.
- 7 Press STORE/MENU to return to the submenu or STOP ■ to exit.

## D. Auto track increment / auto track

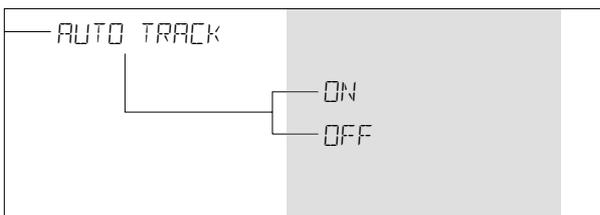


- 1 Press STORE/MENU.  
→ *TEXT EDIT* appears on the display.
  - 2 Rotate the EASY JOG/ENTER key to select the AUTO TRACK submenu.  
→ *AUTO TRACK* appears on the display.
  - 3 Press EASY JOG/ENTER to confirm.  
→ *ON* appears on the display.
  - 4 Turn the EASY JOG/ENTER key to select Auto track *ON* or *OFF*.
- When *ON* is selected, track numbers will be automatically incremented during recording.
  - When *OFF* is selected, you can number the recorded tracks yourself.

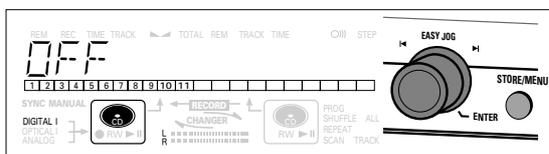


- 5 Press EASY JOG/ENTER to confirm.  
→ *AUTO TRACK* appears on the display.
- 6 Press STORE/MENU to store settings and return to the submenu or STOP ■ to exit.

## E. Balance (only active in Record/Standby mode)

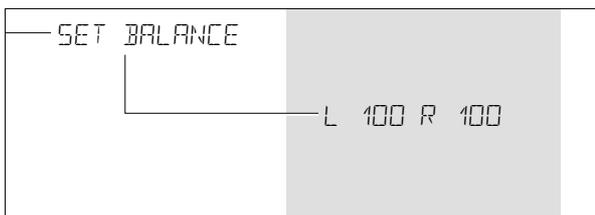

- 1 Press STORE/MENU.  
→ *TEXT EDIT* appears on the display.
- 2 Rotate the EASY JOG/ENTER key to select the SET BALANCE submenu.  
→ *SET BALANCE* appears on the display.
- 3 Press EASY JOG/ENTER to confirm.  
→ *▲* and *L 100 R 100* appear on the display.

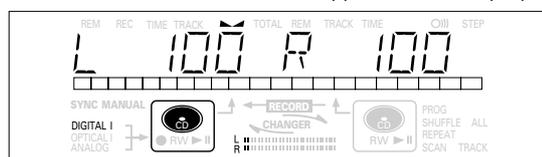

- 4 Adjust recording balance by turning the EASY JOG/ENTER key.
  - Turn left: the figure left (▲) counts down, right counts up.
  - Turn right: the figure right (▼) counts down, left counts up.
- 5 Press EASY JOG/ENTER to confirm.
- 6 Press STORE/MENU to store settings.

*Note: The balance setting will not be stored permanently.*

## TROUBLESHOOTING

If your CD recorder is defective, it is wise to check this list first. You may have forgotten a simple step.

### **Warning!**

***Under no circumstances should you attempt to repair the CD recorder yourself as this will invalidate the guarantee.***

**SYMPTOM** • possible solution:

**No power**

- ensure that the POWER ON/OFF button is on (red led on): the CD Recorder is in standby mode, press any key to activate it.
- ensure that the mains cable is plugged in correctly.
- switch the recorder OFF and then immediately back ON.

**Auto track does not work**

- check if auto track on is selected in the menu.
- check if there are 2.7 seconds silence in between the tracks (analogue recording only).
- check if the source is a consumer source with the digital output according to the IEC audio standard.
- source is DVD player (no track information).

**No sound**

- check the audio connections.
- if using an amplifier, try using a different source.

**Amplifier sound is distorted**

- check that the CD recorder analogue output is not connected to the amplifier Phono input.

**Play will not start**

- ensure that the label of the CD is facing up
- clean the disc.
- check that the disc is not defective by trying another disc.

**Remote control does not work**

- point the remote control towards the CD recorder.
- check the batteries and replace if necessary.
- select the correct source first.

**Will not record**

- clean the disc.
- check if CDR(W) is an unfinalised disc.
- check that the disc is recordable and replace if necessary.
- the disc is not an AUDIO disc (*WRONG DISC*).
- wrong input source chosen. Input label flashing (*CHECK INPUT*).
- text memory full (*MEMORY FULL / FINALIZE CD*). When a CDRW has to be unfinalised for recording. Erase text for other disc(s) or finalise other disc(s) to obtain memory space.
- total remaining time not sufficient, try programming tracks (see programming).

**Recording is distorted**

- make sure the recording level is correct.

**20 second pause between recordings**

- see Autostart recording from external CD player (*CD-SYNC*).

**Player does not react**

- switch the POWER ON/OFF button on the front of the player off and back on.

***DISC RECOVER* on display**

- a power failure has occurred during recording, the CD recorder is attempting to repair the disc.
- if *DISC ERROR* then appears on the display, the disc cannot be recorded further, and cannot be finalised. But it can still be played on the CD recorder or another CD recorder.
- on a CDRW disc, the track being recorded is lost, but further recording and finalization can still be done.