 


# Philips Audio CD Recorder CDR 820: Getting started...

English

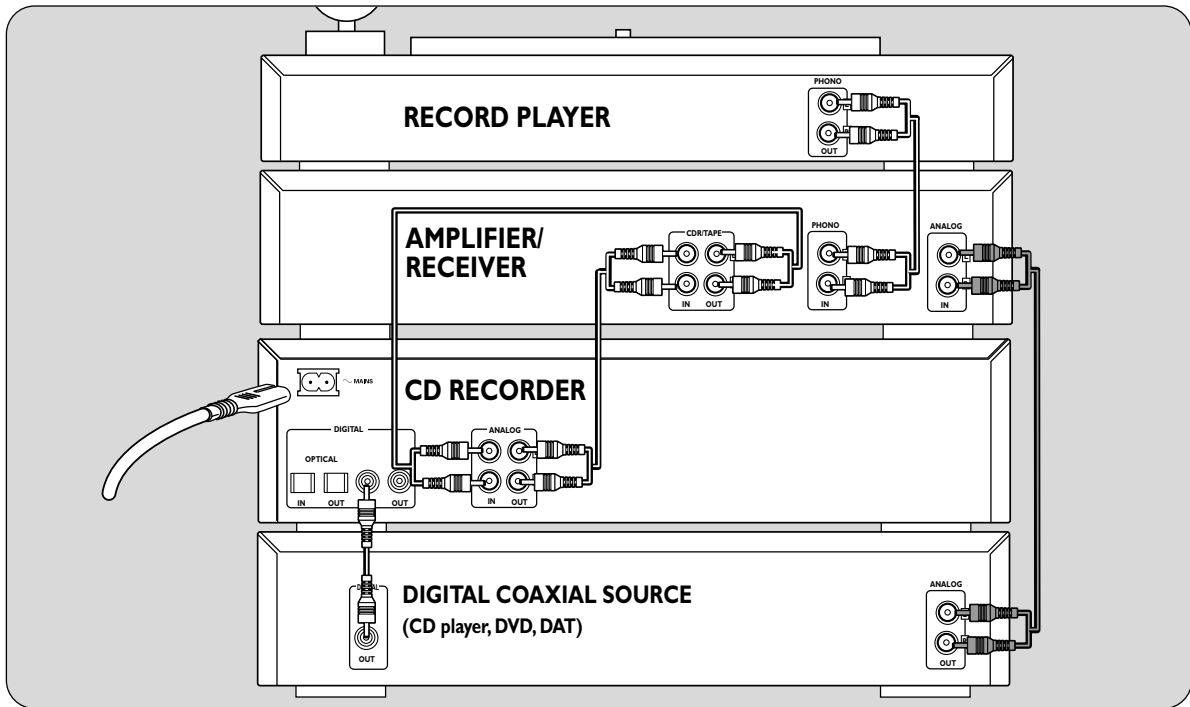

## General information

*This Quick Installation Card gives a rough overview and helps to quickly start with basic steps. Please read the supplied instruction manual for detailed information.*

### Mains

- 1 Check whether the mains voltage as shown on the type plate corresponds to your local mains voltage. If it does not consult your dealer or service organization.
- 2 **After all connections have been made** connect the mains cable to AC MAINS~ and to the wall socket. This switches on the mains supply.

**To disconnect the set from the mains completely, remove the mains plug from the wall socket.**

## Discs for recording

Use discs with the "Digital Audio" logo only:

- CD-Audio Recordable (CDR) discs, or
- CD-Audio ReWritable (CDRW) discs.

Do not use computer CDR(W)s as recording would not work properly.



## Discs for playback

disc:	playback in:	standard CD player	CDRW compatible CD player	Philips CDR 800
finalized CDR		•	•	•
finalized CDRW			•	•
unfinalized CDR or CDRW				•
MP3 CD				•

Note: MP3 playback works only if the filenames end with ".mp3".

## Demo mode

 
The demo mode displays various features of the set and will start automatically.

- To switch off the demo mode keep STOP ■ pressed for at least 5 seconds.
  - The set switches to standby.

# Philips Audio CD Recorder CDR 820: Getting started...


English

## Playing a CD in the CD changer

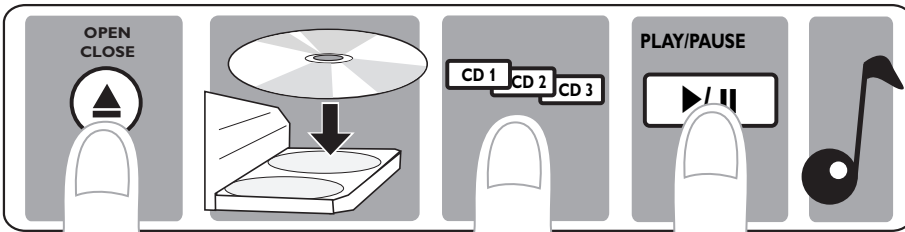


- 1 Press OPEN·CLOSE and insert a CD into a tray. Close the drawer by pressing OPEN·CLOSE again.
- 2 Select the tray by pressing CD1, CD2 or CD3.
- 3 Press PLAY/PAUSE ►|| to start playback.

## Recording an entire CD

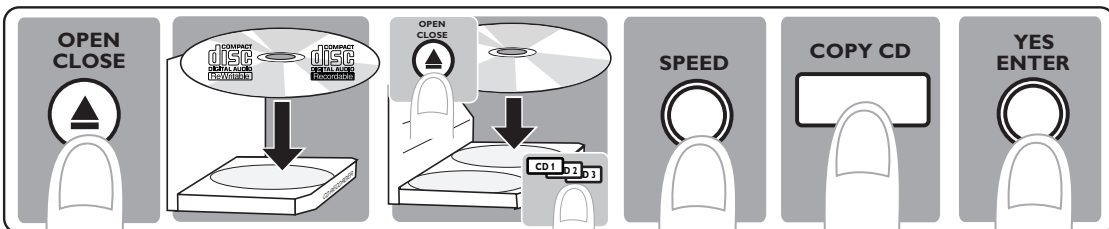 


- 1 Press OPEN·CLOSE and insert a blank Audio CDR(W) into the CD recorder tray.
- 2 Insert the CD to be copied into the CD changer and select the CD tray.
- 3 Select the required recording speed.
- 4 Press COPY CD.
- 5 Press YES to start CD recording. The CD will be finalized automatically.

## Recording a single track

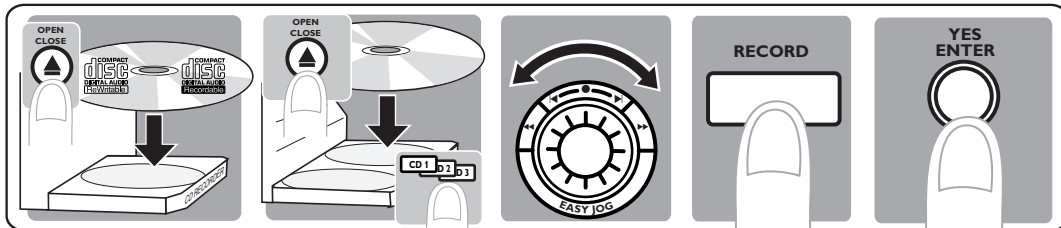 

- 1 Insert an Audio CDR(W) into the CD recorder tray.
- 2 Insert a CD into the CD changer and select the CD tray.
- 3 Select a track by rotating ◀ EASY JOG ▶
- 4 Press RECORD.
- 5 Press YES to start recording.

## Finalizing manually

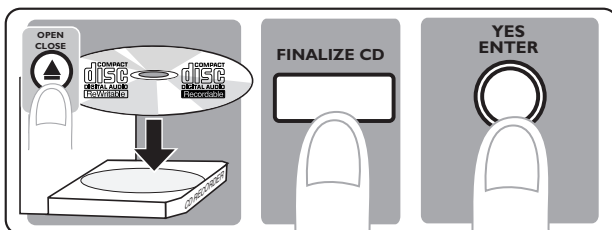 

- 1 Insert the CDR(W) to be finalized into the CD recorder.
- 2 Press FINALIZE CD.
- 3 Press YES to start the finalization.