

Register your product and get support at

[www.philips.com/support](http://www.philips.com/support)

D630

D635



# Short user manual

**PHILIPS**



# Important safety instructions

## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- Refer to safety information before using the product.
- Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

## When using the phone as a baby monitor

- Children should be supervised to ensure that they do not play with the appliance.

- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

# 1 Overview

## In call

- ☎ Phonebook / redial list
- 🔊 Change the sound profile.
- 🔊 Adjust the volume.
- 🔄 Recall (network dependent).
- 📞 End calls.
- # a/A Enter a pause (press and hold).
- 🔊 Turn the speaker on/off.
- 🔇 Mute/unmute the microphone.

## Standby

- ☰ Access the main menu.
- ☎ Access the redial list.
- ☎ Phonebook
- 📞 Call log
- 📞 Make and receive calls.
- 📞 Switch the handset on or off (press and hold).
- \*INT Make intercom call (press and hold).
- 🔒 Lock/unlock the keypad (press and hold).
- 🔊 Make and receive calls through the speaker.
- 📞 D635 only: Press to play new message from the answer machine. / Access to the answer machine menu.

## In menu


- ☑ Confirm / Select / Enter the option menu.
- ☐ Cancel / back
- ⬆ Up / down
- 📞 Exit menu.

## In text input

- ☐ Delete text.
- ⏏ Enter a space.
- # a/A Switch upper/lower case (press and hold).
- ⬅ Left / right

## Main menu icons

- 🕒 Alarm
- ☎ Phonebook
- 📁 Services
- 🔊 Sounds
- ⚙ Phone setup
- 👶 Baby monitor
- 🔒 Privacy mode
- 📞 Answering machine (D635 only)
- 📞 Incoming calls (D630 only)


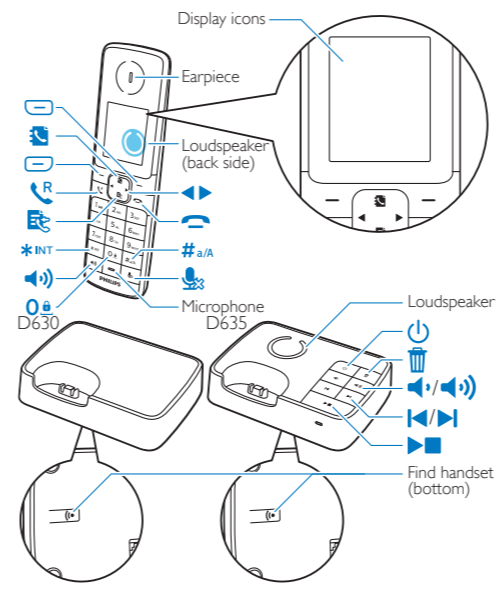


## Display icons

- 📶 It shows the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
- 📞 It remains steadily on when browsing incoming calls in the call log.
- ☎ It remains steadily on when browsing outgoing calls in the redial list.
- 📞 It flashes when there is a new missed call. It remains steadily on when browsing unread missed calls in call log, or when browsing the read missed calls in call log.
- 🚫 It remains steadily on when browsing blocked calls in call log.
- 📞 It flashes when there is an incoming mobile number.
- 🏠 It flashes when there is an incoming home number.

- 📞 It flashes when there is an incoming office number.
- 🔊 The speaker is on.
- 🔇 The ringer is off. The silent mode is set and within active period (the phone does not ring).
- 🎵 The silent mode is set, but is outside of active period.
- 🕒 The alarm is activated.
- 📞 D635 only: Answering machine: it flashes when there is a new message or when the memory is full. It is displayed when the telephone answering machine is turned on.
- 📞 Voice messages indicator: flashes for new messages, is steady for reviewed messages. \* This is network dependent.
- ECO The Eco mode is activated.
- ECO+ The ECO+ mode is activated.


## 2 Connect

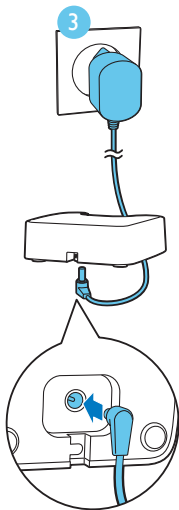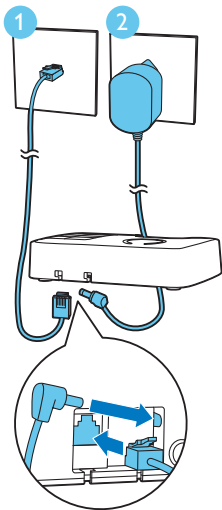



Multi-handset version  
only.

# 3 Get started

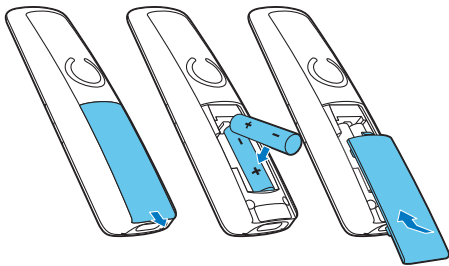
## Insert batteries



## Configure your phone

- 1 When using your phone for the first time, you see a welcome message (country dependent).
- 2 Set the country and language if prompted.
- 3 Set the date and time.
  - If the time is in 12-hour format, press  /  to select **[am]** or **[pm]** (country dependent).


## Charge your phone

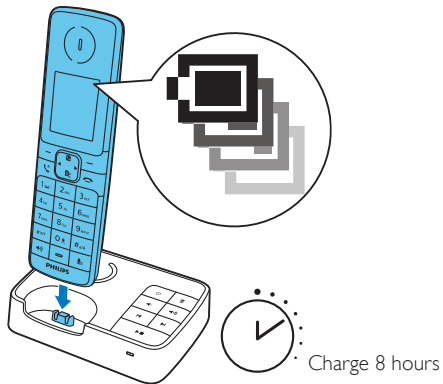

 > 70%

 40% - 70%

 10% - 40%

 Flashing: low battery

 Scrolling: charging in progress

# 4 Enjoy

## Phonebook

### Add record

- 1 Press .
- 2 Select **[Option]** > **[Add new]**.
- 3 Follow on-screen instructions.

### Call from the phonebook

- 1 Press .
- 2 Select a record and press .

### Direct access memory


You have up to 9 direct access memories (keys 1 to 9). To dial the saved phone number automatically, press and hold on the keys in standby mode. Depending on your country, keys 1 and 2 are preset to the voice mail number and information service number of your service provider respectively (network dependent).

## Call log


### Call from the call log

- 1 Press .
- 2 Select a record and press .

### View record

Press  > **[Incoming calls]** (D635 only) > **[Option]** > **[View]**.

### Save record

- 1 Press  > **[Incoming calls]** (D635 only) > **[Option]** > **[Save number]**.
- 2 Follow on-screen instructions.

### Delete record

- 1 Press  > **[Incoming calls]** (D635 only) > **[Option]** > **[Delete]**.
- 2 Follow on-screen instructions.

## Redial list

### Call from the redial list

- 1 Press **[Redial]**.
- 2 Select a record and press .

### Save record

- 1 Press **[Redial]** > **[Option]** > **[Save number]**.
- 2 Follow on-screen instructions.

### Delete record





- 1 Press **[Redial]** > **[Option]** > **[Delete]**.
- 2 Follow on-screen instructions.

## Record an announcement (for D635 only)

- 1 Press **[Menu]**.
- 2 Press  /  to select  > **[Announcement]**.
- 3 Follow on-screen instructions.




## Register additional handsets

You can register additional handsets to the base station.

- 1 Press **[Menu]**.
- 2 Press  /  to select  > **[Register]**.
- 3 Press and hold  on the base station for 10 seconds.
- 4 Enter the system PIN/passcode (0000).
- 5 Press **[OK]** to confirm the PIN/passcode.  
↳ Registration is complete in less than 2 minutes.

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press **[Menu]**.
- 2 Press  /  to select  > **[Reset]**.
- 3 Follow on-screen instructions.

### Note

- You may recall the original PIN/passcode by following this procedure.

# 5

## Learn more

### Silent mode

Sets time during which the phone will not ring.

 > **[Silent mode]**

### MySound

Customizes the sound of voices to your liking.

 > **[MySound]**

### Eco mode

Reduces power consumption / transmission power; reduces radiation and range by approximately 60%.

 > **[Eco mode]**

### ECO+ mode

Eliminates radiation in standby mode (causes 2 seconds ring delay, 50% shorter standby time).

 > **[ECO+ mode]**

### Privacy mode

Blocks incoming calls / block outgoing calls.

 > **[Call barring]/[Call block]**



# Technical data

## Battery

Philips: 2 x AAA NiMH 1.2 V Rechargeable 650 mAh batteries

Use only the supplied batteries.

## Adapter (Base and charger:)

	Tenpao: S003GB0600050
Input:	100-240 V~, 50/60 Hz 150 mA
Output:	6 Vdc 500 mA

Phonebook with 100 entries

Call log with 50 entries

Talk time: 18 hours

Standby time: 250 hours

RF output power: <24 dBm

Frequency Band: 1880 MHz ~ 1900 MHz



## Note

- You can install a DSL (digital subscriber line) filter to prevent noise and caller ID problems caused by the DSL interference.
- You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).





# ? Frequently asked questions






## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Register your Handset]**, register your handset. (See the section on “Register additional handsets”).

## If I fail to pair (register) the additional handsets to the base station, what do I do?

- Your base memory is full. Access  >  > **[Unregister]** to unregister the unused handsets and try again.
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.

## I have chosen a wrong language which I cannot read, what do I do?

- 1 Press  to go back to the standby screen.
- 2 Press  to access the main menu screen.
- 3 Press  /  to select , then you see one of the following texts appear on the screen:

[Language]
[Langue]
[Sprache]
[Lingua]

- 4 Select them to access the language options.
- 5 Select your own language.

## My handset is in searching or unavailable status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

## No display

- Make sure the batteries are charged.
- Make sure there are power and phone connections.

## The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones with the same specifications.

## Bad audio (crackles, echo, etc.)


- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

## The handset does not ring.

Make sure the handset ringtone is turned on.

## The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

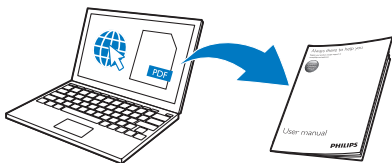

[www.philips.com/support](http://www.philips.com/support)

To access the user instructions online, use the reference model number written on the product label at the bottom of the base station.



This symbol on a product means that the product is covered by European Directive 2012/19/EU. This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.



UMS\_D630/635  
05\_EN\_V2.0  
WK17125