

Docking Entertainment System

 
 
 
 
Register your product and get support at
www.philips.com/welcome

User Manual




PHILIPS

1

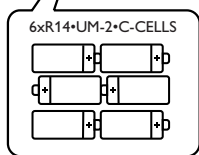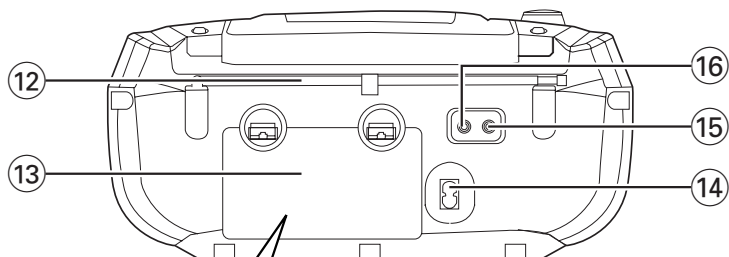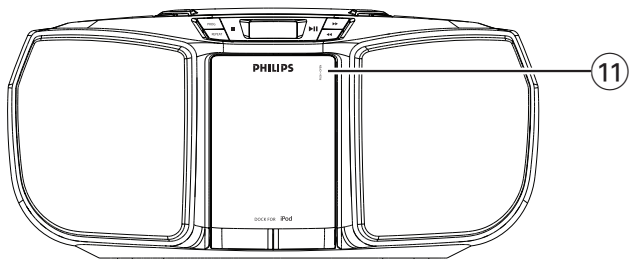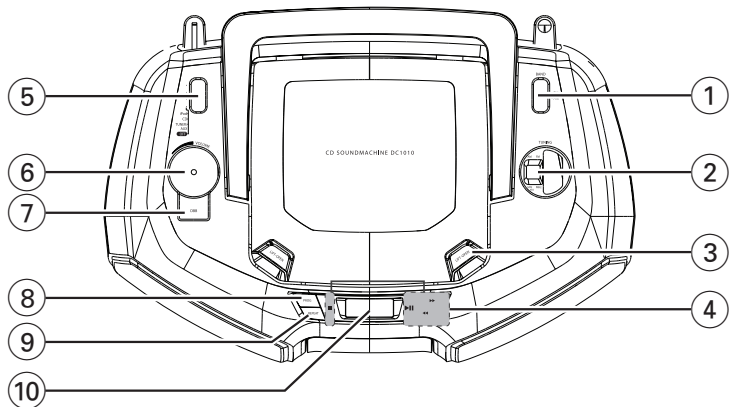

2

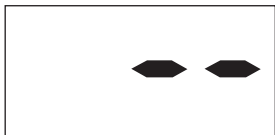 

3



 
4



5



6

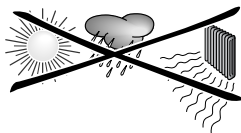

Supplied accessories

- AC power cord
- iPod dock
- line-in cord

Top and front panels (See 1)

- ① **BAND** – selects FM or AM waveband
- ② **TUNING** – tunes to radio stations
- ③ **LIFT•OPEN** – opens the CD door
- ④ **▶||** – starts or pauses CD playback.
■ – stop playback;
– erases a CD program
◀◀ ▶▶ – skips or searches a passage/track backwards
- ⑤ **Source selector: Tuner/AUX, CD, iPod, OFF**
– selects tuner AUX, CD, or iPod, tuner source of sound
– switches off the set
- ⑥ **VOLUME** – adjusts volume level
- ⑦ **DBB**
– enhance bass effect
- ⑧ **PROG** – programs and reviews programmed track numbers
- ⑨ **REPEAT** – repeats a track/CD program/entire CD
- ⑩ **Display** – shows the CD/iPod functions

Back panel (See 1)

- ⑪ **DOCK for iPod**
– cradle for docking adaptors used to dock your iPod player for playback or recharging through this system.
- ⑫ **Telescopic antenna** – improves FM reception
- ⑬ **Battery door** – open to insert 6 x 1.5V
R-14/ UM2/ C-cells

⑭ **AC MAINS** – inlet for power cord

⑮ **🎧** – 3.5 mm stereo headphone socket

Helpful hints: *The speakers will be muted when headphones are connected to the set.*

⑯ **AUX** – 3.5 mm audio input jack

Power Supply

CAUTION

- Visible and invisible laser radiation. If the cover is open, do not look at the beam.

- High voltage! Do not open. You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.

- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

This set complies with the radio interference requirements of the European Community.

Power Supply

Whenever convenient, use the mains supply cord if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

Batteries (not included)

- 1 Open the battery compartment and insert six batteries, type **R-14**, **UM-2** or **C-cells**, (preferably alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment. (See [1](#))
- 2 Replace the compartment door, making sure the batteries are firmly and correctly in place. The set is now ready to operate.

– Remove battery if it is exhausted or will not be used for a long time.

– Batteries contain chemical substances, so they should be disposed of properly.

– Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

- Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst:

- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

Using AC Mains

- 1 Check if the power/mains voltage, **as shown on the type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
 - 2 Connect the power cord to the AC MAINS inlet and the wall socket. The mains lead is now connected and ready for use.
 - 3 To switch the set off completely, withdraw the power cord from the wall socket.
 - 4 Install the unit near the AC outlet and where the AC power plug can be easily reached.
- Disconnect the mains lead from the wall socket to protect your set during heavy thunderstorms. Children could seriously injure themselves as the free end of the cable may still be live if only the connector is removed from the MAINS socket at the back of the unit.

The type plate is located on the bottom of the set.

Helpful hints:

- To avoid unnecessary energy consumption, always adjust the **source selector** to **OFF** after using the set.

Basic operation

- 1 To select your sound source, adjust the **source selector** to: **TUNER, AUX, CD, iPod,** or **OFF**.
- 2 To switch off the set, adjust the **source selector** to **OFF** position and check the cassette keys are released.

Helpful hints:

In tuner mode, if you connect a 3.5 mm aux-in cable, the source changes to **AUX** automatically.

Adjusting volume

Adjust the volume with the **VOLUME** control.

Radio reception

- 1 Adjust the **source selector** to **TUNER**.
- 2 Adjust **BAND** to **FM** or **AM** as your desired band.
- 3 Turn **TUNING** to tune to a station.
 - For **FM**, extend and turn the telescopic antenna for best reception. Reduce its length if the signal is too strong.
 - For **AM**, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.
- 4 To switch off the radio, adjust the source selector to **OFF** position.

Playing a CD

This CD player plays Audio Discs including CD-Recordables and CD-Rewritable.

- MP3 CD-ROMs, CD-I, CDV, VCD, DVD or computer CDs are not possible for playback on this set.

IMPORTANT!

- CDs encoded with **copyright protection technologies** by some record companies may be unplayable by this product.

- 1 Adjust the **source selector** to **CD**.
- 2 Open the disc door.
- 3 Insert a CD with the printed side facing up and press the CD door gently to close.
→ Display shows - - and later; the total number of tracks. (See [2], [3])
- 4 Press **▶II** on the set to start playback.
→ Display: **▶** and the current track number. (See [4])
- 5 To pause playback press **▶II**. To resume playback, press **▶II** again.
- 6 To stop CD play, press **■**.

Helpful hints:

CD play will also stop when:

- you open the CD compartment;
- you select **TUNER, AUX, or OFF** sound source;
- the CD has reached the end of playback.

Selecting a different track

- Press **◀◀** or **▶▶** once or repeatedly until the desired track number appears in the display.
- In the stop/pause position, press **▶II** to start playback.

CD Player

Finding a passage within a track

- 1 During playback, press and hold down **⏮/⏭**.
→ The CD is played at high speed and low volume.
- 2 When you recognize the passage you want release **⏮/⏭**.
→ Normal playback resumes.

Helpful hints:

- When your searching reaches the end of the last track, the CD goes to stop mode.

Programming track numbers

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **PROG** to activate programming.
→ Display: **PROG** and **⏪⏩** flash (see [5](#)).
- 2 Press **⏮** or **⏭** to select your desired track number.
→ Display: **PROG** and your desired track number flash.
- 3 Press **PROG** to store the desired track number.
→ Display: **PROG** and **⏪⏩** flash for you to program the next track.
- 4 Repeat steps **2** to **3** to select and store all desired tracks in this way.
- 5 To play your program, press **▶II**.
→ Display: **PROG** flashes during program playback.

Helpful hints :

- If you try to store more than 20 tracks, no track can be selected and the display will show flashing - - .

To review a program

- In the stop position, press and hold **PROG** for two seconds to see your stored track numbers.

Erasing a program

You can erase the contents of the memory by:

- in the stop position, press **PROG** to enter program mode, and then press **■**;
 - Selecting **TUNER, AUX, or OFF** sound source;
 - opening the CD door.
- Display: **PROG** disappears.

Different play mode

REPEAT

You can play the current track or the whole disc repeatedly, and combine REPEAT modes with PROGRAM.

REPEAT – plays the current track continuously.

REPEAT ALL– repeats the entire CD/program.

- 1 To select play mode, press **REPEAT** once or more.
→ The display shows selected mode.
- 2 Press **▶II** to start playback if in the stop/pause position.
- 3 To return to normal playback, press **REPEAT** repeatedly until the modes are no longer displayed.
– You can also press **■** to cancel your play mode.

Compatible iPod players

- The docking entertainment system is compatible with all the existing Apple iPod models with 30-pin connector.

Playing an iPod portable player

- 1 Correctly dock your iPod portable player in the cradle. Make sure the dock adapter is compatible.
- 2 Make sure that you have powered on your iPod player before selecting iPod source.
→ The iPod dock icon appears.
- 3 Playback starts automatically. Playback functions play, skip, fast search and, pause are possible using the controls on this system and its remote control.

Charging iPod battery using the dock

- In iPod/Tuner/AUX mode, directly dock your iPod portable player on the cradle for charging.

Connecting an external device

You can listen to the sound of the connected external device through your DC1010's speakers.

- 1 Adjust the **source selector** to **AUX**.
- 2 Use a line-in cable (not supplied) to connect DC1010's AUX jack (3.5 mm, located on the back panel) to an AUDIO OUT or headphone jack on an external equipment (such as CD player, or VCR).

CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

Safety information

- Place the set on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not expose the apparatus to dripping or splashing.
- Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Specifications

Power Consumption.....3.1W

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: *Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.*

Problem

– Possible cause

- Remedy

No sound /power

– Volume not adjusted

- Adjust the VOLUME

– Power cord not securely connected

- Connect the AC power cord properly

– Batteries dead/ incorrectly inserted

- Insert (fresh) batteries correctly

– CD contains non-audio files

- Press ◀◀ , ▶▶ once or more to skip to a CD audio track, instead of the data file.

Display does not function properly/ No reaction to operation of any of the controls

– Electrostatic discharge

- Switch off and unplug the set. Reconnect after a few seconds

Severe radio hum or noise

– Electrical interference: set too close to TV, VCR or computer

- Increase the distance

- - indication

– No CD inserted

- Insert a CD

– CD badly scratched or dirty

- Replace/ clean CD, see Maintenance

– Laser lens steamed up

- Wait until lens has cleared

– CD-R(W) is blank or not finalized

- Use a finalized CD-R(W) or suitable CD Audio disc only

Note:

Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.

The CD skips tracks

– CD damaged or dirty

- Replace or clean CD

– Program is active

- Quit program mode

Note:

A CD badly scratch or dirty may result in improper operation.

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 Year free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen size less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for free replacement of faulty accessories.

8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only).
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

Technology Care Centre

1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:.....

Serial number:.....

Date of purchase:.....

Retailer:.....

Philips Consumer Electronics
a division of **Philips Electronics Australia Limited**
ABN 24 008 445 743,
Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after **1st January 2007**

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller

Philips New Zealand Ltd.

✉ **P.O. Box 41.021**

 
Auckland

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**

Meet Philips at the Internet

<http://www.philips.com>

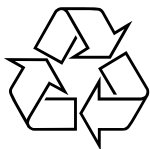

DC1010



Printed in China

J.W.Wang-0820