

# Quick Start Guide



Step A *Setup*

Step B *Enjoy*

## What's in the Box?

 
You should find these items upon opening the box.



Quick Start Guide



User manual



AC power adaptors



 
4 x iPod dock adaptors



FM antenna



Remote Control

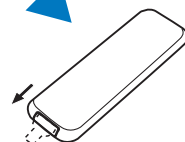

Pull out the insulation plastic sheet.


# PHILIPS
 
# Step A

# Setup


## Connection

- 1 For radio reception, connect the supplied FM antenna to the **FM ANTENNA** terminal.
- 2 Connect the speaker wires to the **SPEAKERS** terminals.
- 3 Connect the power cord of the system to the AC power outlet.

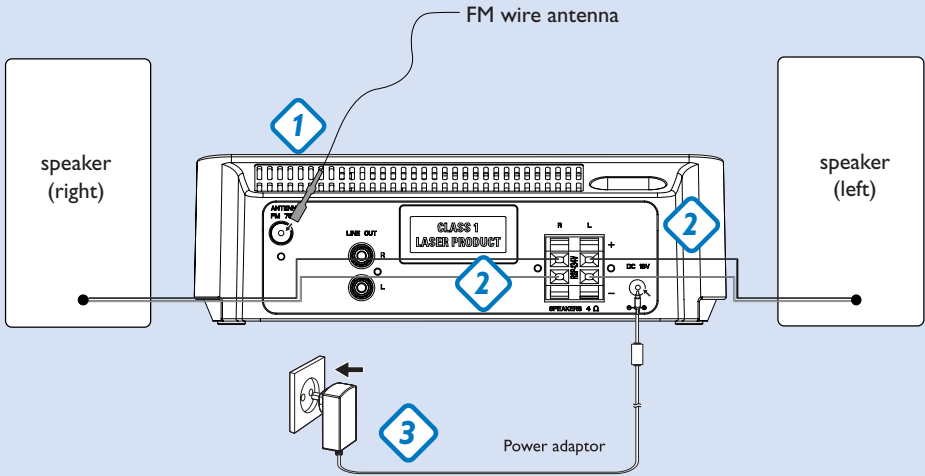

## Setting the clock

 
- 1 In standby mode, press and hold **DISPLAY/CLOCK** for 2 seconds.
- 2 Press **PROGRAM** to select between 12 hour and 24 hour display. The clock digits for flash.
- 3 Press **TUNING** **◀ / ▶** (**◀◀ / ▶▶** on the remote control ) to set the hours.
- 4 Press **◀ / ▶** on the set (**ALBUM/PRESET +/-** on the remote control ) to set the minutes.
- 5 Press **DISPLAY/CLOCK** to confirm the time.

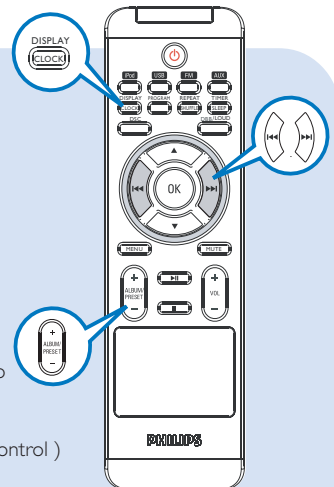

## Step B *Enjoy*

### Playing an iPod

 - 1 Correctly dock your iPod portable player in the cradle.
- 2 Select **iPod** source.
  - Playback starts automatically.
  - Press **▶||** to start playback, if the iPod is in sleep mode or pause mode.

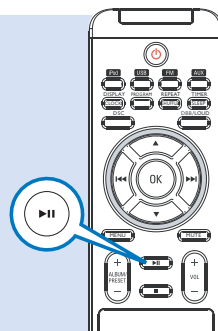

### Programming and tuning to radio stations

- 1 Select **FM** source.
- 2 Press **PROGRAM** on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press **◀/▶** on the set (**ALBUM/PRESET +/-** on the remote control ) until the desired preset station is displayed




#### **Tip:**

*Detailed playback features and additional functions are described in the accompanied owner's manual.*

#### *Notes for the remote control:*

- First, select the source you wish to control by pressing one of the source select keys on the remote control (iPod or AUX, for example).
- Then select the desired function.

## Playing a USB mass storage device

- 1** Press **SOURCE** repeatedly (or **USB** on the remote) to enter USB mode.  
The LCD display shows USB.
- 2** Plug a compatible USB mass storage device to DC177's USB port marked .  
If needed, use a suitable USB cable to connect between the device and DC177's USB port.  
The device will automatically power on.
- 3** Press  to start playback.
- 4** Press  to stop playback.

### Tip:

*Refer to the user manual supplied for the description about compatibility of USB mass storage device, and playability of the files stored on the USB device.*

