

Docking Entertainment System

DC200


Register your product and get support at
www.philips.com/welcome

QUICK START



Thanks for buying **Philips DC200 Docking Entertainment System**.
Our Quick Start guides you through just some of the features on the set.
Please read our instruction booklet to really rise & shine!

PHILIPS

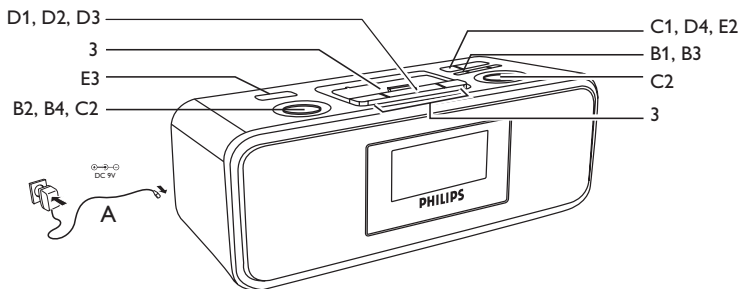

ENGLISH

Step A

- Connect the supplied mains adapter to the set's 9V DC jack and the plug into a wall outlet.

Step B

How to set the Clock & Alarm time

1. Press and hold **SET TIME** or **1 ALM/2 ALM** until the hour digits flash.
 2. Press and hold **◀◀ ▶▶** to adjust time.
 3. Press **SET TIME** or **1 ALM/2 ALM** to confirm.
- Repeat the **steps 2-3** to complete all the other time items setting.


Selecting the Alarm mode

4. Press **◀◀ ▶▶/SOURCE** repeatedly to select your desired alarm mode.
- For Nature sound mode, press **ALBUM/PRESET** **-/+ ◀/▶** to select your desired nature sound track.

Helpful hints:

- If you have selected **TUNER** alarm mode, make sure you have properly tuned to a station before turning off the set (**See Tuning to radio station**).
- If you have selected iPod/USB alarm mode, make sure you have connected the compatible iPod player or USB device, or the buzzer mode will be selected automatically.

3 ways to switch off the alarm

- Either press briefly: **POWER**  or **REPEAT ALARM/BRIGHTNESS CONTROL**.
- Press **1 ALM** or **2 ALM**.

Step C

Tuning to radio station

1. Press **SOURCE** once or more to switch on the radio.
2. Press **◀◀ ▶▶** repeatedly to tune to your station.

- To store a preset, press **PROG** to activate the programming, and then press **ALBUM/PRESET** **-/+ ◀/▶** to select a desired preset number, and then press **PROG** again to confirm.
- To store preset radio stations automatically, press and hold **PROG** for more than two seconds.

Step D

Playing Apple iPod using DC200


1. Remove the top cover of dock.
 2. Snap the correct adaptor (supplied) into the dock to provide a snug fit for the iPod player.
- The indication on the adaptor's back fits specific iPod player.
3. Snap the compatible iPod into the dock connector.
 4. Press **SOURCE** repeatedly to select the iPod mode.
- The connected player will play automatically.

Helpful hints:

- By using the buttons (**▶▶, ◀◀, ▶▶** and **VOLUME**) on the DC200, the following iPod playback features are available: Play/Pause, selecting next/previous track, fast forwarding/rewinding and changing volume.
- Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor" and the important notes for dock operation.

Step E

Playing a USB mass storage device

1. Make sure that your DC200 is being powered by AC mains.
2. Press **SOURCE** repeatedly to select the USB mode.
3. Plug a compatible USB mass storage device to DC200's USB port marked .
 - Playback will start automatically.