
Quick Start Guide




Step A	Connect
Step B	Setup
Step C	Enjoy

What's in the Box?

You should find these items upon opening the box.

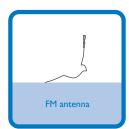



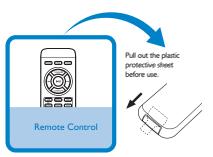













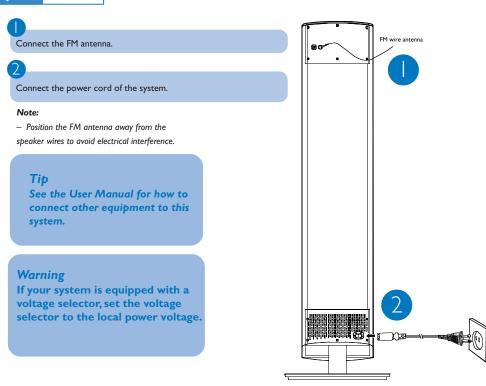

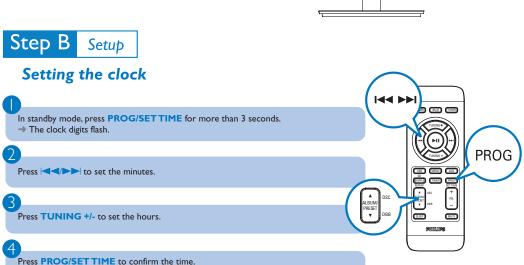



Playing a USB mass storage device

With the system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1).

- Insert the USB device's USB plug into the socket 💝 on the set.
- Press USB to select USB.
- Play the USB's audio files.

Before using the remote control

- 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example USB,TUNER).
- 3 Then select the desired function (for example ▶ ■, |◄◄, ▶▶|)




Programming and tuning to radio stations

Press **TUNER** to select the tuner source.

Press **PROG/SET TIME** for more than 3 seconds to program all available stations.

Press **ALBUM/PRESET ▲** / **▼** until the desired preset station is displayed.

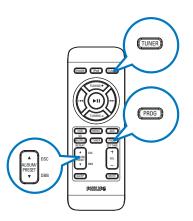



Playing Apple iPod using DC570

- Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.
- Correctly place the compatible iPod player into the dock.
- Press **iPod** to select the iPod source.
- Power on your iPod player.
 - Select and play your favourite songs stored in the iPod player.

Tip

Detailed playback features and additional functions are described in the User Manual.



© Royal Philips Electronics N.V. 2008 All rights reserved.

