

 
Introduction:

Philips strives to continually bring you the best experience from our products. To enjoy optimal performance, you are highly recommended to upgrade the firmware of your device.

Preparation for firmware upgrade:

- A computer with an archive utility that supports the ZIP-format.
- An empty USB flash drive device.

Upgrade Procedure:

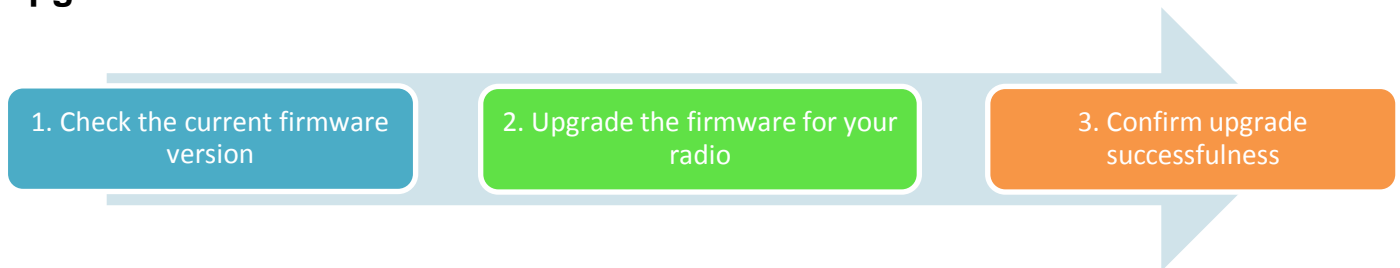


Step 1: Check your current firmware version

1. Turn on the device.
2. Press **SOURCE** button to select **MP3 Link** as the source.
3. Press ►| button **once**.
4. Press and hold OK / ►|| button for 2 seconds.
5. The firmware version will be displayed.
6. Compare the firmware version displayed to the latest version. If the existing firmware in your radio is of an earlier version than the new release, please proceed to **Step 2**.

Otherwise, the latest firmware is installed and hence an upgrade is not needed.

Step 2: Upgrade the firmware for your radio

 1. Click on the Download icon to download the new firmware package to your computer.

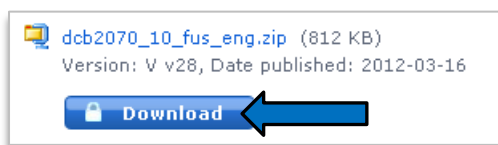

Note: DO NOT change the file name in the folder to avoid an update corruption.

2. Extract the zip file.
3. Copy and paste the folder called “**system**” to the root directory of the USB device.
4. Connect the USB device to the system.
5. Press **SOURCE** button to select **USB** as the source.
6. Firmware update starts automatically. The process would take a few minutes.
7. When the update is completed, the message “succeed” would be displayed.

Step 3: Confirm upgrade successfulness

1. Go over **Step 1 Check your current firmware version** to verify whether the new firmware is correctly upgraded.
2. If the latest firmware has not been installed, repeat ‘**Step 2 Upgrade the firmware for your radio**’ and ‘**Step 3 Confirm upgrade successfulness**’.