

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

Docking Entertainment System

DCB242



**1** Connect

**2** Install

**3** Enjoy

**PHILIPS**

# What's in the box



Main unit



 
Remote control



MP3 link cable



Power adaptor

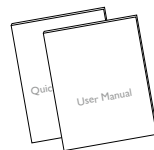


User Manual  
Quick Start Guide

## 1
 
## Connect

### A Connect power

- 1 Connect the AC power adaptor to:
  - the DC socket on the main unit
  - the power socket.

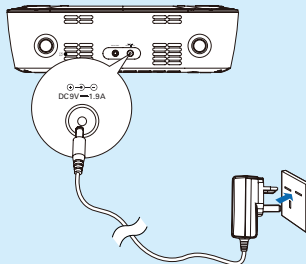

# 2 Setup

## A Set time and date

- 1 In standby mode, press and hold **SET TIME/AUTO SCAN** for 2 seconds.
  - ↳ **[SYNC ON]** is displayed and **[ON]** begins to blink.
- 2 Press **PRESET + ▲/PRESET - ▼** to select ON or OFF.
  - ↳ If you select **[ON]**, the unit reads the DAB or iPhone/iPod time and sets the clock automatically.
  - ↳ If you select **[OFF]**, the unit turns off the time synchronization.
- 3 Press **SET TIME/AUTO SCAN** to confirm. The time format [24H] or [12H] begins to blink.
- 4 Press **PRESET + ▲/PRESET - ▼** to select 24H or 12H.
- 5 Press **SET TIME/AUTO SCAN** to confirm. The hour digits begin to blink.
- 6 Repeat steps 4-5 to set the hour, minute, year, month, and day.

## B Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly.
- 2 Press and hold **AL1** or **AL2** for 2 seconds.
  - ↳ The **[AL1]** or **[AL2]** icon and the hour digits begin to blink.
- 3 Press **TUNING - ◀/TUNING + ▶** to set the hour.
- 4 Press **AL1** or **AL2** to confirm.
  - ↳ The **[AL1]** or **[AL2]** icon and the minute digits begin to blink.
- 5 Repeat steps 3-4 to set the minute.
- 6 Repeat steps 3-4 to select whether to ring alarm the whole week, on weekdays, or at weekend.
- 7 Repeat steps 3-4 to select an alarm sound source: Buzzer, iPhone, FM, or DAB.
- 8 Repeat steps 3-4 to set the alarm volume.

## 2 Setup

### C Turn on/off the alarm timer

- 1 Press **AL1/AL2** to turn on or off the alarm timer:
  - ↳ If the alarm timer is turned on, the alarm icon appears.
  - ↳ If the alarm timer is turned off, the alarm icon disappears.

### D Repeat alarm

- 1 When the alarm rings, press **REP AL/BRIGHTNESS**.
  - ↳ The alarm repeats ringing minutes later.

 
### E View the alarm settings

- 1 Press **AL1** or **AL2**.


## 3 Enjoy

### A Play from iPod/iPhone

- 1 Lift up the iPhone/iPod dock cover on the top panel.

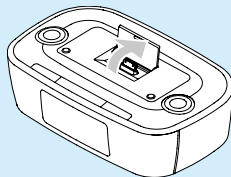

 - 2 Place the iPhone/iPod into the dock.

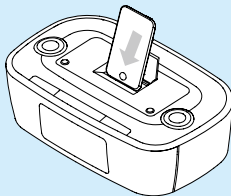

# 3 Enjoy

- 3 Press **iPhone/iPod** on the remote control to select iPod/iPhone source.
- ↳ The connected iPod/iPhone plays automatically.
  - To pause/resume play, press **OK/▶||**
  - To skip to a track, press **TUNING - |◀/TUNING + ▶|** on the remote control.
  - To search during play, press and hold **TUNING - |◀/TUNING + ▶|**, then release to resume normal play.
  - To go back to the previous iPod/iPhone menu, press **MENU**. To scroll through the menu, press **PRESET + ▲/PRESET - ▼**. To confirm a selection, press **OK/▶||**.
- ↳ If no key is pressed for more than 10 seconds, **OK/▶||** acts back as the play/pause key.

## B Program and listen to radio stations

- 1 In the tuner mode, press and hold **SET TIME/AUTO SCAN** for more than 2 seconds to activate automatic program mode.
- ↳ The unit starts to search for radio stations.
  - ↳ All available stations are programmed in the order of waveband reception strength.
  - ↳ The first programmed radio station is broadcast automatically.
- 2 Press **PRESET + ▲/PRESET - ▼** to select a preset number.

### \* Tip

- Detailed functions and features are described in the user manual.



© 2010 Koninklijke Philips Electronics N.V.  
All rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

DCB242\_05\_QSG\_V1.1

