

Register your product and get support at
www.philips.com/welcome

DCB3070



User manual

PHILIPS

Contents

1 Important	4
Safety	4
Notice	6

2 Your product	8
Introduction	8
What's in the box	8
Overview of the main unit	9
Overview of the remote control	10

3 Get started	12
Placement	12
Prepare the remote control	12
Connect power	12
Store DAB stations	12
Set clock	13
Turn on	13

4 Play	14
Play disc	14
Play from USB	14
Pause/resume play	14
Skip to a track	14
Search within a track	14
Display play information	14
Repeat and shuffle play	14
Program tracks	15

5 Adjust sound	16
Adjust volume	16
Select a preset sound effect	16
Enhance bass	16
Mute sound	16

6 Listen to radio	17
Listen to DAB radio	17
Listen to FM radio	18

7 Play iPod/iPhone/iPad	20
Compatible iPod/iPhone/iPad	20
Load the iPod/iPhone/iPad	20
Listen to the iPod/iPhone/iPad	20
Charge the iPod/iPhone/iPad	20

8 Other features	21
Set the alarm timer	21
Set the sleep timer	21
Play from an external device	21
Headphone	21

9 Product information	22
Specifications	22
USB playability information	22
Supported MP3 disc formats	23
Maintenance	23

10 Troubleshooting	24
---------------------------	----

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- 11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

- Install all batteries correctly, + and - as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.



Note

- The type plate is located at the rear of the apparatus.

higher decibel ranges are offered for those that may have already experienced some hearing loss.

- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box),

polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Made for

iPod iPhone iPad

“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPad, iPhone, iPod, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This apparatus includes this label:



2 Your product

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy audio from discs, iPod/iPhone/iPad, USB devices, and other external devices, or listen to radio stations. The unit offers Digital Sound Control (DSC) and Dynamic Bass Boost (DBB) to enrich sound.

The unit supports the following media formats:




What's in the box

Check and identify the contents of your package:


- Main unit
- Remote control
- 2 x AAA batteries
- AC power cable
- 1 x MP3 link cable
- Quick start guide
- User manual
- Wall mounting instructions
- Mounting kit (2 dowels and 2 screws)

Overview of the main unit

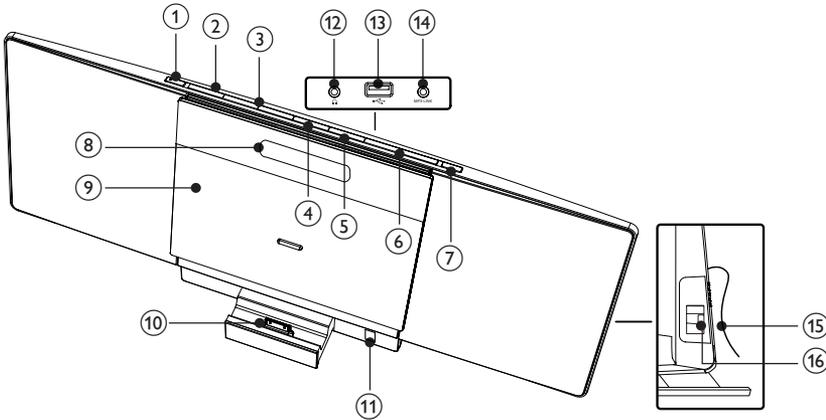

- ① **⏻**
 - Turn on the unit, switch to standby mode, or switch to Eco Power standby.
- ② **SOURCE**
 - Select a source: CD, DAB radio, FM radio, iPod/iPhone/iPad, USB, or MP3 link.
- ③ **⏮ / ⏭**
 - Skip to the previous/next track.
 - Search within a track.
 - Tune to a radio station.
- ④ **▶ || / OK**
 - Start or pause play.
 - Confirm a selection.
 - For FM radio, select stereo or mono sound output.
- ⑤ **■ / MENU**
 - Stop play.
 - Access the iPod/iPhone/iPad menu, or the DAB menu.
- ⑥ **VOLUME + / -**
 - Adjust volume.
- ⑦ **▲**
 - Open/close the disc compartment.
- ⑧ **Display panel**
 - Show current status.
- ⑨ **Disc compartment door**
- ⑩ **Dock for iPod/iPhone/iPad**
- ⑪ **Remote sensor**
 - Detect signal from the remote control.
- ⑫ **🎧**
 - Connector for a headphone.
- ⑬ **🔌**
 - Connector for a USB mass storage device.
- ⑭ **MP3 LINK**
 - Connector (3.5mm) for an external audio device.
- ⑮ **FM antenna**
 - Improve FM reception.
- ⑯ **AC MAINS**
 - Connector for the AC power cable.

Overview of the remote control

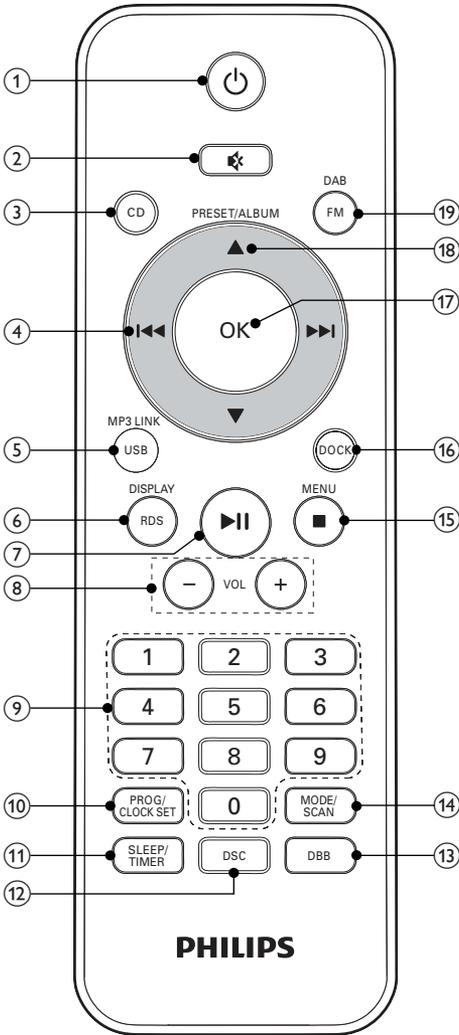

- ①
 - Turn on the unit, switch to standby mode, or switch to Eco Power standby.
- ②
 - Mute or restore volume.

- ③ **CD**
 - Select disc source.
- ④
 - Skip to the previous/next track.
 - Search within a track.
 - Tune to a radio station.
- ⑤ **USB/MP3 LINK**
 - Select USB device source.
 - Select external audio device source.
- ⑥ **RDS/DISPLAY**
 - Select RDS broadcast information.
 - Select display information during play.
- ⑦
 - Start or pause play.
 - For FM radio, select stereo or mono sound output.
- ⑧ **VOL +/-**
 - Adjust volume.
- ⑨ **Numeric keypad**
 - Select a track from a disc directly.
- ⑩ **PROG/CLOCK SET**
 - Program radio stations.
 - Set the clock.
 - Program tracks.
- ⑪ **SLEEP/TIMER**
 - Set the sleep timer.
 - Set the alarm timer.
- ⑫ **DSC**
 - Select a preset sound setting.
- ⑬ **DBB**
 - Turn dynamic bass enhancement on or off.
- ⑭ **MODE/SCAN**
 - Select repeat/shuffle play.
 - Search and store DAB radio stations.
- ⑮ / **MENU**
 - Stop play.
 - Access the iPod/iPhone/iPad menu, or the DAB menu.

- ⑩ **DOCK**
 - Select iPod/iPhone/iPad source.
- ⑪ **OK**
 - Confirm a selection.
- ⑫ **PRESET/ALBUM ▲ / ▼**
 - Skip to the previous/next album.
 - Select a preset radio station.
 - Navigate the iPod/iPhone/iPad menu.
- ⑬ **FM/DAB**
 - Select FM or DAB radio source.

3 Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the rear of the apparatus. Write the numbers here:
Model No. _____
Serial No. _____

Placement

You can place the unit on a flat surface or mount the unit on a wall.

Mount on a wall

To wall mount the unit, see the included separate sheet of wall mounting instructions.


Prepare the remote control

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine, or fire. Never discard batteries in fire.

To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

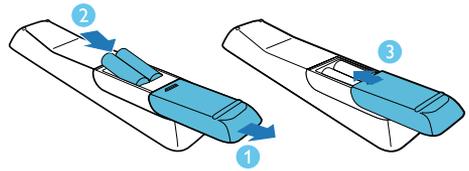

☰ Note

- If you are not going to use the remote control for a long time, remove the batteries.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Connect power

! Caution

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the rear of the main unit.
- Before connecting the AC cord, make sure that you have completed all other connections.

☰ Note

- The type plate is located on the rear of the main unit.

- 1 Connect the AC power cable to:
 - the **AC MAINS** connector on the rear of the unit.
 - the wall socket.

Store DAB stations

When you connect AC power and no DAB stations are stored, the unit prompts you to search and store all the available DAB stations.

- 1 Connect the unit to the power supply;
↳ [FULL SCAN](full scan) is displayed.

- 2 Press **OK** to start to search and store DAB stations.
 - ↳ The unit stores all the available DAB stations.
 - ↳ When all the available DAB stations are stored, the first stored DAB station is broadcast.



Note

- Position the antenna as far as possible from TV,VCR, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Set clock



Note

- You can set the clock in standby mode only.

- 1 Press ϕ to switch the unit to standby.
 - Make sure that --:-- (or clock) is displayed (see "Turn on" > "Switch to standby").
- 2 Press and hold **PROG/CLOCK SET** to activate the clock setting mode.
 - ↳ SET CLOCK is displayed.
 - ↳ The 12 hour or 24 hour format is displayed.
- 3 Press **◀▶** to select 12 hour or 24 hour format.
- 4 Press **PROG/CLOCK SET**.
 - ↳ The hour digits begin to blink.
- 5 Press **◀▶** to set the hour.
- 6 Press **PROG/CLOCK SET**.
 - ↳ The minute digits begin to blink.
- 7 Press **◀▶** to set the minute.
- 8 Press **PROG/CLOCK SET** to confirm.

Turn on

- 1 Press ϕ .
 - ↳ The unit switches to the last selected source.

Switch to standby

- 1 When the unit is turned on, press ϕ to switch the unit to standby.
 - In standby, press and hold ϕ to switch from normal standby to Eco power standby or vice versa.
 - ↳ In normal standby, the clock (if set) appears on the display panel.
 - ↳ In Eco power standby, the backlight on the display panel turns off.

4 Play

Play disc

- 1 Press **CD** to select the disc source.
- 2 Press **▲** on the unit to open the disc compartment.
- 3 Insert a disc with the printed side facing outward, and then press **▲** to close the disc compartment.
- 4 If the disc doesn't play, press **▶||**.
 - To stop play, press **■**.

Play from USB



Note

- Make sure that the USB storage device contains playable audio content.

- 1 Connect the USB storage device into the  connector on the back panel of this unit.
- 2 Press **USB** to select the USB source.
 - ↳ Play starts automatically.
 - To select a folder, press **▲▼**.
 - To select an audio file, press **◀◀ / ▶▶**.
 - To start play, press **▶||**.
 - To stop play, press **■**.

Pause/resume play

- 1 During play, press **▶||** to pause/resume play.

Skip to a track

For CD:

- 1 Press **◀◀ / ▶▶** to select another track.
 - To select a track directly, you can also press a key on the numerical keypad.

For MP3 disc and USB:

- 1 Press **▲▼** to select an album or folder.
- 2 Press **◀◀ / ▶▶** to select previous/next track or file.

Search within a track

- 1 During play, press and hold **◀◀ / ▶▶**.
- 2 Release to resume normal play.

Display play information

- 1 During play, press **DISPLAY** repeatedly to select different play information.

Repeat and shuffle play

- 1 During play, press **MODE/SCAN** repeatedly to select a play option.
 -  : the current track is played repeatedly.
 -  : all the tracks are played repeatedly.
 -  : all tracks are played in a random order.
- 2 To return to normal play, press **MODE/SCAN** repeatedly until no repeat/shuffle option is displayed.
 - You may also press **■** to cancel repeat/shuffle play.



Tip

- Shuffle play is not available when programmed tracks are played.

Program tracks

You can program a maximum of 20 tracks.

- 1** In CD/USB mode, in the stop position, press **PROG/CLOCK SET** to activate the program mode.
 - ↳ [PROG] (program) and track number begin to blink.
- 2** For MP3 tracks, press **▲▼** to select an album.
- 3** Press **◀◀ / ▶▶** to select a track number, then press **PROG/CLOCK SET** to confirm.
- 4** Repeat steps 2 to 3 to program more tracks.
- 5** Press **▶||** to play the programmed tracks.
 - ↳ During play, [PROG] (program) is displayed.
 - To erase the program, in the stop position, press **■**.
 - ↳ [PROG] disappears on the display.

5 Adjust sound

Adjust volume

- 1 During play, press **VOL +/-** to increase/decrease the volume.

Select a preset sound effect

- 1 During play, press **DSC** repeatedly to select a preset sound setting.

Enhance bass

- 1 During play, press **DBB** to turn dynamic bass enhancement on or off.
↳ If DBB is activated, DBB is displayed.

Mute sound

- 1 During play, press **M** to mute/restore the speakers.

6 Listen to radio

Listen to DAB radio

DAB (Digital Audio Broadcasting) radio broadcasts radio digitally through a network of transmitters.

Store DAB stations

Before you can listen to DAB radio, store DAB stations onto the unit.

If you connect the unit to AC power supply and no DAB station is stored, the unit prompts you to search and store all the available DAB stations (see "Get started" > "Store DAB stations").

Or

- 1 Press **FM/DAB** to turn on DAB radio.
- 2 Press **MODE/SCAN**.
 - ↳ The unit begins to perform a search.
 - ↳ When all the available DAB stations are stored, the first stored DAB station is broadcast.



Tip

- The signal icon (*) is displayed, and its position indicates a degree of signal strength. The further towards the right, the stronger the signal strength.
- If no DAB coverage is currently available or no DAB station is found, [NO DAB] (no DAB) is displayed.

Tune to a DAB station

After DAB stations are stored, you can tune to a DAB station.

- 1 In DAB mode, press **◀◀ / ▶▶** repeatedly until a station name is displayed.
- 2 Press **OK** to confirm the selection.
 - ↳ The radio immediately tunes to the selected station.



Note

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Program DAB stations manually

You can program a maximum of 20 preset DAB stations.

- 1 Tune to a DAB station.
- 2 Press **PROG/CLOCK SET** to activate program mode.
- 3 Press **▲▼** to allocate a number (1-20) to this radio station, and then press **PROG/CLOCK SET** to confirm.
- 4 Repeat the above steps to program other stations.



Note

- If a DAB station is stored under a preset location, a new DAB station assigned to this location overwrites the old DAB station.
- DAB station presets do not overwrite FM presets.

Select a preset DAB station

After the DAB stations are programmed on the unit, you can select a preset DAB station.

- 1 In DAB mode, press **▲▼** to select a preset number.

Display DAB information

In DAB mode, you may press **RDS/DISPLAY** repeatedly to select different information for the current DAB station.

Use the DAB menu

- 1 In DAB mode, press **MENU**.
↳ The first menu option is displayed.
- 2 Press **◀▶** repeatedly to display the menu options:
 - [FULL SCAN] (full scan): search and store all the available DAB stations.
 - [MANUAL] (manual): manually tune to a DAB station.
 - [DRC]: add or remove a degree of compensation for differences in the dynamic range between DAB stations. You may experiment with the options on different source materials to decide which option suits best.
 - [SYSTEM] (system): reset all DAB settings to the default settings made at the factory; display the software version of this unit; enter a stage of software upgrade.
 - [STATION] (station): display a list of available DAB stations.
- 3 Press **OK** to confirm the selection.
- 4 If a sub-option is available, repeat step 2 and step 3.

Update software (if available)

Software update for your radio may be available in future.

How to know a software update:

- register this unit at Philips website (www.philips.com/welcome) with a valid email address, and you may receive software update notification if available. Or,
- visit Philips website constantly to check if the updating information is provided.

To update software of your radio, follow these steps strictly:

- 1 Read carefully the software update instructions on Philips website.
- 2 Download the software update to your PC, and then connect the unit to the PC via the USB connector.
- 3 In DAB mode, press **MENU**.
- 4 Select [SYSTEM] (system) > [UPGRADE] (upgrade), and then follow the instructions displayed to go to the upgrade stage.
 - To select an option, press **◀▶**; to confirm a selection, press **OK**.
- 5 On the PC, follow the instructions on the screen to complete upgrade.

Listen to FM radio

Tune to a FM station

- 1 Press **FM**.
- 2 Press and hold **◀▶** for more than 2 seconds.
↳ [SEARCH] (search) is displayed.
↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **◀▶** repeatedly until you find optimal reception.
 - To achieve sound quality, press **▶||** repeatedly to select stereo or mono sound.



Note

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Program FM stations automatically

You can program a maximum of 20 preset FM stations.

- 1 In FM mode, press and hold **MODE/SCAN** for more than 2 seconds to activate automatic program mode.
 - ↳ [AUTO] (auto) is displayed.
 - ↳ All available stations are programmed.
 - ↳ The first programmed radio station is broadcast automatically.

Program FM stations manually

You can program a maximum of 20 preset FM stations.

- 1 Tune to a radio station.
- 2 Press **PROG/CLOCK SET** to activate program mode.
 - ↳ [PROG] (program) begins to blink.
- 3 Press **▲▼** to allocate a number (1 to 20) to this radio station, and then press **PROG/CLOCK SET** to confirm.
- 4 Repeat the previous steps to program other stations.



Note

- To overwrite a programmed FM station, store another FM station in its place.

Select a preset FM station

- 1 In FM mode, press **▲▼** to select a preset number.

FM stations with RDS

Radio Data System (RDS) is a service that sends additional broadcast information along with FM stations.

If you listen to a FM station with RDS signal, "RDS" is displayed.

Display RDS information

- 1 For a FM station with RDS, press **RDS** repeatedly to display various broadcast information.

7 Play iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this unit.

Compatible iPod/iPhone/iPad

The unit supports the following iPod, iPhone and iPad models.

Made for:

iPod touch (1st, 2nd, 3rd, and 4th generation)

iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)

iPhone 4

iPhone 3GS


iPhone 3G

iPhone

iPad 2

iPad


Load the iPod/iPhone/iPad

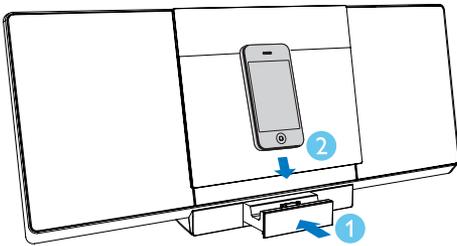

- 1 Push the dock compartment to open it.
- 2 Place the iPod/iPhone/iPad in the dock.

Install the rubber pad

If necessary, install the supplied rubber pad to keep the iPad/iPad 2 stable before you place the iPad/iPad 2.

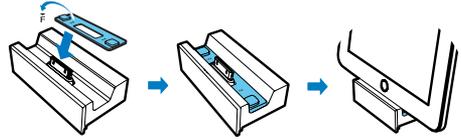

Listen to the iPod/iPhone/iPad

- 1 Make sure that the iPod/iPhone/iPad is correctly placed.
- 2 Press **DOCK** to select the iPod/iPhone/iPad source.
- 3 Play music on the iPod/iPhone/iPad.
 - To pause/resume play, press **▶||**.
 - To skip to a track, press **◀◀ / ▶▶**.
 - To search during play, press and hold **◀◀ / ▶▶**, and then release to resume normal play.
 - To navigate the menu, press **MENU**, and press **▲ ▼** to select an option, and then press **OK** to confirm.

Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad begins to charge.

Note

- The following iPod models cannot be charged: iPod classic, iPod with video, and iPod with color display.
- In Eco power standby mode, charge is not available.

8 Other features

Set the alarm timer

This unit can be used as an alarm clock. The disc/radio/USB/docked product is activated to play at a preset time.

- 1 Make sure that you have set the clock correctly.
- 2 Press **⏻** to switch the unit to standby.
 - Make sure that the clock is displayed (see "Turn on" > "Switch to standby").
- 3 Press and hold **SLEEP/TIMER**.
 - ↳ A prompt to select the source is displayed.
- 4 Press **CD**, **FM**, **USB** or **DOCK** to select a source.
- 5 Press **SLEEP/TIMER** to confirm.
 - ↳ The clock digits are displayed and begin to blink.
- 6 Press **⏮ / ⏭** to set the hour.
- 7 Press **SLEEP/TIMER** to confirm.
- 8 Press **⏮ / ⏭** to set the minute.
 - ↳ The timer is set and activated.

To deactivate or re-activate an alarm timer

- 1 Press **⏻** to switch to standby mode.
- 2 Press **SLEEP/TIMER** repeatedly to activate or deactivate timer.
 - ↳ If timer is activated, the display shows .
 - ↳ If timer is deactivated,  disappears on the display.



Note

- In MP3 link mode, the alarm timer cannot be set.
- If disc/USB/dock source is selected and the audio cannot be played, tuner is activated automatically.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

- 1 When the unit is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes).
 - ↳ When sleep timer is activated, **zZ** is displayed.

To deactivate sleep timer

- 1 Press **SLEEP/TIMER** repeatedly until **[OFF]** (off) is displayed.
 - ↳ When sleep timer is deactivated, **zZ** disappears on the display.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **MP3 LINK** to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3 LINK** connector (3.5mm) on the unit.
 - the headphone connector on an external device.
- 3 Start to play the device (see the device's user manual).

Headphone

Plug headphones (not supplied) into the  connector on the unit to listen through the headphones.

9 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2 x 20W RMS
Frequency Response	60 Hz - 16 kHz, ±3 dB
Signal to Noise Ratio	>65dBA
MP3 link input	500mv, 20kohm

Tuner

Tuning Range	FM:87.5 - 108 MHz DAB:174.928MHz-239.200MHz (Band III)
Tuning grid	50 KHz
FM sensitivity - Mono	26 dB
DAB sensitivity - (EN50248)	< -95 dBm
Total Harmonic Distortion	<2%
Signal to Noise Ratio	>55 dB
Number of presets	20 (FM)

Speakers

Speaker Impedance	8 ohm
Speaker Driver	2 X 2.5" full range
Sensitivity	>82 dB/m/W

General information

AC power	AC 100-240V~, 50/60 Hz
Operation Power Consumption	32 W
Eco Standby Power Consumption	<1 W
USB Direct	Version 2.0/1.1
Dimensions	
- Main Unit (W x H x D)	500 x 217 x 98 mm
Weight	
- Main Unit	2.614 kg

USB playability information

Compatible USB storage devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this system)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bitrate (data rate): 32-320 Kbps and variable bitrate
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3 files, and is not shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc)

or MP3 files with extension .dlf are ignored and not played.

- AAC, WAV, PCM audio files
- DRM protected WMA files (*.wav, *.m4a, *.m4p, *.mp4, *.aac)
- WMA files in Lossless format

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

Maintenance

Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

10 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the unit switches to standby automatically 15 minutes after a play reaches the end and no control is operated.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

Remote control does not work

- Before pressing any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Aim the remote control directly at the sensor on the front of the unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted with the print side facing inward.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend and adjust the FM antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.



sense and simplicity

**Philips Electronics Australia Limited and Philips New Zealand Limited
Warranty against Defects**

In this warranty:

We or us means Philips Electronics Australia Limited ACN 008 445 743 or Philips New Zealand Limited (Company Number 1723), and our contact details are set out at the end of this warranty;

You means the purchaser or the original end-user of the Goods;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or New Zealand; and

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand.

If you require assistance with the operation of the product, its features or specifications please call the Philips Consumer Care Centre on 1300 363 391 in Australia or 0800 658 224 in New Zealand.

Australia: Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This is not a complete statement of your legal rights as a consumer.

New Zealand: Our Goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. This guarantee applies in addition to the conditions and guarantees implied by that legislation.

Additional Warranty:

In addition to the rights and remedies that you have under the Australian Consumer Law, Consumer Guarantees Act of New Zealand or any other applicable law, we provide the following warranty against defects:

1. If, during the first 12 months from their date of purchase from the Supplier (**Warranty Period**), the Goods prove defective by reason of improper workmanship or materials and none of your statutory rights or remedies apply, we will repair or replace the Goods without charge.
2. We do not have to repair or replace the Goods under this Additional Warranty if the Goods have been used for a commercial purpose; misused, improperly or inappropriately installed, operated or repaired; abused; damaged; or not maintained in accordance with the manufacturer's instructions.
3. Even when we do not have to repair or replace the Goods, we may decide to do so anyway. In some cases, we may decide to substitute the Goods with a similar alternative product of our choosing. All such decisions are at our absolute discretion.
4. All such repaired, replaced or substituted Goods continue to receive the benefit of this Additional Warranty for the time remaining on the original Warranty Period.
5. This Additional Warranty is limited to repair, replacement or substitution only. As far as the law permits, we will not be liable for any loss or damage caused to property or persons arising from any cause whatsoever.
6. In order to claim under this Additional Warranty you must telephone us on 1300 363 391 in Australia or 0800 658 224 in New Zealand within the Warranty Period. You will be asked for details of the Goods, a description of the defect and your personal details. Upon accepting your claim, we shall assist you with either returning the Goods to the Supplier for replacement or to the most convenient Philips Authorised Service Centre for your Goods to be repaired. In some case we may require that you return to the Goods to us (at the address below) for repair, replacement or substitution.
 - * All returned Goods must be accompanied by satisfactory proof of purchase which clearly indicates the name and address of the Supplier, the date and place of purchase and identifies product. It is best to provide a legible and unmodified receipt or sales invoice.
 - * You must bear any expense for return of the Goods or otherwise associated with making your claim under this Additional Warranty.
7. This warranty is only valid and enforceable in Australia and New Zealand.

Contact us or the place of purchase for further details.

Philips Electronics Australia Limited
Level 1, 65 Epping Rd,
North Ryde, SYDNEY NSW 2113
Consumer Care: 1300 363 391
E-mail: pceinfo.australia@philips.com
Website: www.philips.com/support

Philips New Zealand Limited
Level 2, 1 Nugent St,
Grafton, AUCKLAND, 1023
Consumer Care: 0800 658 224
Email: pceinfo.australia@philips.com
Website: www.philips.com/support

August 2011



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

DCB3070_79_UM_V1.1

