

DAB Docking Entertainment System

DCB310


Register your product and get support at
www.philips.com/welcome

QUICK START



Thanks for buying **Philips DCB310 DAB Docking Entertainment System**.
Our **Quick Start** guides you through just some of the features on the set.
Please read our instruction booklet to really rise & shine!

PHILIPS

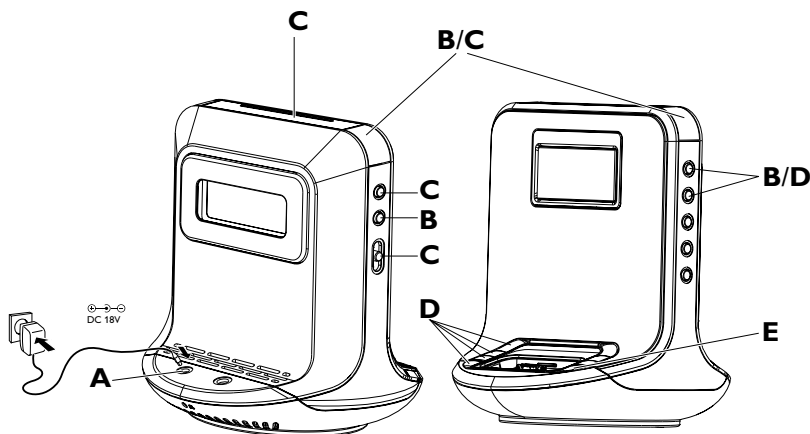

ENGLISH

Step A

- Connect the supplied mains adapter to the set's DC jack (15 V) and the plug into a wall outlet.

Step B

How to set the Clock & Alarm time

1. Press and hold **MENU** or **ALM1 / ALM2** until the hour digits flash.
2. Press and hold **PRESET +/-** to adjust time.
3. Press **MENU** or **ALM1 / ALM2** to confirm.
4. Repeat the **steps 2~3** to complete all the other time items setting.

Helpful hints:

- **ALM1 / ALM 2 icon is displayed when ALM1 / ALM 2 is activated.**

Step C

Selecting the Alarm mode

In standby mode, slide the **iPod/FM/DAB/BUZZER** to select desired mode.

Helpful hints:

- If you have selected **FM/DAB** alarm mode, make sure you have properly tuned to a station before turning off the set (See **Tuning to radio station**).
- If you have selected **DOCK** alarm mode, make sure you have docked the compatible player (iPod), or buzzer mode will be selected automatically.

3 ways to switch off the alarm

- Either press briefly: **POWER** or **REPEAT ALARM/ BRIGHTNESS CONTROL**.
- Press **ALM1** or **ALM2**.

Step D

Programming FM station

1. Press **FM / DAB** once or more to select FM.
2. Press and hold **AUTO-SCAN** for more than 2 seconds to auto store all available FM stations.
3. Press **PRESET +/-** until a desired station is displayed.

Tuning to DAB station

1. Press **FM / DAB** once or more to select DAB to start auto search of available DAB stations.
2. Press **TUNING +/-** to change DAB stations.
3. Press **▶** to confirm.
4. To perform a local scan (in UK), press **AUTO-SCAN**. To perform a full scan (outside UK), press and hold **AUTO-SCAN**.

Step E

Playing Apple iPod using DCB310

1. Select the correct dock adaptor from the supplied, then snap the adaptor into the dock to provide a snug fit for the player.
- The indication on the adaptor fits specific iPod player.
2. Snap the compatible iPod player into the dock connector.
3. Press **iPod / AUX** once or more to select iPod.
- The connected player will play automatically.

Helpful hints:

- To navigate iPod menu and confirm its selection on DCB310, use **MENU, TUNING +/-** and **▶**.
- By using the buttons (**▶, ◀, ▶▶** and **VOLUME**) on DCB310, the following iPod playback features are available: Play/Pause, selecting next/previous track, fast forwarding/rewinding and changing volume.
- Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor".

