

Introduction:


Philips strives to continually bring you the best experience from our products. To obtain the optimal playback and latest features, you are highly recommended to upgrade the firmware of your player.

Preparation for firmware upgrade:

For upgrade via a USB flash drive:

- A PC with an archive utility that supports the ZIP-format (e.g. WinZip for Windows).
- A USB flash device with enough free space to hold the firmware file. An empty one is advised to avoid a crash among files.

Upgrade Procedure:

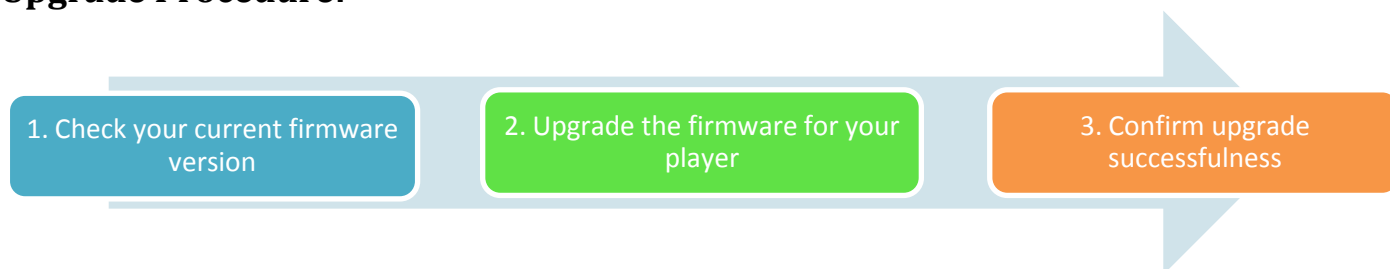

Step 1: Check your current firmware version


1. Turn on the player.
2. Press the “5865” button on the remote control.
3. The firmware version will be displayed on LED screen.
4. Compare the firmware version displayed to the latest version. If the existing firmware in your player is of an earlier version than the new release, please proceed to **Step 2**.

Otherwise, the latest firmware is installed and hence an upgrade is not needed.

Step 2: Upgrade the firmware for your player

1. Download firmware.

Click on the Download icon at the top of the screen to download the new firmware package to your computer.

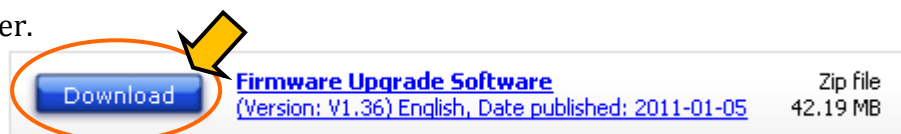

2. Transfer firmware to a USB flash drive.

Warning: DO NOT remove the USB flash device during the firmware upgrade procedure. If an error occurs during the upgrade, retry the procedure. If you need further assistance, please call your local Philips Consumer Care Center or use our Live Chat function.

- i. Extract the firmware upgrade folder from the downloaded firmware package.

Note: Please DO NOT rename either the folder name or the file name in the folder to avoid an upgrade corruption.

- ii. Copy the extracted folder with the firmware file to the root directory in the USB flash drive.

3. Upgrade the firmware to the player

Warning: DO NOT press any buttons or interrupt the main supply during the upgrading process, otherwise the product may become defective.

- i. Turn on the player.
- ii. Select the USB mode.
- iii. Insert the USB flash drive into the USB slot.
- iv. Player will search the upgrade file in the USB automatically and show “**READING**” on the display.
- v. Player will upgrade automatically and show “**UPDATE**” on the display. Please wait for about one minute.
- vi. After upgrade completed, the player will change to **STANDBY mode**.

Step 3: Confirm upgrade successfulness

1. Go over **Step 1 Check your current firmware version** to verify if the new firmware is correctly upgraded.
2. If the latest firmware has not been installed, repeat ‘**Step 2 Upgrade the firmware for your player**’ and ‘**Step 3 Confirm upgrade successfulness**’.