

Quick Start Guide






Step A *Connect*

Step B *Setup*





Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

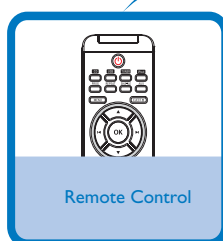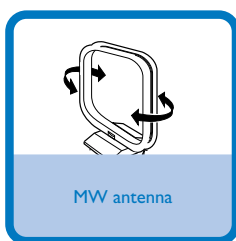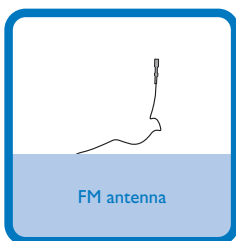

Pull out the plastic protective sheet before use.

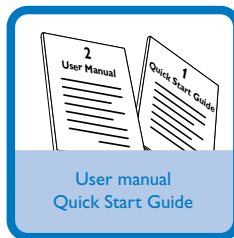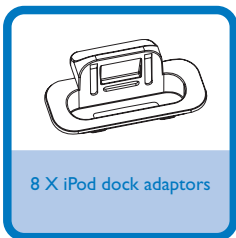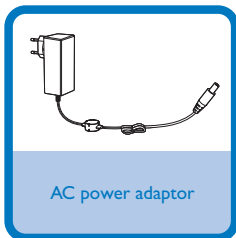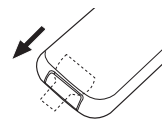

PHILIPS


Step A **Connect**

1 Connect the MW and FM antennas.

2 Connect the AC power adaptor of the system.

Tip


See the User Manual for how to connect other equipment to this system.

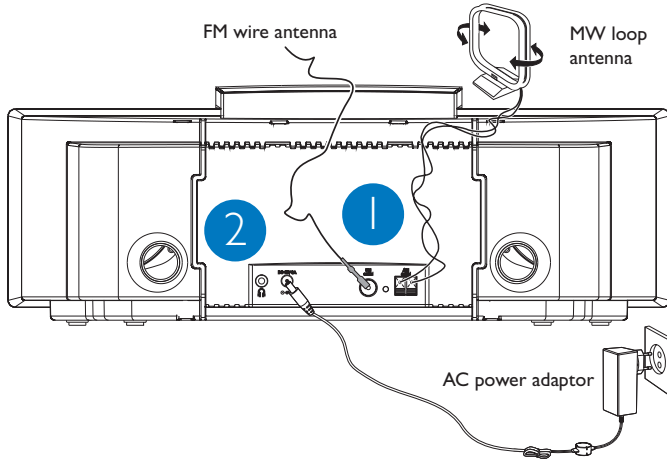

Step B **Setup**

Setting the clock

- 1 In standby mode, press **PROG**.
→ **SET CLOCK** is displayed briefly. Then, **12HR** or **24HR** is displayed.
- 2 Press **ALBUM/PRESET +/-** (or **◀ / ▶** on the remote control) to select clock mode.
→ The clock digits for the hours continue to flash.
- 3 Press **ALBUM/PRESET +/-** (or **◀ / ▶** on the remote control) to set the hours.
- 4 Press **PROG** again.
→ The clock digits for the minutes flash.
- 5 Press **ALBUM/PRESET +/-** (or **◀ / ▶** on the remote control) to set the minutes.
- 6 Press **PROG** to confirm the time.

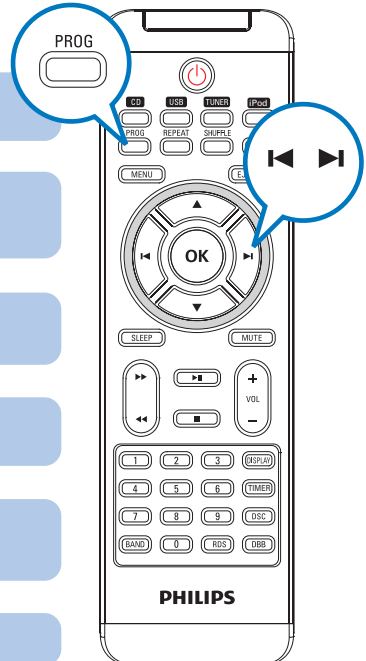

Playing a disc

1

Insert a disc into the disc loader.
→ Make sure the label side is facing up.

2

Press **▶||** to start playback.


3

To stop playback, press **■**.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

1

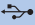Insert the USB device's USB plug into the socket  on the set.

2

Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.

3

Play the USB's audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

1


Press **SOURCE** repeatedly (or **TUNER** on the remote control) to select the tuner source.

2

Press **PROG** for more than two seconds to program all available stations in order of waveband.

3

Press **ALBUM/PRESET +/-** (or **▲ / ▼** on the remote control) until the desired preset station is displayed.

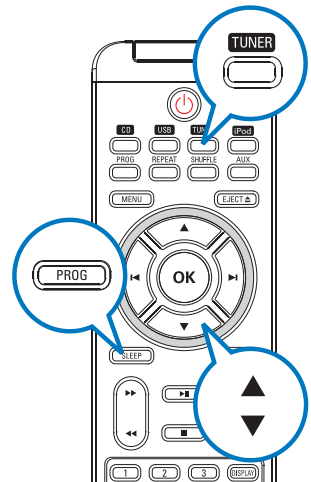

Playing Apple iPod using DCM230

1

Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.

2

Correctly place the compatible iPod player into the dock.

3

Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.

4

Power on your iPod player.

5

Select and play your favourite songs stored in the iPod player.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.

<http://www.philips.com>

