

Digital Cable Receiver

Quick start guide



Call the **UPC Customer Service** department on **0900 5008080** (€ 0.10 per minute) available **Monday to Friday 8AM to 9PM** and **Saturday 8AM to 6PM** to activate the subscription.

- 1** Connect
- 2** Set up
- 3** Enjoy

What's in the box?



Digital Cable Receiver



Confirmation card



Quick Start Guide



User manual



UPC Smart card



HDMI cable



Coaxial cable



Power cord



Remote control and 2 batteries

PHILIPS

1 Connect

This Quick Start Guide applies when:

- Your TV set is fitted with an HDMI socket input.
- Your cable wall socket is connected to a cable network.

When connected as described below, volume control is performed via your TV set.

A- Before connecting


Check if the UPC smart card is inside the front slot.

If this is not the case, slide it in the slot:



- 1 Disconnect your TV set from the mains.
- 2 If you are a UPC subscriber, pull open the flap, then insert the UPC smart card in the slot of the Digital Cable Receiver with the chip facing down.

B- Connecting

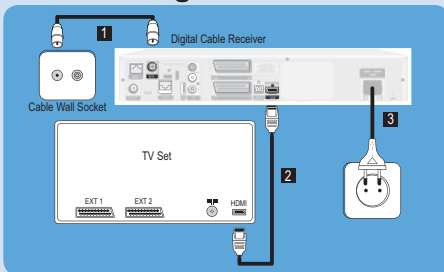

- 1 Connect the coaxial cable from the cable wall socket to the RF IN socket at the rear of the Digital Cable Receiver.
- 2 Connect the HDMI cable to the HDMI input of the TV set and to the HDMI socket at the rear of the Digital Cable Receiver.
- 3 **Do not plug the Digital Cable Receiver to the mains now.**

2 Set up

A- Inserting batteries

Insert the two batteries supplied in the remote control.



B- Searching channels

- Plug your Digital Cable Receiver to the mains using the supplied power cord. The device display indicates Init, then UPC.
- Check that the country selection screen displays on the TV screen.



- Select the country and then press **OK**. If no picture is displayed or the picture quality is poor, refer to section Troubleshooting.




- Enter the 3-digit activation code found in the user manual, and then press **OK**.

Refer to chapter **Additional Information** of the user manual to see the list of activation codes.




- Check that the settings displayed match the settings provided by UPC, and then press **OK**. A new screen appears, indicating the signal strength and quality.

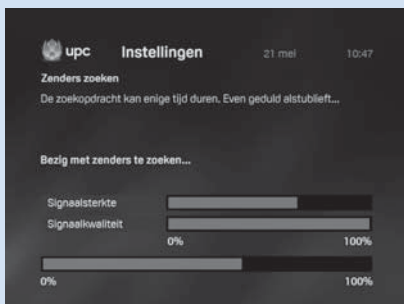

- Check the bargraphs for adequate signal strength and quality, and then press **OK** to search for channels. The search progress is reported on-screen by the bottom bargraph.



- When the search has been successfully completed, the number of TV and Music channels found is displayed.

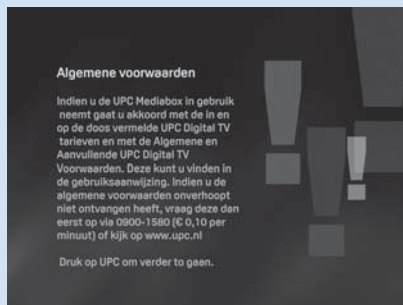

- Press **UPC** to accept the terms and conditions. A short description of all the features in the Digital Cable Receiver with a UPC subscription will be displayed, and a test will start to check that setup is done correctly.

3 Enjoy

A- Changing channels while watching digital TV

- Using the numerical keys of the remote control
 - Dial a number to tune the corresponding channel.
- Using the **CH+** or **CH-** key
 - Press **CH+** to tune the next channel.
 - Press **CH-** to tune the previous channel.
- Using the programme information bar

To select a channel from the information bar:

 - Press **OK** to display the Programme Information Bar.
 - Press **◀ / ▶** to switch to another channel.
 - Press **OK** to watch the programme in full screen.

B-Volume control

Your remote control is set to perform volume control through a Philips TV set. If you have a TV from another brand, refer to chapter **Additional Information** of the user manual to adapt the brand setting of your remote control to your TV set.

C-TV Guide

While watching digital TV:

- Press **guide** to consult the current programme.
- Use **▲/▼/◀/▶** keys to select the desired option.

- Press **UPC** or **back** to exit the TV Guide.



Troubleshooting

Problem	Remedy
The display on the front panel does not light up.	Check that the mains cord is correctly connected. Disconnect this cord and reconnect it to ensure it is in place. Check that power is available at the wall socket.
No sound or picture but the front panel displays a channel number.	Check the connections. Check the connection between the cable wall sockets and the device.
The remote control does not operate your Digital Cable Receiver.	Make sure the device is on. Check the remote control mode is set to STB (press the UPC key if necessary). Make sure you are pointing the remote control at the device front panel. Check the batteries of your remote control.
If the quality of the signal is poor, do a test by going to channel 999.	Step 1 Press the UPC key on the remote control and then press 9 9 9. The test channel is now displayed. A message appears after a few seconds, telling you to press the red-coloured key on your remote control.



Step 2
Press **●** on the remote control to automatically execute five tests. The results of those tests appear under each other on screen. If one of the tests comes back with an error as result, we recommend that you check the connections of all plugs and cables and execute the test on channel 999 again. If the test still comes back with an error, please contact UPC Customer service.

Need help?

User Manual: See the user manual that came with your Digital Cable Receiver.

Online: Go to www.philips.com/support



PHILIPS and the PHILIPS Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used by Pace Micro Technology PLC under license from Koninklijke Philips Electronics N.V.



2008 © Koninklijke Philips Electronics N.V.
All rights reserved
3111 176 54781