

IMPORTANT SAFETY INSTRUCTIONS - Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



AC
Polarized Plug

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

EL 6475-E004: 02/B

Important notes for users in the U.K.

Mains plug
This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:
 1 Remove fuse cover and fuse.
 2 Fix new fuse which should be a BS1362.5 Amp, A.S.T.A. or BSI approved type.
 3 Refit the fuse cover.
 If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.
Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:
 • Connect the blue wire to the terminal marked N or coloured black.
 • Connect the brown wire to the terminal marked L or coloured red.
 • Do not connect either wire to the earth terminal in the plug, marked E (or ±) or coloured green (or green and yellow).
 Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.
Copyright in the U.K.
 Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Norge

Typeskilt finnes på apparatens underside.
Observer: Nettstrykeren er sekundært innkoplek. Den innebygde nettdelen er derfor ikke frakoplek nettet så lenge apparatet er tilsluttet nettkontakten.
 For å redusere faren for brann eller elektrisk støt, skal apparatet ikke settes for regn eller fuktighet.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Class II equipment symbol
 This symbol indicates that the unit has a double insulation system.



PHILIPS DGX 220 / 17
 Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE

Philips Consumer Electronics North America
 One Philips Drive, P.O. Box 14810, Knoxville, TN 37914-1810
 Phone: 1-800-531-0039
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Multimedia Speaker System

This Quick Set-up Guide is applicable for :

➤ **DGX 220**



DGX 220

Easy To Use Digital Audio

The DGX220 provides digital quality audio without the need for a soundcard and is completely self-powered over the USB bus, making a bulky power adaptor unnecessary.

The system even includes the award winning Sound Agent 2 software to optimize and give you full control over your audio. Thank you for choosing the Philips DGX220 bus-powered speaker system.




PHILIPS




PHILIPS

Installation

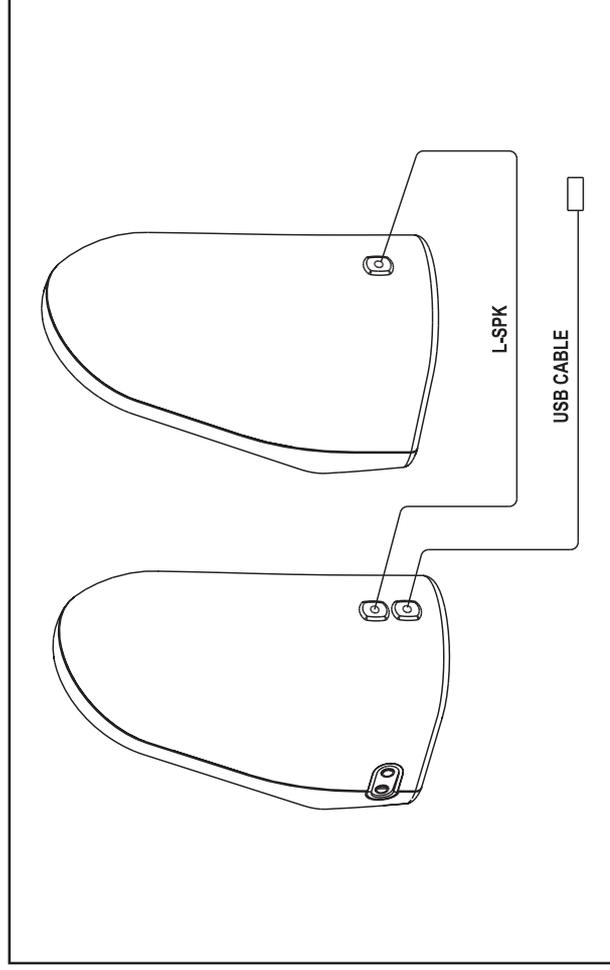

English	Français	Swedish	Deutsch
<ol style="list-style-type: none"> Connect USB cable to PC Install Sound Agent 2 software from CD-ROM. 	<ol style="list-style-type: none"> Connectez le câble USB au PC. Installez le logiciel Sound Agent 2 partir du CD-ROM. 	<ol style="list-style-type: none"> Anslut USB-kabeln till datorn. Installera programvaran Sound Agent 2 från CD-ROM-skivan. 	<ol style="list-style-type: none"> USB-Kabel an den PC anschließen. Sound Agent 2 Software von der CD-ROM installieren.
Netherlands	Español	Danish	Italiano
<ol style="list-style-type: none"> Sluit de USB-kabel aan op de PC. Installeer Sound Agent 2 met de cd-rom. 	<ol style="list-style-type: none"> Conecte el cable USB al ordenador. Instale el programa Sound Agent 2 del CD-ROM. 	<ol style="list-style-type: none"> Slut USB-kablet til pc'en. Installer Sound Agent 2 softwaren fra CD-ROM'en. 	<ol style="list-style-type: none"> Collegare il cavo USB al PC. Installare il software Sound Agent 2 dal CD-ROM.
Russian	Polish	中文	Turkish
<ol style="list-style-type: none"> Подсоедините USB кабель к компьютеру. Установите программное обеспечение Sound Agent 2 с компакт-диска. 	<ol style="list-style-type: none"> Podłącz przewód USB do komputera. Zainstaluj oprogramowanie Sound Agent 2 z dostarczonej płyty CD-ROM. 	<ol style="list-style-type: none"> 連接USB線至電腦 把光碟上聲源媒介2軟件下載 	<ol style="list-style-type: none"> USB kablosunu PC'ye bağlayın. CD-ROM'dan Sound Agent 2 yazılımını yükleyin.
Finnish	Norwegian	Portuguese	
<ol style="list-style-type: none"> Yhdistä USB-johdotietokoneeseen. Asema Sound Agent 2 -ohjelma CD-ROM-levyltä. 	<ol style="list-style-type: none"> USB-kabelen koplees til PC. Installer programvaren Sound Agent 2 fra CD-ROM. 	<ol style="list-style-type: none"> Ligue o cabo USB ao PC. Instale o software Sound Agent 2 a partir do CD-ROM. 	

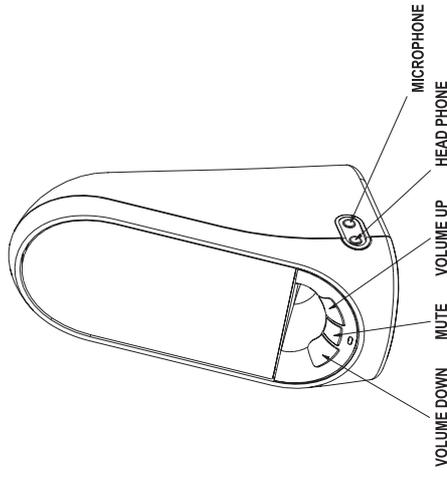

~ EXPLANATION ~

- 1) Headphone (Blue)**
For private listening a headphone can be connected
- 2) Microphone (Pink)**
An external microphone can be connected
- 3) Volume up and down**
To adjust the volume higher or lower
- 4) Mute**
Press to mute and unmute the sound
- 5) USB cable**
Provides power and audio signal from PC or Notebook

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkopleet. Den innebygde nettdelen er derfor ikke frakopleet nettet så lenge apparatet er tilsluttet nettkontaktene.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

Deutschland

Hiermit wird bescheinigt, daß dieses Gerät in Übereinstimmung mit den Bestimmungen der Amtsblattverfügung 1046/1984 funkentstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.