


Quick Use Guide (cont'd)

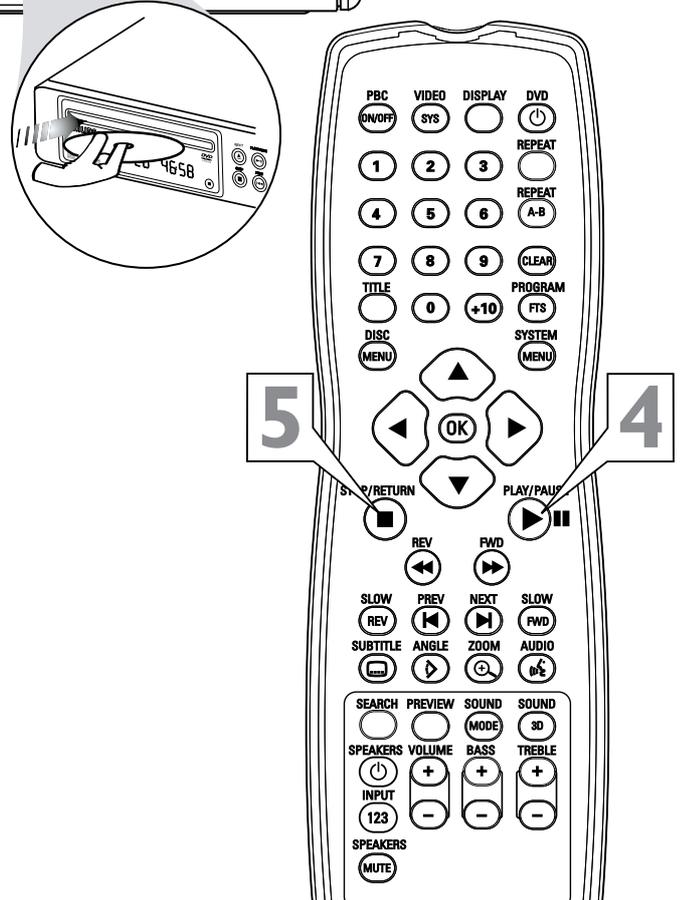

To simply play a Disc, follow these steps. Additional playback features are described in the accompanying owner's manual.

- 1** Press **POWER** on front of the DVD Player to turn on the DVD Player. (You also can turn on the DVD Player by pressing DVD on the remote control).
- 2** Turn on your TV. Set it to the correct Video In channel. You should see the DVD Player's blue screen saver on the TV (if no Disc is in the DVD Player).
- 3** Gently insert a disc into the disc slot on the front of the DVD Player. Make sure the label is facing up. If the Disc (DVD) is two-sided, make sure the side you want to play is facing up.
- 4** Playback may start automatically. If not, press **PLAY/PAUSE** . If a Disc menu appears, use the and OK buttons or the Number buttons to select features or start playback from a menu. Follow the instructions in the Disc menu.
- 5** To stop playing the Disc, press **STOP/RETURN** .

 


Playable Discs

This DVD Player will play the following types of Discs:



DVD
(Digital Video Disc)



MP3 files



Video CD



CD-R (CD-Recordable)



Super Audio CD
(CD-layer only)



Audio CD
(Compact Disc Digital Audio)



Super Video CD



CD-RW (CD-Rewritable)

Region Codes

DVDs must be labeled for ALL regions or for Region 1 in order to play on this DVD Player. You cannot play Discs that are labeled for other regions. If one of these logos appears on your DVD or its case, it should play on this DVD Player.



Color Systems

Recordings are made according to a color system. The most common color system in the United States is NTSC.

This DVD Player is compatible with NTSC and PAL. **Make sure the Discs you play were recorded in NTSC or PAL and your TV is NTSC or PAL compatible.** Look for the color system of the DVD on the DVD or on the Disc case.

