

1. Introduction

The upgrade version of this software is **Version 1.23**

2. Key Features added in this software version

This software version includes:

- Fix the problems
 - MP3-CD files cannot be read
 - MP3-CD files cannot be completely read
-

3. Software Upgrade Disc Preparation

Tools Required

You will need the following items :

- PC (Pentium III 300MHz processor or higher)
 - CD-R/RW writer and writing application software
 - Blank CD-R or CDRW disc
 - Broadband / High speed internet connection
-

4. How to download the software to your computer

- 1) Right mouse button click on the file and click ‘**Save Target As...**’ to save the zip file into your PC.
 - 2) Unzip the .zip file and extract files into your PC.
-

5. Software Version Verification Procedure

It is important to write down the system version information of your set before you start the upgrade procedure. This information is also useful in case you need to call Philips Customer Care Center.

- Open the tray door of the player and press “**display**” or “**onscreen**” on the remote control and check the software version.
-

6. Steps to upgrade DVD622

1. Rename files to “**build.img**” and “**upgrade.ver**” if it is not already named in this manner.
2. Burn the files to blank CD R or CDRW, using the following settings:
 - File System CD-ROM ISO Level 2
 - Mode 1/2/XA
 - Character set ISO 9660
 - Finalised, single session
 - **Write speed slow (e.g. 2x, 4x)**

Finalize the disc. (The application may do this automatically.)

NOTE : Packet writing application for drag & drop copying cannot be used for creating an upgrade disc. Use only a dedicated CD writing application allowing 'disc at once' recording.

No UDF setting as well.

3. Put the CD-R into the player.
4. Once the OSD menu appears, press “**OK**” to start upgrade. Remove the CD-R when the tray opens automatically. Upgrading of the software will continue.
5. Once the software is upgraded, player will be restarted automatically.
6. The whole process should not take more than 5 minutes.

Caution: Do not unplug or power off the set until upgrade is completed.

7. After the upgrade

Do confirm the software version by checking the system version.
Please follow the procedure described in the section “**Software Version Verification Procedures**”.

8. Software History

Software Version 1.23

- Fix the problems
 - MP3-CD files cannot be read
 - MP3-CD files cannot be completely read