


1 Connect DVD recorder

- 1 Remove the antenna cable plug from your TV (or Satellite Receiver/Cable Box). Connect it to the **AERIAL** input socket at the back of the DVD recorder.
- 2 Use the supplied antenna cable to connect the DVD recorder's **RF. OUT** output socket to the antenna input socket at the back of your TV set.
- 3 Use the supplied scart cable to connect the DVD recorder's **EURO AV1 AUDIO/VIDEO** socket to the SCART socket at the back of your TV set.
- 4 Connect the power cable from the DVD recorder's ~ **MAINS** to the power supply.

Helpful Hints:

If your TV does not have the above-mentioned connectors, please refer to the user manual for more information on others possible connection to your TV set.

2 Prepare the remote control

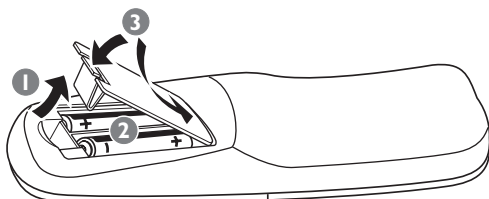

3 Start first installation

- 1 Press **STANDBY-ON** on the DVD recorder to switch it on.
 - 2 Switch on the TV set and select the correct video in channel.

NO PICTURE! Press the **CHANNEL ▲ ▼** button on the TV to select the correct video in channel, for example, 'EXT', '0', or 'AV'.
 - 3 Press **SYSTEM MENU** to access the setup menu. Press **▲ ▼** to select an item in the menu. Press **▶** to access the next level options. Press **◀** to go back previous level options. When you complete, press **OK** to confirm your selections and press **SYSTEM MENU** to exit.
- **Channel auto search,**
In {GENERAL} select {Auto Programming}. Press **▶** to start automatic TV channel search. Once the TV channel search complete, the total number of channels will be saved in the tuner's memory.
 - **Clock set,**
In {GENERAL} select {Clock Set}. Press **OK** to confirm the time and clock setting. Press **▲ ▼** to change the first digit and press **◀ ▶** to go to the previous or next digit field. Once complete, press **OK** to confirm.

The DVD recorder is ready for use!
See next page for basic recording and playback.

