 
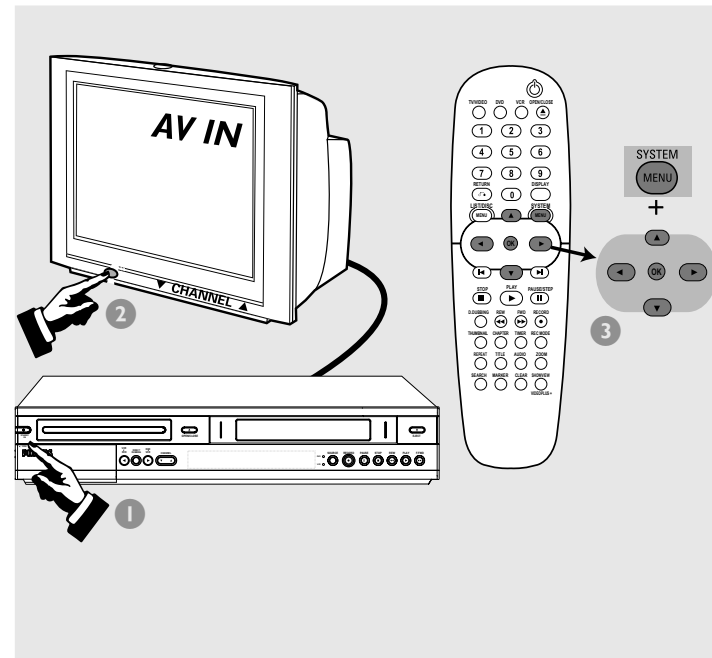 


QUICK USE GUIDE

DVDR3320VR

SGP/SL/0512_05

English

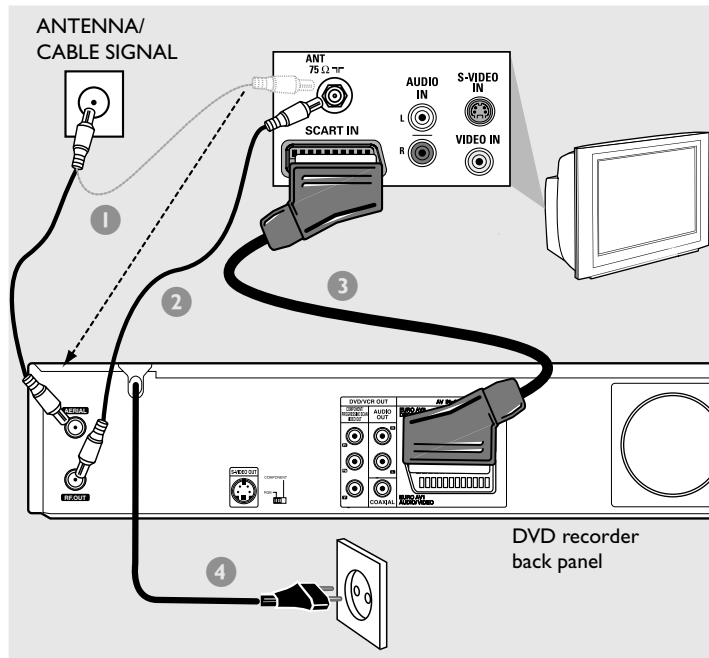


1 Connect DVD recorder

- 1 Remove the antenna cable plug from your TV (or Satellite Receiver/Cable Box). Connect it to the **AERIAL** input socket at the back of the DVD recorder.
- 2 Use the supplied antenna cable to connect the DVD recorder's **RF. OUT** output socket to the antenna input socket at the back of your TV set.
- 3 Use the scart cable to connect the DVD recorder's **EURO AV1 AUDIO/VIDEO** socket to the SCART socket at the back of your TV set.
- 4 Connect the power cable from the DVD recorder's ~ **MAINS** to the power supply.

Helpful Hints:

If your TV does not have the above-mentioned connectors, please refer to the user manual for more information on others possible connection to your TV set.

2 Prepare the remote control


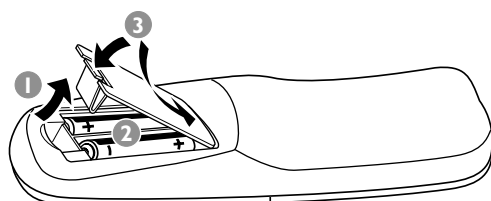


3 Start first installation

- 1 Press **STANDBY-ON** on the DVD recorder to switch it on.
 - 2 Switch on the TV set and select the correct video in channel.
NO PICTURE! Press the **CHANNEL** button on the TV to select the correct video in channel, for example, 'EXT', '0', or 'AV'.
 - 3 Press **SYSTEM MENU** to access the setup menu.
Press **▲ ▼** to select an item in the menu.
Press **▶** to access the next level options.
Press **◀** to go back previous level options.
When you complete, press **OK** to confirm your selections and press **SYSTEM MENU** to exit.
- **Channel auto search,**
In {GENERAL} select {Auto Programming}.
Press **▶** to start automatic TV channel search.
Once the TV channel search complete, the total number of channels will be saved in the tuner's memory.
 - **Clock set,**
In {GENERAL} select {Clock Set}.
Press **OK** to confirm the time and clock setting.
Press **▲ ▼** to change the first digit and press **◀ ▶** to go to the previous or next digit field.
Once complete, press **OK** to confirm.

The DVD recorder is ready for use!
See next page for basic recording and playback.

... cont.

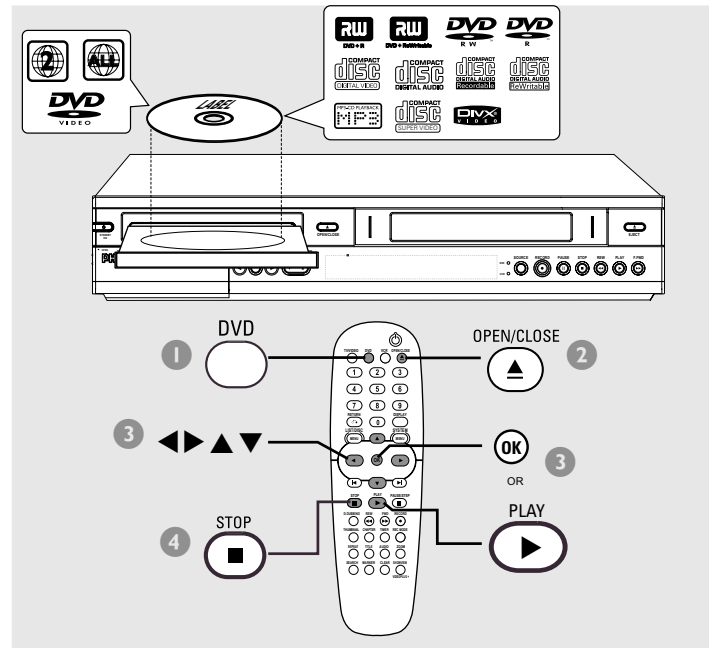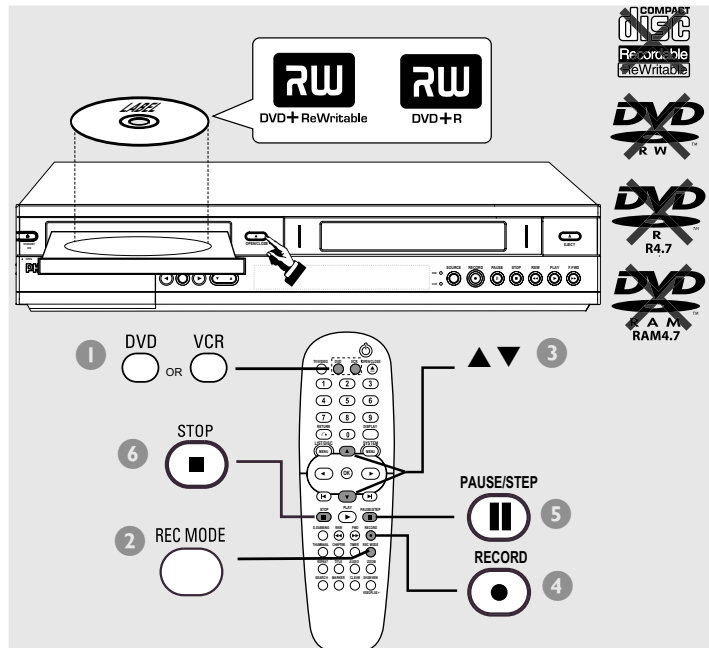

4 Basic recording from a TV

- 1 Switch on the DVD Recorder, press **VCR** or **DVD** button to select (VCR or DVD) mode for recording. Insert a recordable DVD+R(W) with the label side facing up.
- 2 Press **REC MODE** repeatedly to select a desired recording mode. It defines the picture quality and the maximum recording time for a disc.
DVD: SP (Standard quality),
LP (Low quality),
XP (High quality),
EP (Extended quality),
VCR: SP (Standard play),
LP (Long play).
- 3 Press **CHANNEL ▲ ▼** to select the TV programme number you wish to record.
→ If you wish to record from additional device (e.g. Video Cassette Recorder), press ▲ ▼ on the remote control to select the correspond external input channel.
For example, select { AV2 } if you have connected the VCR to **EURO AV2 DECODER** scart socket at the back of the DVD recorder.
- 4 Press **RECORD ●** to start recording.
 - If required, you can press **RECORD ●** repeatedly to recording time length.
- 5 During recording, you may press **PAUSE/STEP II** to pause the recording and press **RECORD ●** to continue.
- 6 To stop the recording, press **STOP ■**.

5 Start Playback a disc

- 1 Press **DVD** to select DVD mode.
- 2 Press **OPEN/CLOSE ▲** to open the disc tray, then insert a disc with the label side facing up.
Press **OPEN/CLOSE ▲** again to close the disc tray.
- 3 Playback will start automatically.
→ If a disc menu appears, press ▲ ▼ to navigate within the menu, highlight a title and press **OK** or **PLAY ►** to start playback.
- 4 To stop playback, press **STOP ■**.

NO SOUND! Connect the AUDIO L/R (red/white) sockets at the back of the DVD recorder to the correspond AUDIO input sockets on a TV set, stereo system or receiver. Turn on the connected system and select the appropriate channel.

Before using the Remote Control,

- Press **DVD** on the remote control for DVD functions.
- Press **VCR** on the remote control for VCR functions.

To play the DVD+R on other DVD players, you must finalise it first

- 1 Press **SYSTEM MENU** on the remote control.
- 2 Press ▲ ▼ to select { **Finalise** } in the menu and press **OK** to start finalising the DVD+R.

Once the DVD+R is finalised, no further recordings and editings can be made to the disc. Unfinalise a DVD+R is not possible.



Detailed playback features and additional functions are described in the accompanying user manual.