

DVDR3320V/37 Firmware Upgrade

Firmware Upgrade

We have developed a firmware upgrade to improve your product.

This firmware version improves: [Click here for more details](#)

1. This is the latest software available which has been installed in your set at the factory. There are currently no new software releases.

Upgrade Procedure

Step 1 Check your current version

First check your current firmware version to see if you need to upgrade:

- With power on, press and hold the Record and Play button on the Front panel for 5 seconds => **DVD Software** and **LOADER Software** version will be displayed.

Step 2 Download Firmware upgrade



Click the link to save the software on your computer.

Step 3 Burning Upgrade on CD-R / CD-RW

1. Extract the files by unzipping the zipped file. (**Do not rename the filename**)
2. Write the extracted files – not the zip file – onto a blank CD-R or CD-RW disc, using the following settings:
 - File System CD-ROM Joliet
 - File name length : max 31 chars (ISO Level 2)
 - Mode : 2/XA
 - Character set : ASCII
 - Single session
 - Write Speed : Low
3. Finalized the disc. (The application may do this automatically.)

Tip: For more information on burning software we refer to two popular burning software programs

www.nero.com

www.easycdcreator.com

Step 4 Apply Upgrade to your Set

1. Insert the disc what you made into the tray.
2. **PRESS REC** will be displayed on the screen.
3. Press **REC** button and the software starts.
4. The tray will be opened.
5. The set will auto-reboot and the upgrading progress completed.

Note: Do not press any buttons or interrupt the mains supply during the entire upgrading process, otherwise the set may become defective.

Your product is successfully upgraded!

Firmware upgrade history

Firmware Version 050728A

Release Date 29 July 2005

This is the latest software available which has been installed in your set at the factory. There are currently no new software releases.