

1 Connect


Start with the 'Basic connection'.
If you have a VCR, follow the instructions for 'Connection with VCR or similar device'.

Basic Connection

A Before Connecting

Unplug the antenna cable that is currently connected to your TV.

B Connecting

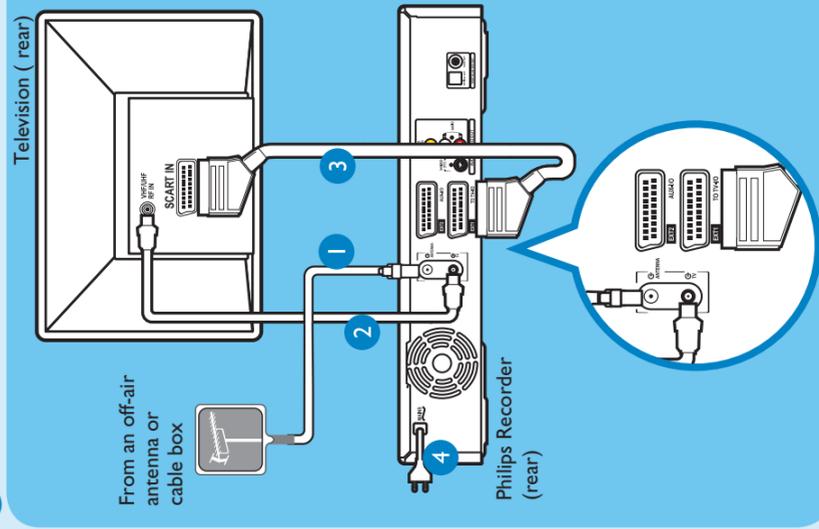

- 1 Disconnect the antenna cable from your TV and connect it to the **ANTENNA G** socket on this recorder.
- 2 Use the supplied RF coaxial cable to connect the **TV G** socket on this recorder to the Antenna In socket on the TV.
- 3 Use the supplied scart cable to connect the EXT1 TO TV-I/O scart socket on this recorder to the SCART IN socket on your TV.
- 4 Plug in the power cable from the recorder to an AC power outlet.


Note See the accompanying user manual for other possible connections (e.g. S-VIDEO, Component Video).

Connection with VCR or similar device

A Before Connecting

Your new Philips Recorder replaces the VCR for your recording needs. First, unplug all the connections from your VCR.

B Connecting

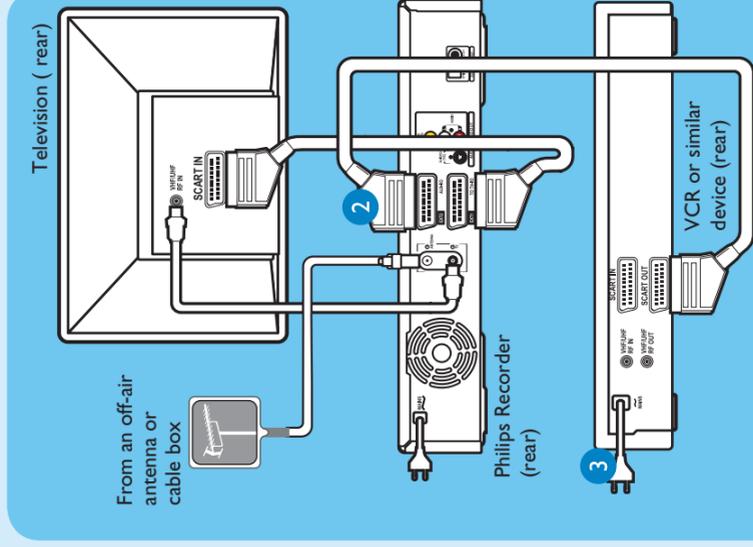

- 1 Follow step 1 to 4 of 'Basic connection' to connect this recorder before you proceed to step 2 below.
- 2 Use another scart cable (not supplied) to connect to the EXT2 AUX-I/O scart socket on this recorder to the SCART OUT socket on your VCR.
- 3 Connect the power cable from the VCR to an AC power outlet.

Note In this setup, the VCR cannot record TV programmes.

2 Set up

A Finding the viewing channel

- 1 Press **STANDBY-ON** on the recorder. The recorder will display 'IS TV ON?'.
- 2 Switch on the TV. You should see the settings menu.



Note If you have connected to your VCR, ensure it is turned off or in standby before proceeding.

- 3 In case you don't see the recorder's Settings Menu, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT button) until you see the menu. This is the correct viewing channel for the recorder.

B Start basic setup

Use the recorder's remote control and follow the on-screen instructions to complete the installation.


- 1 Select the desired Audio language, Subtitle language, Menu language, your country of residence and the TV shape.
- Note** Press **OK** to select the options in the menu.
- 2 Press **SETUP** to exit the settings menu.
- 3 Press **OK** to activate automatic channel search. This takes a few minutes to complete.



- 4 Change or confirm the date and time.
- 5 Press **SETUP** to complete the basic installation.

Note To change or update the tuner and date/time settings:

- 1) Press **DVD** and followed by **STOP**.
- 2) Press **SETUP**.
- 3) Press **down** to select { Setup } in the menu and press **right**.

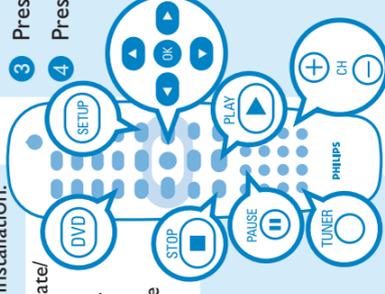


3 Enjoy

About the Time Shift Buffer (TSB)

Once you switch on the recorder, press the **TUNER** button on the remote control. The blue **HDD ACTIVE** light on the front panel will light up. The currently selected TV programme will be stored in a temporary hard disk storage called the '**TSB**' (Time Shift Buffer). The TSB can store up to 6 hours of programmes temporarily.

Press **OK** once to display the Time Shift video bar.

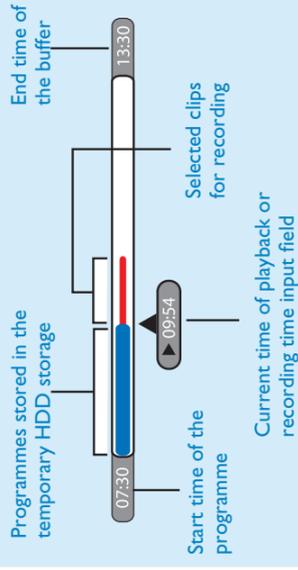

The contents on the time shift video bar will be cleared when you press **STANDBY ON** (⏻).

Note A confirmation message on clearing the Time Shift Video bar will be appeared if you press the REC MODE or DV button on the remote control or access the { Setup } option in the setup menu.

Watch TV – Pause live TV

Your Philips Recorder allows you to control the TV programme. You can **PAUSE** it as if you were in control of the live broadcast.

- 1 Turn on your recorder and press **CH + / -** to select a TV programme.
- 2 Press **PAUSE** to suspend it.
- 3 Press **PLAY** to continue.
- 4 Press **TUNER** to return to the live broadcast.

3 Enjoy

A Select the recording quality

The recording mode determines the picture quality and the actual recording time to the hard disk. The same recording mode will be used when you copy the recorded titles in the HDD to a recordable DVD.

Press **REC MODE** repeatedly until the desired recording mode appears on the screen.

Record Mode	Hours of recordings can be stored on the HDD or an empty 4.7GB DVD recordable disc.	
	DVDR3300H HDD (80GB)	DVDR3300H HDD (160GB) DVDR3300H HDD (250GB) DVDR3300H DVD-RW
HQ (high quality)	16	30
SP (standard play)	32	60
LP (long play)	48	90
EP (extended play)	64	120
SLP (super long play)	96	180
SEP (super extended play)	130	250
		400

Note Changing the recording mode will not affect the length (6 hours) of the Time Shift buffer.

B Contents in the temporary HDD storage

- Press **VIEW** to view what is temporarily stored in the hard disk storage.
- Press **SEARCH** to search for the scene where you want to start recording, then press **PAUSE**.

Note You can also use the **JUMP** buttons to search.

- Press **REC** and key in the total recording time required.

Note You can press the REC button repeatedly to extend the recording time in 30-minute increments, up to 6 hours.

- If you want to stop the recording before the scheduled time, press **STOP**.

Note To cancel the recording, press **CLEAR**.

Need help?

User Manual

See the user manual that came with your Philips Recorder

Online

Go to www.philips.com/support



Start playback

A From the hard disk



- Press **HDD** to view the recorded titles in the hard disk.


- Press **UP** or **DOWN** to select a title.

- Press **PLAY** to start playback.

Note To access the edit menu, highlight the title and press **RIGHT**. Press **LEFT** to exit the edit menu.

B From a disc

- Hold down **STOP** until the disc tray opens. Load a disc and close the disc tray.
- Playback will start automatically. If the disc menu appears, press **PLAY** to start playback.
- Press **T/C** during playback to access the various playback options.
- Press **STOP** to stop playback.

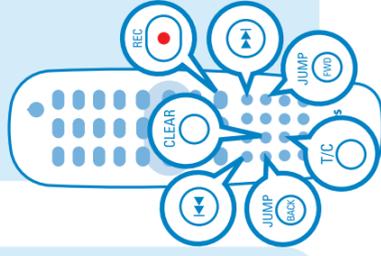


Type	Record	Playback	Edit
RW DVD+RW	✓	✓	✓
RW DVD+R	✓	✓	✓
DVD DVD-RW	✓	✓	✓
DVD DVD-R	✓	✓	✓
DVD DVD VIDEO	✗	✗	✗
CD AUDIO CD	✗	✗	✗
CD VIDEO CD	✗	✓	✗
CD DATA CD	✗	✗	✗
CD DATA CD	✗	✗	✗

Quick Start Guide



- Connect
- Set up
- Enjoy


What's in the box?

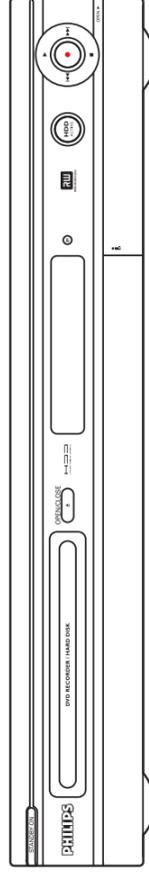


HDD & DVD Player / Recorder




Quick Start Guide

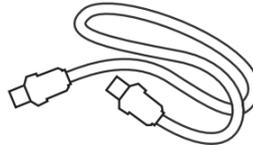

RF-coaxial cable

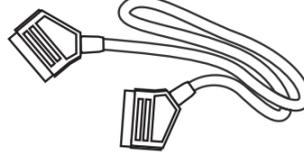

Start cable

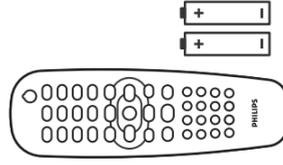

Remote Control and 2 batteries



User Manual



2005 © Koninklijke Philips N.V.
All rights reserved.
I2 NC 3139 246 17152
www.philips.com

PHILIPS