


## 1 what's in the box

### A Main Unit



### B Remote Control

includes 2x AA batteries

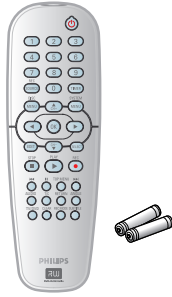


### C RF coaxial cable



### D Scart cable



## 2 connect DVD recorder

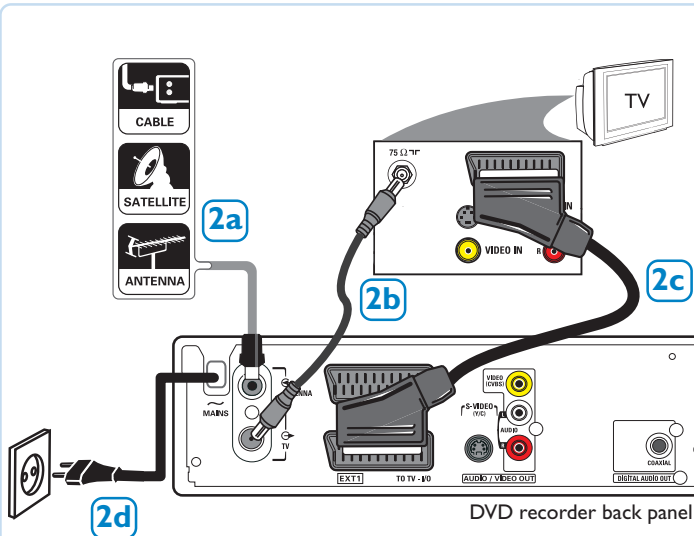

**2a** Connect existing antenna cable/satellite signal (or from the Cable/Satellite Box [RF OUT or TO TV]) to the **ANTENNA** input socket at the back of the DVD recorder.


**2b** Use the supplied RF coaxial cable to connect the DVD recorder's **TV** output socket to your TV's antenna input socket.

**2c** Use the supplied Scart cable to connect the DVD recorder's **EXT 1 TO TV-I/O** socket to the matching SCART input socket at the back of your TV.

**2d** Connect the power cable from the DVD recorder's **~ MAINS** to the AC power outlet.


**Helpful Hint:**  
For additional connection diagrams, see **User Manual pages 12~19**.

## 3 Start initial setup

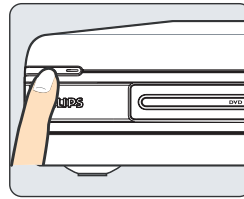


**3a** Press **STANDBY-ON** on the DVD recorder to turn it on.


**Note:** For successful installation, your cable/satellite box must be turned on.

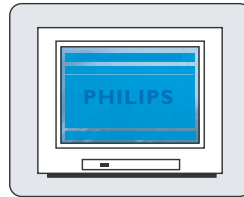


**3b** Turn on the TV to the correct programme channel for the input socket ('EXT', '0', 'AV').  
→ The blue PHILIPS DVD background screen will appear on the TV.

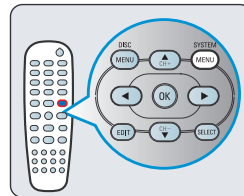


**3c** Press **SYSTEM MENU** on the remote control.  
→ Use **▲ ▼** keys to go through the menu. Select an item by pressing **▶**, and confirm a setting by pressing **OK**.

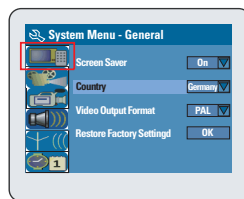


**3d** Highlight **Country** and press **▶**.  
Select the country of your residence.  
Select { **Country** } and press **OK** on the remote control.

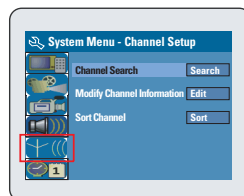

**3e** Highlight **Channel Search** and press **▶**.  
Setup and install TV channels.  
Select { **Channel Search** } and press **OK** on the remote control to start automatic TV channel search.

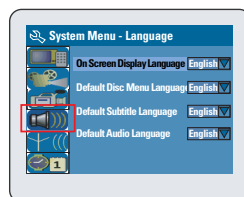

**3f** Highlight **On Screen Display Language** and press **▶**.  
Select the language.  
– select TV On-Screen Display language.  
– select default Disc Menu language.  
– select default subtitle language.  
– select default audio language.

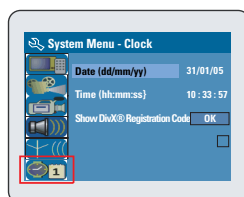

**3g** Highlight **Date** and press **▶**.  
Set the Date and Time.  
Use the **numeric keypad 0-9** to input the date/time, then press **OK** to confirm.

**3h** Press **SYSTEM MENU** to exit.

**The DVD recorder is ready for use!**  
See next page for basic recording and playback.

