


3 Enjoy

Start Playback

- 1 Press **OPEN/CLOSE** on the remote control, load in a disc and close the disc tray.
- 2 Press **DISC MENU** and use **up** or **down** keys to select a title.
- 3 Press **PLAY/PAUSE** to start playback.
- 4 To stop playback, press **STOP** .

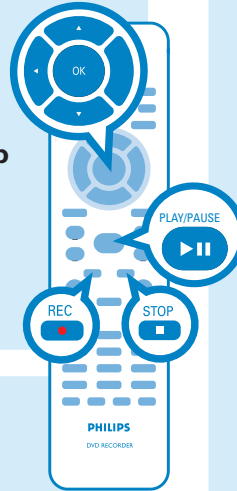

Start Recording


A Recording from the TV or an external device

- 1 Insert a recordable DVD disc in the tray.

Types of discs for recording

	DVD+RW		DVD+R		DVD+R DL
	DVD-RW		DVD-R		

- 2 Press **SOURCE** repeatedly to select the source to record from. (eg, TUNER, CAM1, CAM2, DV, EXT1, EXT2 or EXT3.)
 - To record a TV program, use **CH + / -** to scroll through the channels, or press **0** **-9** to select the channel that you want to record.
- 3 Press **REC MODE** repeatedly to select the mode of recording quality.
- 4 Press **REC** to start recording, press **REC** again to automatically record 30 minutes.

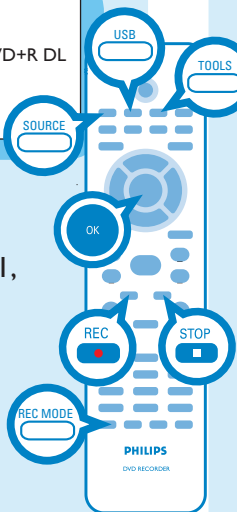


A Recording from the TV or an external device (continued)

- 5 To end recording, press **STOP** . 'UPDATE' will be displayed on the recorder.
- 6 To playback the recording, press **DISC MENU** , select the title and press **PLAY/PAUSE** .

B Archiving from a USB device

- 1 Insert a recordable DVD disc in the tray.
- 2 Connect the USB flash drive into the USB port on the front panel of the recorder.
- 3 Press **TOOLS** to access the USB mode.
 - Select { **Copy to DVD** } and press **OK** .
 - The USB content menu appears.

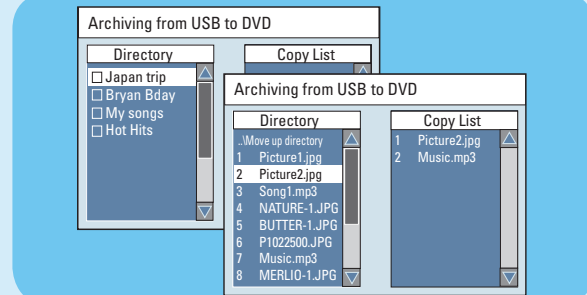


- 4 Select the folder you want and press **OK** to access the folder/ album.
- 5 Create a copy list, highlight the file you want to copy and press **SELECT** .
 - The selected files will appear on the right { **Copy List** } screen.
 - To remove the file from the copy list, press **CLEAR** .
- 6 Once the copy list selection is complete, press **REC** to start archiving.
 - A message will appear. Select **OK** in the menu and press **OK** to proceed.

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy

What's in the box?

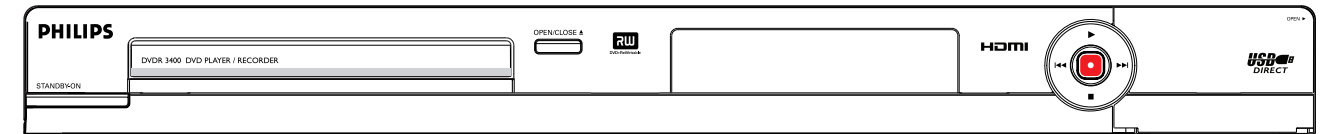


DVD Player/ Recorder

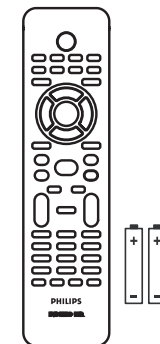


Remote Control and 2 batteries



RF Coaxial Cable

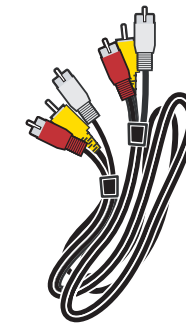

Audio/video cable

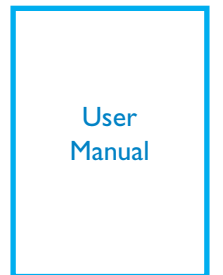

User Manual

Need help?

User Manual

See the user manual that came with your Philips recorder.

Hotline

Call 1-888-PHILIPS (1-888-744-5477) for our operators.

Online

Go to www.philips.com/usasupport.




2006 © Philips Consumer Electronics
A Division of Philips Electronics North America Corp
P.O. Box. 671 539 Marietta, GA 30006 0026
All rights reserved.

Printed in China
12 NC 3139 245 22142

1 Connect


Start with the 'Basic Connection.'
If you have a Cable Box or Satellite Receiver, follow the instructions for 'Connection with a Cable Box or Satellite Receiver'.

Basic Connection

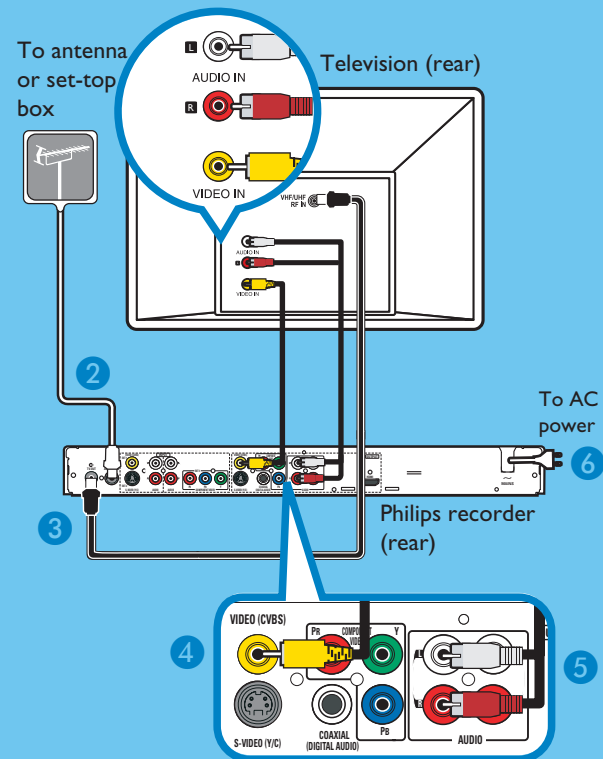

- 1 Before connecting, unplug the antenna cable that is currently connected to your TV.
- 2 Connect the antenna cable to the **ANTENNA-IN** jack on the recorder.
- 3 Use the supplied RF coaxial cable to connect the **TV-OUT** jack on this recorder to the Antenna In jack on the TV.
- 4 Use the supplied video cable (yellow plug) to connect the **VIDEO (CVBS) OUTPUT** jack on this recorder to the VIDEO IN jack on the TV.
- 5 Use the supplied audio/video cable (red/ white plugs) to connect the **AUDIO OUTPUT** jacks on this recorder to the AUDIO IN jacks on the TV.
- 6 Connect the power cable from the recorder to an AC power outlet.

Connection with a Cable Box or Satellite Receiver

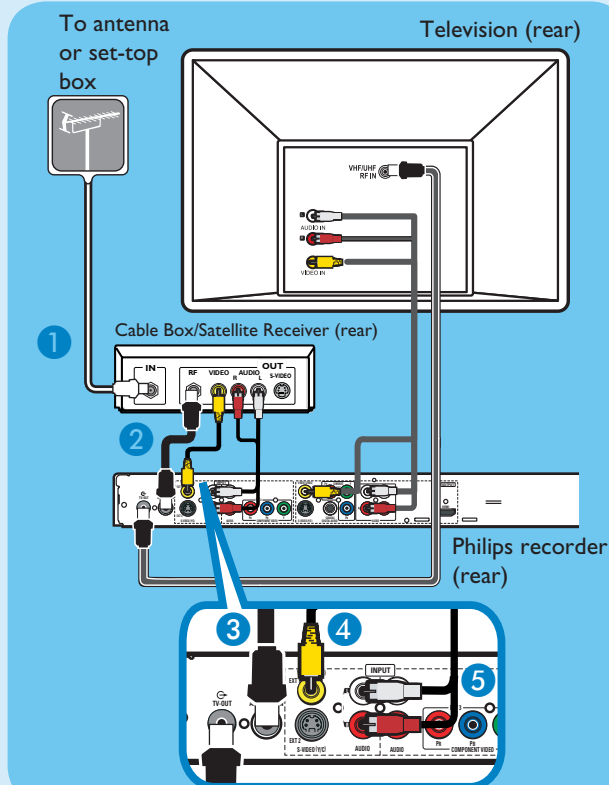

- 1 Keep the existing antenna connection from the Antenna TV signal to the Cable Box/ Satellite Receiver.
- 2 Use an antenna cable to connect the **ANTENNA-IN** jack on the recorder to the RF OUT jack on the Cable Box/Satellite Receiver.
- 3 Follow steps 3 to 5 under 'Basic Connections' before you proceed to step 4 below.

 
Note The antenna connection may be different depending on the Satellite Receiver/Cable Box. Refer to its user manual for proper antenna connection.

- 4 Use the yellow video cable (not supplied) to connect the **VIDEO (CVBS) INPUT** jack on this recorder to the VIDEO OUT jack on the Cable Box/ Satellite Receiver.
- 5 Use the audio cable (red/white plugs – not supplied) to connect the **AUDIO INPUT** jack on this recorder to the AUDIO OUT jack on the Cable Box/ Satellite Receiver.

For additional connection diagrams, see the accompanying User Manual.

2 Set up

A Select the video input channel on your TV

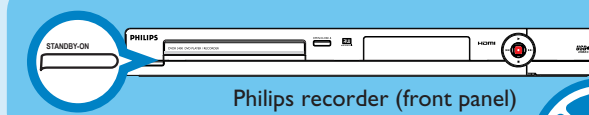

- 1 Press **STANDBY-ON** on the recorder
- 2 Turn on the TV.
- 3 Press **SETUP** (SETUP).
- 4 Select the TV's video input channel that corresponds to the jacks connecting the recorder to the TV.

Note Video Input selection varies for different brands/models of TVs. Consult the user manual that came with your TV if none of the below is successful.


- Press channel 2 on your TV. Then press the channel down button to locate the video input channel. (This channel is usually located between the lowest and highest TV channels.)
- OR, for some TVs, there may be a button on the TV's remote control that accesses the video input channel labeled SOURCE, AV or SELECT.
- OR, select the Video Input Channel from the TV's on-screen menu system.



Note Consult your TV manufacturer if none of the above is successful.

B Initial Installation

- 1 Press **SETUP** (SETUP) on the remote control.

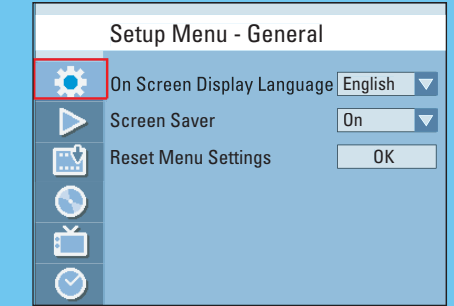

Note Use up ▲ and down ▼ keys to toggle through the options. Select an item by pressing right ►. To confirm a setting, press **OK** (OK).

- 2 Select the **OSD language**.
 - Remain in **Settings** mode, select { **On Screen Display Language** } and press **right** ► to access the options.
 - Select the desired language option and press **OK** (OK) to confirm your selection.
- 3 **Setup and install TV channels**.
 - Highlight **Channel Search** and press **right** ►. Select { **Tuner Input Source** } and press **OK** (OK).
 - { **Cable** } – if the recorder is connected directly to the cable signal or through a set-top box.
 - { **Air** } – if the recorder is connected directly to an indoor or outdoor antenna.

Note Press **OK** (OK) to confirm your selection.

- Select { **Channel Search** } and press **OK** (OK) on the remote control to start automatic TV channel search.
 - Note** If using a cable box/ satellite receiver, you may only pick up one channel. Leave the recorder on this channel and change channels at the cable box or satellite receiver.

- 4 **Set the date and time**.
 - Highlight **Date/Time** and press **right** ►. Select { **Date (mm/dd/yy)** } or { **Time (hh:mm:ss)** } and press **OK** (OK).

Use the **numeric keypad** 0 -9 to input the date/time, then press **OK** (OK) to confirm.

Note To further fine-tune the date and time settings, see the user manual "CLOCK Settings".

- 5 Press **SETUP** (SETUP) to exit.