

DVDR3430V_EU Firmware Upgrade

Firmware Upgrade

We have developed a firmware upgrade to improve your product.

This upgrade is applicable for the following models:

DVDR3430V/05, DVDR3430V/31, DVDR3430V/51 and DVDR3430V/58.

Note: Before you proceed to upgrade, please be reminded that you need to do configuration again each time after firmware upgrade!

Upgrade Procedure

Step 1 Check your current version

 
First check your current firmware version to see if you need to upgrade:

1. When TV shows Philips wallpaper, close disc tray with no disc.
2. Press <0>, <0>, <0>, <9>, <OK> on the Remote Control.

Note: In case the firmware version does not appear on the screen, eject and close the disc tray to reset, and repeat step 2.

3. The software version will be displayed on the TV screen as
 "DVDR3430V_EU_Vxx_xx, Drive: 45.04.xx.xx", or
 "DVDR3430V_EU_Vxx_xx, Drive: 61.06.xx.xx".
4. Compare the version shown on screen with this firmware upgrade version,
 "DVDR3430V_EU_V09_11, Drive: 45.04.05.10" or
 "DVDR3430V_EU_V09_11, Drive: 61.06.01.10".
5. If the current software version number is lower than the above, proceed to **step 2**.
6. Otherwise, you do not need to upgrade.

Step 2 Download Firmware upgrade



Click the link to download the new firmware package on your computer. The package is compressed into a single ZIP archive: **DVDR3430V_EU_V09_11.zip**.

Step 3 Burning the firmware on CD-R / CD-RW

1. Extract the firmware upgrade files from the ZIP archive:
 DVDR3430V_EU_V09_11.CUB
 PHILIPS_45040510.BIN
 PHILIPS_61060110.BIN
(Do not rename the filenames)
2. Burn **ALL** the extracted files: ".CUB" and ".BIN" files (not the ZIP file) onto a blank CD-R or CD-RW disc, using the following settings:
 - File System: ISO 9660 + Joliet
 - File name length : max 11 chars = 8+3 (Level 1)
 - Mode : 2/XA
 - Character set : ISO 9660 (ISO norme CD-ROM)
 - No multi session
 - Write Speed : Low
3. Finalize the disc. (The application may do this automatically.)

Tip: For more information on burning software we refer to two popular burning software programs

www.nero.com
www.easycdcreator.com

Step 4 Upgrading the firmware of your recorder

1. Power up the recorder and eject the disc tray.
2. Place the upgrade disc on the disc tray and close the tray.
3. If the disc is recognized as an upgrade disc, the local display of recorder will show "SW UPGD". The TV screen will show a dialog box titled "Disc Upgrade"
4. **Note:** The recorder will indicate "Unknown Disc" in the following 2 situations.
 - When the software upgrade is not meant for your recorder ([Check the applicable models above](#))
 - Problem with writing of CD-ROM. Try again with a different CD-ROM if possible.
5. To proceed with the upgrade, press <OK> on the remote control. You can cancel the upgrade at this point by navigating to <CANCEL> button on TV and pressing <OK> on the remote control.
6. If you proceed with the upgrade, the upgrading status bar is shown on TV screen.
7. Follow the on-screen instruction to proceed software upgrade and loader upgrade.
8. When the upgrading is completed, the local display of the recorder will show "DRV OK", and the recorder will eject the tray.
9. Remove the upgrade disc and press <OK> on the remote control. The recorder should close the tray and restart automatically after about 10 seconds.
10. **Note:** If the recorder does not close the tray, do not be alarmed. Simply press <STANDBY> on the remote control to wake up the recorder and the tray will be closed immediately.

Your product is successfully upgraded!

Firmware upgrade history

Firmware Version V09_11

Release Date Feb 21 2008

This upgrade software improves the following performance:

- Improved supportability for hybrid DVDs