

3 Enjoy

Start recording

A Record from TV or an external device

- 1 Insert a recordable DVD disc in the tray.

Types of discs for recording



- To record a TV programme, Press **0 - 9** to select the preset channel to record.

Note If you have used Option B in 'Basic Connection', press **SOURCE** repeatedly to select 'EXT2'. Use the remote control of your cable box to select the TV programme to record.

- To record from a connected device, press **SOURCE** repeatedly to select the video source to record (DV, EXT2 or EXT3).

Note Press **REC MODE** repeatedly to select a preferred recording mode.

Record Quality	Hours of recording that can be stored on an empty DVD recordable disc.	
	DVD±R/ DVD±RW	DVD+R Double Layer
HQ (high quality)	1	1 hr 55 mins
SP (standard play)	2	3 hrs 40 mins
SPP (standard play plus)	2.5	4 hrs 35 mins
LP (long play)	3	5 hrs 30 mins
EP (extended play)	4	7 hrs 20 mins
SLP (super long play)	6	12 hrs

- 2 Press **●** to start recording. Press **●** again to add recording time in 30 minutes increments.
- 3 To end recording, press **■**. 'UPDATE' is displayed on the recorder.
- 4 To playback the recording, press **DISC**, select the title and press **▶||**.

Start playback

A Play from disc

- 1 Press **▲** to open the disc tray. Load a disc and close the disc tray.
- 2 Press **DISC MENU**.
- 3 Use **◀▶▲▼** keys to reach the title/file you want to play and press **▶||** to start.

B Play from USB device

- 1 Insert the USB device to the USB port.
- 2 Press **USB** to show the contents list.
- 3 Select the preferred content and press **▶ right**.
- 4 Select a data file (MP3, WMA, DivX and JPEG) and press **▶||** to start playback.

Register your product and get support at:

www.philips.com/welcome


DVDR3600

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy

 
What's in the box?

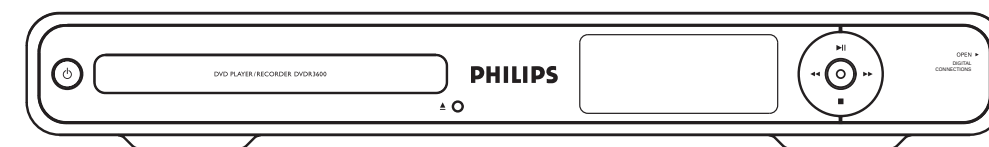


DVD Player/ Recorder

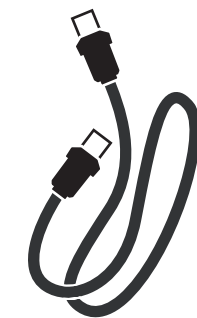 

RF Antenna Cable

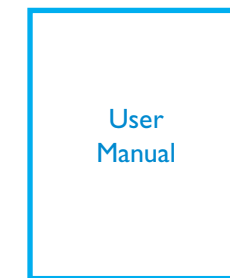 

User Manual

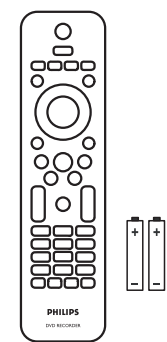 

Remote Control and 2 batteries

Need help?

User Manual

See the user manual that came with your Philips recorder.



2008 © Koninklijke Philips N.V.
All rights reserved.

12 NC 3139 245 29201

 
PHILIPS

1 Connect

Basic Connection

Before Connecting

Select one of the following basic connections (**A** or **B**) according to the type of connecting devices you have.

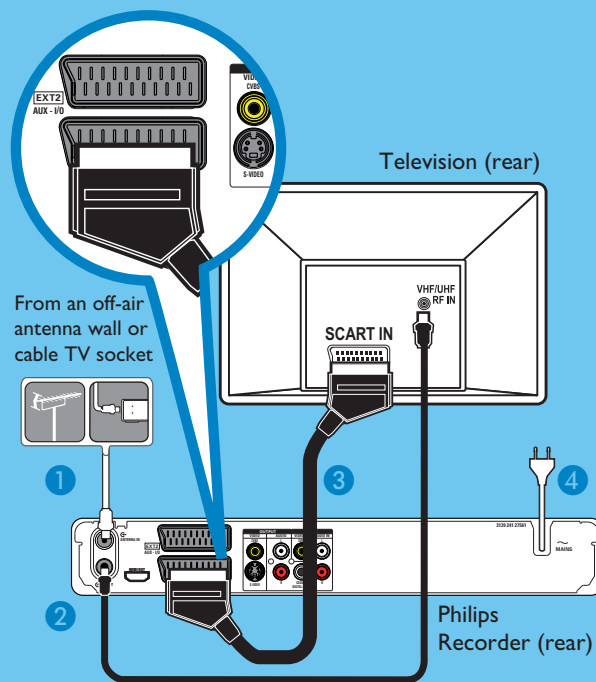


Option A

Use this connection if you are connecting the antenna cable directly from the antenna wall socket or from a cable TV socket.

- 1 Unplug the antenna cable that is connected to your TV and plug it into the **ANTENNA-IN** socket on this recorder.
- 2 Connect the supplied RF antenna cable from the **TV-OUT** socket on the recorder to the Antenna In socket on the TV.
- 3 Connect a scart cable (not supplied) from the **EXT1 TO TV-I/O** socket on the recorder to the Scart input socket on your TV.
- 4 Plug in the power cord from the recorder to an AC power outlet.

 Note See the accompanying user manual for other possible connections (e.g. Composite Video, Component Video, S-VIDEO).

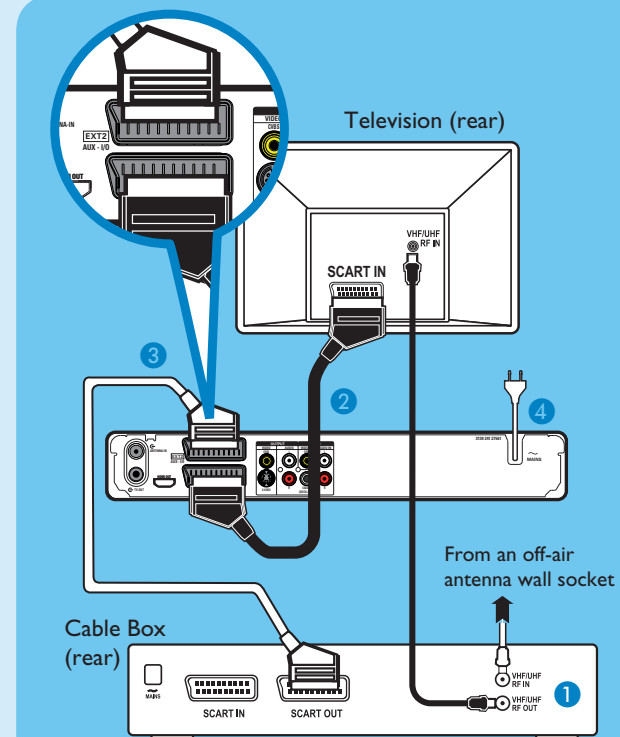

Option B

 
Use this connection if your current antenna cable is connected through a cable box with a Scart output socket.

- 1 Keep the existing antenna connection from the cable box to your TV.
- 2 Connect a scart cable (not supplied) from the **EXT1 TO TV-I/O** socket on the recorder to the Scart input socket on your TV.
- 3 Connect another scart cable (not supplied) from the **EXT2 AUX-I/O** socket on the recorder to the Scart output socket on the Cable Box.
- 4 Plug in the power cord from the recorder to an AC power outlet.

2 Set up

A Finding the viewing channel

- 1 Press **⏻** on the recorder.
- 2 Switch on the TV and other connected devices (e.g. Cable Box, Satellite Receiver). The installation menu is displayed.

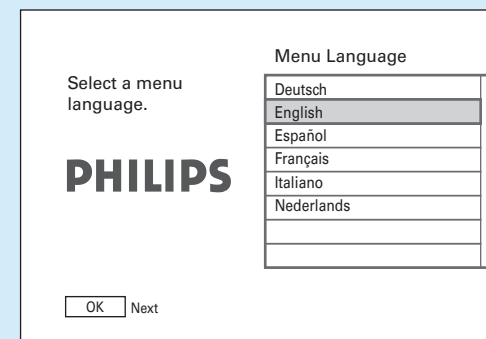


- 3 In case you don't see the recorder's installation menu, press the channel down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the menu. This is the correct viewing channel for the recorder.

B Start basic setup

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

Note Press **▲ ▼** keys to toggle through the options. Press right **▶** to select an item. To confirm your selection, press **OK**.

 - 1 Select the menu display language.

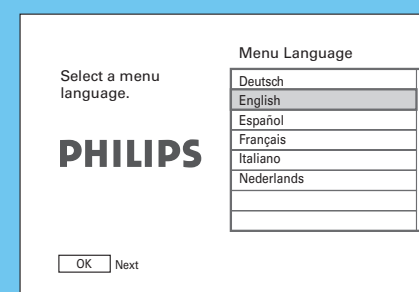

- 2 Select the country of your residence.



- 3 Set the date. Use the **numeric keypad 0-9** or **▲ ▼ ◀ ▶** keys to enter the correct date. Press **OK** to confirm.
- 4 Set the time. Use the **numeric keypad 0-9** or **▲ ▼ ◀ ▶** keys to enter the correct time. Press **OK** to confirm.
- 5 Select the eco mode.
- 6 Automatic channel search begins.

Note If you have used Option B in 'Basic Connection' press **OK** to skip channel search and proceed to the next step. No preset channels will be stored.

- 7 All available TV channels are stored.



- 8 Press **OK** to exit.

The recorder is now ready for use.