

 
1 Connect the Recorder

- 1 Remove the Antenna or Cable TV signal from your TV. Connect it to the **ANTENNA IN** jack at the rear of the Recorder.
- 2 Connect the supplied RF coaxial cable to the **(Antenna) OUT** jack on the Recorder and to your TV's **ANTENNA IN** or **RF INPUT** jack.
- 3 Connect the Recorder's **power cord** to a power outlet.

Helpful Hint:

If your TV has different connectors, refer to the TV manual for connection options. Also refer to the Recorder's owner's manual, which details other TV connection possibilities.

2 Prepare the remote control

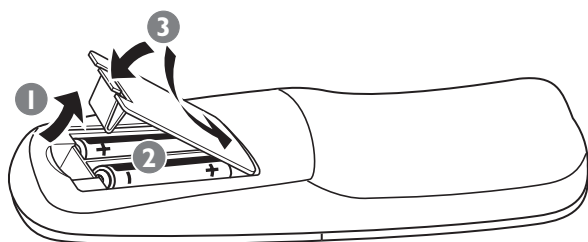

3 Complete Initial Setup

Initial Setup screens will appear the first time you turn on the Recorder.

- 1 Press **STANDBY-ON** to turn on the Recorder.
- 2 Turn on the TV and select **channel 3**.

NO PICTURE? Make sure the TV is on channel 3 if you used the simple connection shown in section 1 of this Quick-Use Guide. To use channel 4 or another Video channel at your TV, refer to the owner's manual for different connections.

- 3 The Initial Setup menu will appear. Use **▲** or **▼** to choose a setting for each item, then press **OK** to confirm. The following menus will appear:

Menu Language

- **English, Español, Français** – Select a language for the Recorder's menus and on-screen displays.

Audio Language

- **English, Español, Français, etc** – Select a DVD audio language.

Subtitle Language

- **English, Español, Français, etc** – Select the language you prefer for DVD subtitles.

 
 
TV Shape

- **4:3 letterbox** – Stretch the DVD picture with black bars on the top and bottom.
- **4:3 panscan** – See a full-height picture with the sides trimmed.
- **16:9** – Use with widescreen TVs. (frame ratio 16:9)

- 4 After you have connected the Antenna or Cable TV signal to the Recorder's **ANTENNA IN** jack, press **OK**.
- 5 **Searching for TV Channels** will appear. Once the TV channel search is complete, the number of channels found will appear.
- 6 Press **SYSTEM MENU**. The Recorder will turn off, then on again.

The Recorder is ready for use!

... cont.

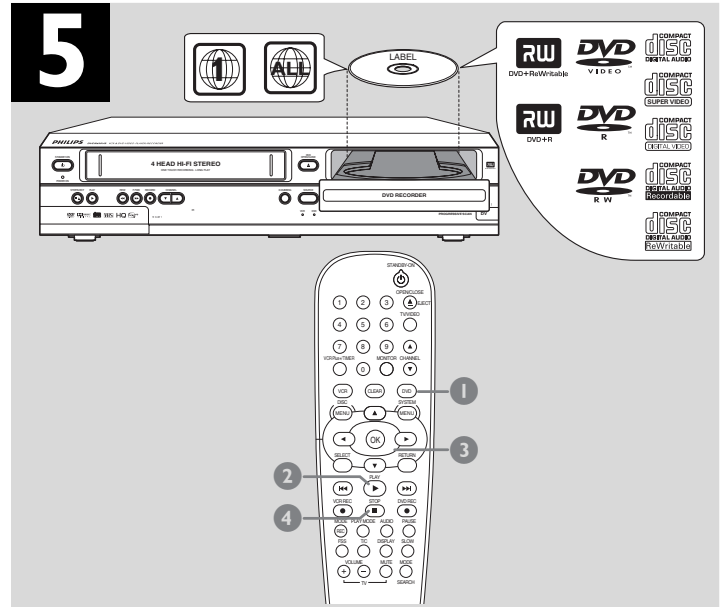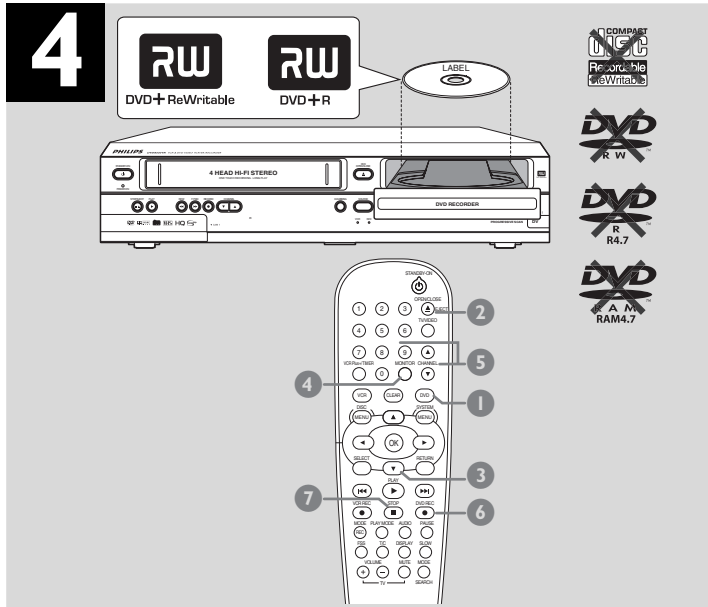

4 Quick Disc Recording

- 1 Press **DVD** to put the Recorder in DVD mode.
- 2 Press **OPEN/CLOSE/EJECT** to open the disc tray. Insert a recordable DVD+RW/DVD+R with the label facing up, then press **OPEN/CLOSE/EJECT** to close the disc tray.
- 3 Press **▼** to select the last empty Title box on a DVD+RW.
- 4 Press **MONITOR** to see TV channels.
- 5 Press **CHANNEL ▲ ▼** or the **Number buttons** to select the channel you wish to record.
- 6 Press **DVD REC** to start recording.
 - During recording, you may press **PAUSE** to pause the recording. Press **DVD REC** to continue.
- 7 To stop recording, press **STOP** .

To play a DVD+R on other DVD Players, you must finalize it first.

- 1 Press **SYSTEM MENU**. Press **◀** to select in the top left corner of the menu bar.
- 2 Press **▼** to select in the menu and press **▶**.
- 3 Press **▼** to select **Finalize disc**, then press **OK**.

Once a DVD+R is finalized, no recording or editing is possible. Unfinalizing a DVD+R is not possible.

5 Quick Disc Play

- 1 Press **DVD** to put the Recorder in DVD mode.
- 2 Insert a disc with the label facing up. Press **PLAY** to close the disc tray.
- 3 Play may start automatically.
 - If you are playing a DVD, a Disc menu may appear. Press **◀ ▶ ▲ ▼** to choose a setting. Then press **OK** to confirm.
 - If you are playing an Audio CD, press **PLAY** to start play.
 - If you are playing a DVD+RW/DVD+R, the Index Picture Screen will appear. Press **▲** or **▼** to select a Title, then press **OK** to start play.
- 4 To stop play, press **STOP** .

NO SOUND? Connect the **AUDIO OUT** L/R jacks at the back of the Recorder to the **AUDIO IN** jacks on a TV, stereo or receiver. Turn on the other equipment and select the appropriate channel or sound source.

6 Quick Videotape Play

(not illustrated)

- 1 Press **VCR** to put the Recorder in VCR mode.
- 2 Turn on the TV. Set it to Channel 3.
- 3 Insert a videotape in the cassette compartment and press **PLAY** .
- 4 To stop playback, press **STOP** .



Detailed playback features and additional functions are described in the accompanying owner's manual.