


# Quick install guide


## Connecting your DVD recorder to the TV set/Initial installation

**Attention !** Until the initial installation has been completed, the buttons on the front will not function.


**1** Remove the antenna or cable TV signal from your TV. Connect it to the **ANTENNA IN** jack at the back of the DVD recorder.

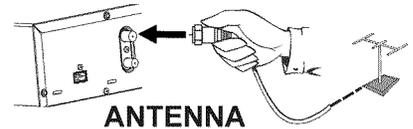

**2** Insert one end of the supplied antenna cable into the **TV OUT** jack at the back of the DVD Recorder and the other end into the antenna input jack at the back of the TV.

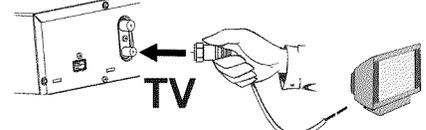


**3** Use the supplied video (CVBS) cable and plug one end into the yellow jack **OUT VIDEO (CVBS)** at the back of the DVD Recorder and the other end into the Video In jack (usually yellow) of the TV (usually called Video in or AV in. See your TV's instruction manual).

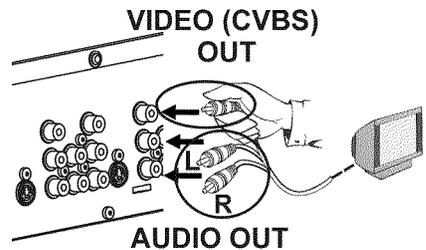

**4** Use the supplied audio (cinch) cable and plug one end into the red/white cinch jack **OUT L AUDIO R** at the back of the DVD Recorder (under to **Video in**) and the other into the corresponding red/white audio input jack of the TV (usually called Audio in', 'AV in'. See your TV's instruction manual).

**5** Switch on the TV. Then switch the TV to the Video/Audio input jack or select the corresponding channel number. For the channel number, please see your TV's instruction manual.

**6** Connect the mains jack **~MAINS** at the back of the DVD Recorder with the power supply using the supplied power cable. The most important features of the DVD Recorder will appear on the display. After the initial installation is completed, this function will be switched off.

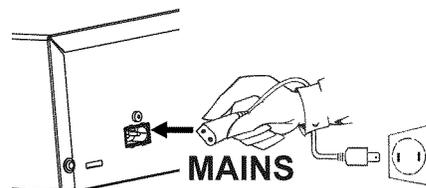


**7** Switch the DVD-recorder on using **STANDBY-ON** . '15 TV ON?' will appear on the display.



**8** If necessary, select the channel number of the input socket at the TV set. The initial installation menu appears on the screen.

**9** Select your preferred setting using **CH- ▼** or **CH+ ▲**. Confirm with **OK**.

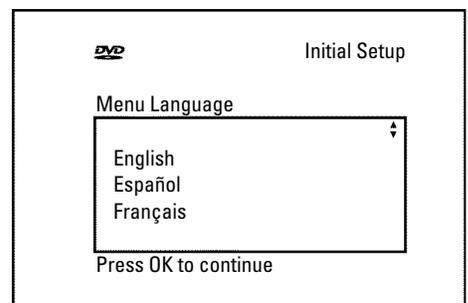

The initial installation is carried out automatically. Please wait until the procedure is completed.

## Making a recording

**1** If necessary, switch to TV programming by pressing the **MONITOR** button on the remote.

**2** Use **CH+ ▲** or **CH- ▼** to select the channel you want to record.

### Recording via the external sockets

Select either the front socket ('**FRM1**', '**FRM2**') or the socket ('**EXT1**', '**EXT2**') at the back of the recorder, from which the recording is to be carried out using **CH+ ▲** or **CH- ▼**.

### Selecting the recording mode (quality)

You can select between '**M1**' (camcorder recordings/1 hour), '**M2**' (2 hours), '**M2x**' (2,5 hours), '**M3**' (3 hours), '**M4**' (4 hours), '**M6**' (6 hours) or '**M8**' (8 hours) using **REC MODE**.

### SAFE RECORD

Usually, a recording starts at the point where the previous recording ended. This will delete all subsequent recordings.

If a new recording is to be placed at the end of all recordings, hold down **REC/OTR ●** until '**SAFE REC**' appears on the display.



**Tip**

**3** To start recording, press **REC/OTR ●** on the remote control or **●REC** on the DVD recorder.

### \*'NO SIGNAL' (no signal) will appear on the display

- ✓ Check whether the cable plugs fit correctly.
- ✓ If the recording is made from a video recorder, adjust the "tracking" on the video recorder.
- ✓ In case of bad, non-standard video input signals, the DVD Recorder may not be able to detect the signal.



**Problem**

## Programming recordings

With the Recorder on, press **TIMER** on the remote control.

Select line '**Timer Programming**' using **CH- ▼** or **CH+ ▲** and confirm with **▶**.

The information will be displayed.

Select the entry field with **◀** or **▶**.

Enter information with **CH- ▼**, **CH+ ▲** or the number buttons **0..9**.

In the entry field '**Date**', you first enter the month and then the date.

If all information is correct, press the **OK** button. The information is stored in a **TIMER** block.

To end, press **TIMER**.

Switch off the DVD recorder with **STANDBY ⏻**.

Timer				
Timer Programming				
Date	Ch.	Start	End	Rec Mode
01/22	01	08:30AM	10:30AM	M1

Mo-Fr/Weekly  
Press SELECT

To store  
Press OK