


QUICK START GUIDE


Simple instructions to get your new DVD Recorder working quickly

1 Hook It Up

This guide explains the most common setups. To connect other equipment or if your TV has different jacks, see pages 9-15 of the owner's manual. You must complete the Initial Setup before using the DVD Recorder. See the next page of this Guide for details after you complete your hookup.


Without a Cable Box


1. Connect your Antenna or Cable TV signal to the ANTENNA jack on the rear of the DVD Recorder.
2. Connect the supplied video cable (which has yellow markings) to the yellow VIDEO OUT (CVBS) (EXT 2) jack of the DVD Recorder and to the VIDEO IN jack on your TV.
3. Connect a supplied two-strand audio cable (which has red and white markings) to the red and white AUDIO OUT (EXT 1/2) Left/Right jacks on the DVD Recorder and to the Left/Right AUDIO IN jacks on the TV.
4. Connect the supplied power cord to the MAINS (AC Power) jack on the rear of the DVD Recorder. Connect the power cords of the DVD Recorder and the TV to a power outlet.
5. Press **STANDBY-ON**  to turn on the DVD Recorder. Turn on the TV and set it to the correct Audio/Video In channel. You should see the Initial Setup menu on the TV screen the first time you turn on the DVD Recorder.

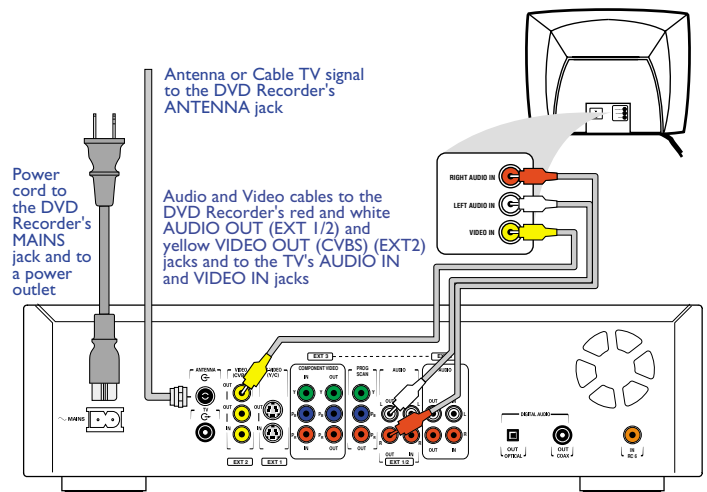

- If your TV has only an RF-style jack, such as Antenna In or 75 ohm, you need an RF modulator (not supplied). Ask your dealer for details on RF modulator availability and compatibility. Follow the instructions provided with the RF modulator to connect the Recorder to your TV.
- Your TV's Audio/Video In channel may be called AUX or AUXILIARY IN, AUDIO/VIDEO or A/V IN, EXT1 or External In, etc., and may be near channel 00. See your TV manual for details. Or, change TV channels until you see the blue Philips DVD background picture or the Initial Setup Screen on the TV.

Using a Cable Box/Satellite Receiver

1. Connect the Cable TV or Satellite signal to the IN jack on your Cable Box or Satellite Receiver.
2. Connect an RF coaxial cable to the OUT jack of the Cable Box/Satellite Receiver and to the ANTENNA jack on the rear of the DVD Recorder.
3. Connect the supplied video cable (which has yellow markings) to the yellow VIDEO OUT (CVBS) (EXT 2) jack on the DVD Recorder and to the VIDEO IN jack on your TV.
4. Connect a supplied two-strand audio cable (which has red and white markings) to the red and white AUDIO OUT (EXT 1/2) Left/Right jacks on the DVD Recorder and to the Left/Right AUDIO IN jacks on the TV.
5. Connect the supplied power cord to the MAINS (AC Power) jack on the rear of the DVD Recorder. Connect the power cords of the DVD Recorder, Cable Box/Satellite Receiver, and TV to a power outlet.
6. Press **STANDBY-ON**  to turn on the DVD Recorder. Set the DVD Recorder to channel 3 or 4 (the output channel of your Cable Box/Satellite Receiver). Turn on the TV and set it to the correct Audio/Video In channel. You should see the Initial Setup menu on the TV screen the first time you turn on the DVD Recorder.

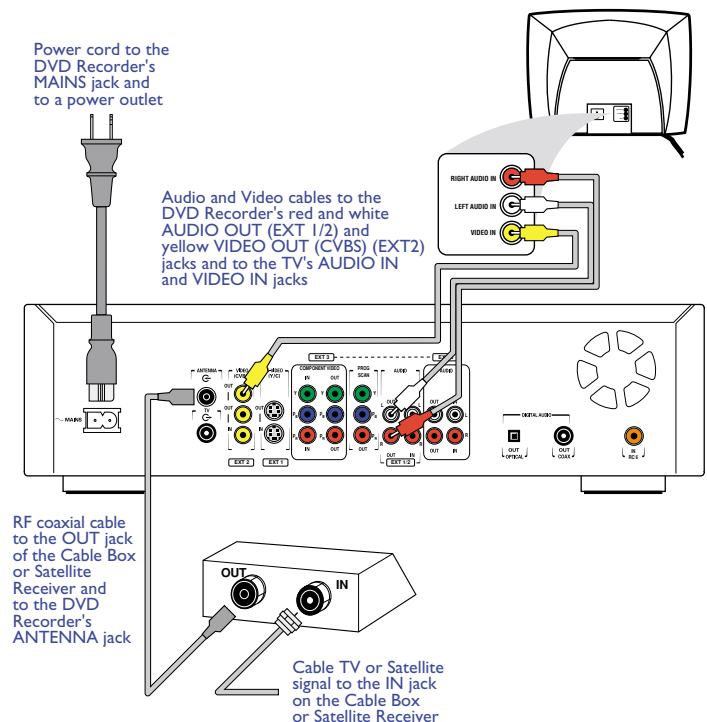

2 Set Up the Recorder



Before you can use your new DVD Recorder to play Discs or make recordings, you must complete the Initial Setup. When you turn on the DVD Recorder for the first time, the menus shown at right will appear on the TV screen. **TURN ON TV** will appear on the DVD Recorder's display panel.

Use the Arrow buttons and the OK button on the DVD Recorder's remote control to select items. Follow the on-screen instructions. Press **SYSTEM MENU** to clear the screen when TV channels are set.

You will choose languages for different features, choose a TV Shape, and set up TV channels. This process will only take a couple of minutes, but you must complete it before you can use the DVD Recorder.


You can not turn off the DVD Recorder or use any of the buttons on the DVD Recorder until you finish the Initial Setup. The only way to quit the Initial Setup is to disconnect the power cord. If you quit, the Initial Setup will appear again the next time you turn on the DVD Recorder. The menus will not go away until you finish the Initial Setup.

For detailed instructions on completing the Initial Setup, see pages 16-17 in the accompanying Owner's Manual.

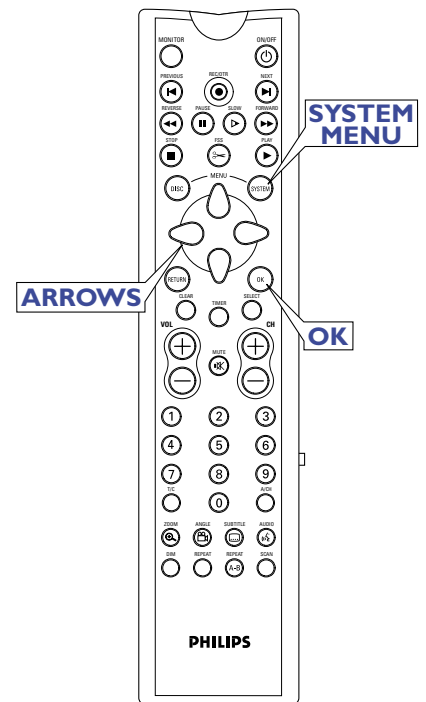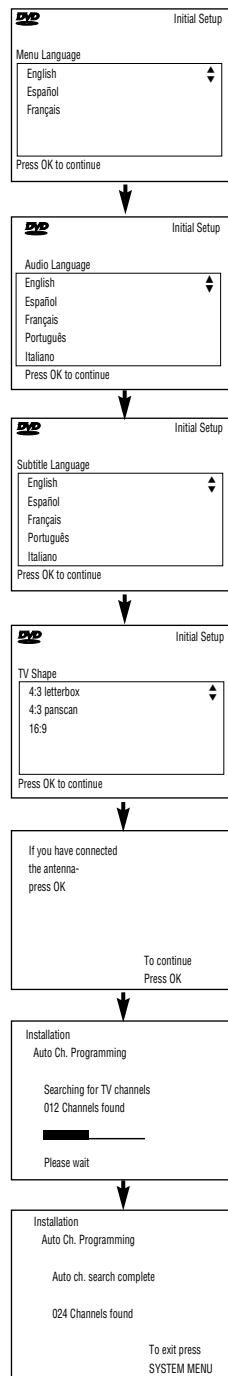

3 Play a Disc


1. Press **STANDBY-ON** to turn on the DVD Recorder. The green STANDBY-ON light will be on.
2. Turn on your TV. Set it to the correct Audio/Video In channel.
3. Press **OPEN/CLOSE** on the front of the DVD Recorder to open the disc tray. Put a Disc in the tray, with the label facing up and the shiny side facing down. Press **OPEN/CLOSE** again to close the tray.
4. Playback may start automatically. If not, use **▼ ▲ ◀ ▶** and **OK** on the remote control to select an item in the Disc menu or press **PLAY ▶** to start playback.
5. To stop playback at any time, press **STOP ■**.

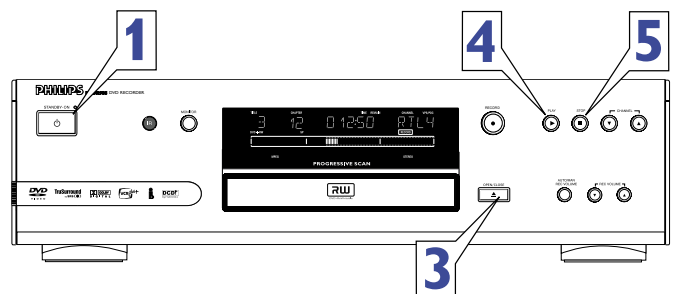

4 Record a TV Program

The DVD Recorder can record TV programming onto a DVD+RW or DVD+R. To quickly record a TV program, follow these steps. See the Owner's Manual for recording details.



1. Press **OPEN/CLOSE** to open the disc tray. Insert a recordable DVD+RW or DVD+R, then press **OPEN/CLOSE** again to close the disc tray.
2. Press to select an empty Title box in the Index Picture Screen on a DVD+RW. On a DVD+R, the DVD Recorder automatically starts recording at the end of the Disc.
3. Press **MONITOR** to see TV channels through the DVD Recorder.
4. Press **CH+/-** or the **Number** buttons to select the channel you wish to record. (To adjust the recording speed, press **SELECT**. Details are in the Owner's Manual.)
5. Press **REC/OTR** to start recording. RECORD will appear in red on the DVD Recorder's display panel.
6. Press **STOP** to stop recording. RECORD will flash briefly on the display panel. The Index Picture Screen will reappear after a few seconds.

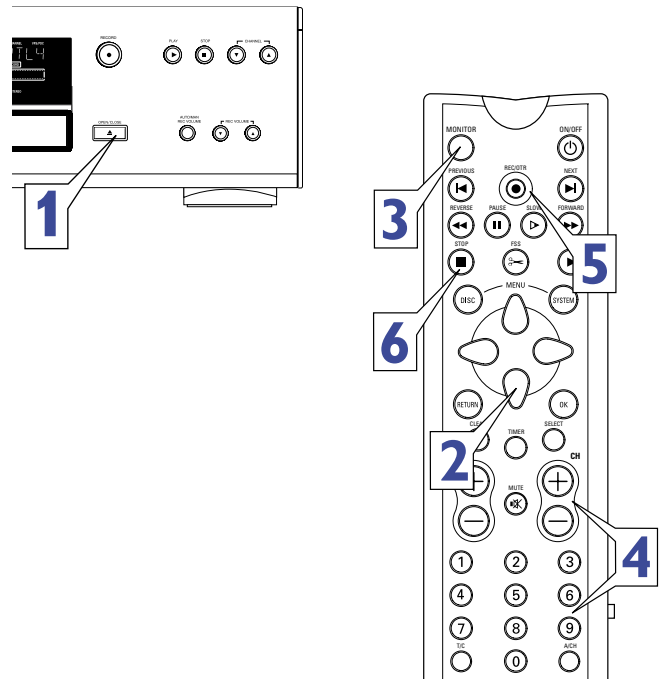

5 Copy Videos to DVD


To copy home video recordings from a cassette playing on a VCR/camcorder onto a DVD+RW/DVD+R, follow these steps.

1. Connect the DVD Recorder and TV as shown at right and on the first page of this Guide.
2. Connect audio cables to the VCR's AUDIO Out jacks and to the red and white AUDIO In (CAM1/2) jacks on the front of the DVD Recorder. Connect a video cable to the VCR's VIDEO Out jack and to the yellow VIDEO In (CAM2) jack on the front of the DVD Recorder. (To access the DVD Recorder's front jacks, remove the protective cover by pulling the left side of the cover toward you.)
3. Connect the power cords of all the equipment to a power outlet after you finish all other connections. Turn on the TV, DVD Recorder, and VCR. Set the TV to the correct Audio/Video In channel.
4. Insert a tape in the VCR. Stop play if necessary.
5. Press **OPEN/CLOSE** on the front of the DVD Recorder to open the disc tray. Insert a recordable DVD+RW or DVD+R with the label facing up. Press **OPEN/CLOSE** to close the disc tray. The Index Picture Screen will appear.
6. Press on the DVD Recorder's remote control to select an empty Title box in the Index Picture Screen on a DVD+RW. On a DVD+R, recording starts at the end of the Disc automatically.
7. Press **CH+/-** to select **CAM2** at the DVD Recorder. CAM2 will appear in the Tuner Information Box and on the DVD Recorder's display panel. (To select a recording speed, press **SELECT**.)
8. Press **MONITOR** on the DVD Recorder's remote. Press **PLAY** on the VCR to start tape playback.
9. Press **RECORD** on the DVD Recorder to start recording. RECORD will appear in red on the DVD Recorder's display panel.
10. Press **STOP** on the DVD Recorder to stop recording. Stop the tape on the VCR. The Index Picture Screen will reappear in a few seconds.

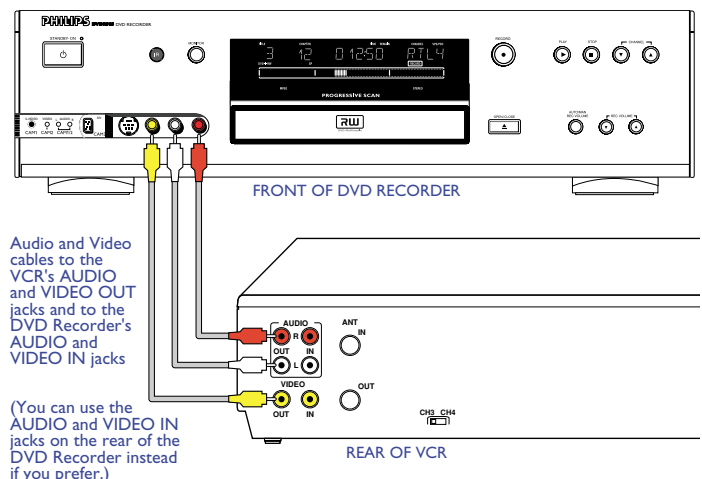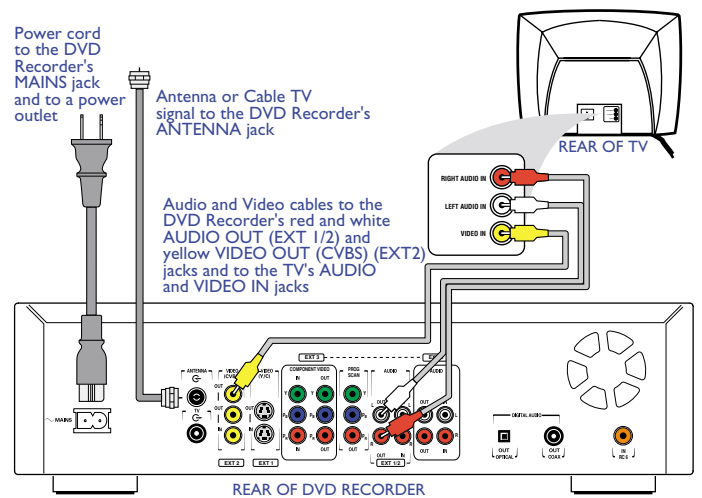


6 Know the DVD Recorder

Index Picture Screen

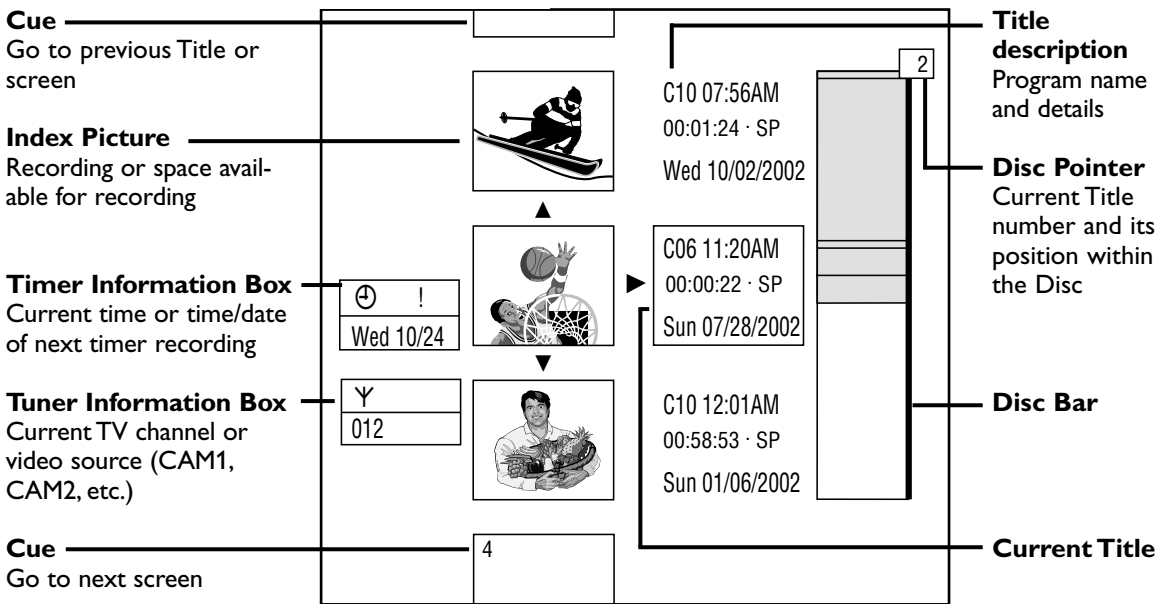

System Menu Symbols

Use the System Menu to set up features of the DVD Recorder or Discs. The symbols in the System Menu have these meanings. For System Menu details, see page 25 in the accompanying owner's manual.

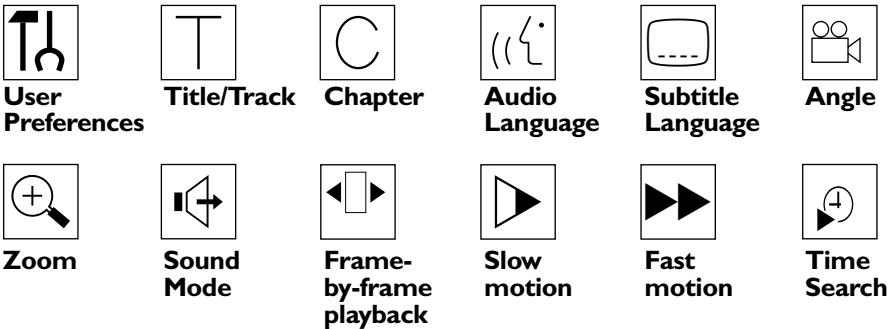

Acceptable Discs

These Discs will play and record on the DVD Recorder.



These Discs will only play on the DVD Recorder.



DVDs must be labelled for ALL REGIONS or REGION ONE as shown below. Also make sure your Discs are labelled as NTSC or PAL compatible. These logos and information should appear on the Disc case or on the Disc.

