

## **1. Introduction**

The upgrade version of this software is **Version 1.05**

---

## **2. Key Features added in this software version**

This software version includes:

**\* This is the latest software available which has been installed in your set at the factory. There are currently no new software releases.**

---

## **3. Software Upgrade Disc Preparation**

### **Tools Required**

You will need the following items :

- a personal computer
  - a CD-R/RW drive and writing application software
  - a blank CD-R
- 

### **How to download the software to your computer**

- 1) Right mouse button click on the file and click 'Save Target As...' to save the zip file into your PC.
- 2) Unzip the .zip file and extract files into your PC.

**Do not change the filename – H9820UD105P1.ab6**

---

#### **4. Steps to upgrade DVP3050V/37**

1. Burn the file (H9820UD105P1.ab6) to blank CD R or CDRW, using the following settings :
  - File System CD-ROM ISO Level 2
  - Mode 1/2/XA
  - Character set ISO 9660
  - Finalised, single session
  - **Write speed slow (e.g. 2x, 4x)**

Finalize the disc. (The application may do this automatically.)

**NOTE : Packet writing application for drag & drop copying cannot be used for creating an upgrade disc. Use only a dedicated CD writing application allowing 'disc at once' recording. No UDF setting as well.**

2. Press remote control switch as following:  
9 -> 8 -> 7 -> 6 -> SEARCH MODE
3. TV displays "version up mode" and tray open automatically.
4. Insert CD what you made into the tray.
5. Select update data, maybe only one option exists.
6. Update program runs automatically.
7. When update program finishes, the tray opens automatically and TV displays updated version 1.05
8. Take out the disc.
9. Pull off the power plug.
10. Put on the power plug.
11. Turn on power by POWER switch. The tray closes automatically and all process has finished.