

DVP325x Firmware Upgrade

Firmware Upgrade

We have developed a firmware upgrade to improve your product. This upgrade is applicable for the following models:

- **DVP3254K/55**

This firmware version improves: [Click here for more details](#)

Note: Before you proceed to upgrade, please be reminded that you need to do configuration again each time after firmware upgrade!

 
Upgrade Procedure

Step 1 Check your current version

First check your current firmware version to see if you need to upgrade:

1. **POWER ON** the set
2. Press **SETUP** key to enter **SETUP** menu
3. Press < or > to navigate to **GENERAL** menu
4. Press keys **1,3,7,9** successively
5. Proceed with firmware upgrade if your set's firmware version is below **V18** or **V50** (depending on the set you have)

Step 2 Download Firmware upgrade



Click the link to save the software on your computer.

Note: There are 2 methods to upgrade your DVD player.

1. For **Optical Disc upgrade**, follow **STEP 3** to **STEP 4**.
2. For **USB upgrade**, follow **STEP 5**.

Step 3 Burning Upgrade on CD-R / CD-RW

1. Extract the files by unzipping the zipped file (**DVP3254K_55.zip**) with WINZIP or an other application capable of handling zipped files (**Do not rename the extracted files**)
2. Write the extracted files – not the zip file – onto a blank CD-R or CD-RW disc, using the following settings:
 - File System: ISO 9660 + Joliet
 - File name length : max11 chars = 8+3 (Level 1)
 - Mode : 2/XA
 - Character set : ISO 9660 (ISO normal CD-ROM)
 - No Multi Session
 - Write Speed : Low
 - Recording Method: Track At Once

Note: The extracted files should **not** be placed in a folder on the disc but just in the top level directory (root).
3. Finalize the disc. (The application may do this automatically.)

Step 4 Apply Upgrade to your DVD Player

1. Power on the set and put in the disc.
2. A message will be displayed on the OSD after the upgrade file is recognized.
3. Follow the instruction displayed on the TV Screen – Press “OK” to upgrade (if applicable)
4. After reading the file, the disc will be **ejected**.
5. **Remove the disc after ejected, but DO NOT close the tray**
6. Wait approximately 3-5 minutes for the software to be upgraded
7. The set will restart itself once the upgrade is completed.
8. Upon wake up, please perform a “Default reset” in the Preference page under setup menu

Caution: Do not unplug or power off the set while upgrading in progress.

Step 5 Upgrading the firmware of your DVD Player (USB)

Important: Remove any discs from the tray before USB device is inserted.

Note: Do not press any buttons or interrupt the mains supply during the upgrading process, otherwise the player may become defective.

1. Extract the firmware upgrade files from the ZIP archive(**DVP3254K_55.zip**):

DVP3254K_55.bin
DVP3254KI_55.bin

(Do not rename the filename)

Note: Please check to ensure that your **USB storage device** can be detected by the player before trying to upgrade the firmware using this method. If the **USB storage device** cannot be detected, please follow **STEP 3** to **STEP 4** to upgrade using an **Optical Disc**.

Note: Please use a FLASH based **USB storage device**. The startup time for HDD based **USB storage device** is too slow and cannot be used for firmware upgrade.

2. Place the extracted files on a USB flash storage device (at least 64Mb in size).
3. Turn the DVD Player on and when it is running, insert the USB flash storage device.
4. A dialogue will now appear - follow the instructions to update the software of your DVD Player.
5. **When disc tray is ejected, you can now remove the USB storage device but DO NOT close the disc tray.**
6. Wait approximately 3-5 minutes for the software to be upgraded.
7. The set will restart itself once the upgrade is completed.
8. Upon wake up, please perform a “Default reset” in the Preference page under setup menu

Note: Please make sure you **delete** the upgrade file from the USB device before using it on the player again. This will prevent the player from performing the upgrade again.

Your product is successfully upgraded!

Firmware upgrade history

Version	Description
V18/V50	<ul style="list-style-type: none">• Fix DivX file USB playback crash issues seen during end of playback