


Quick Start Guide




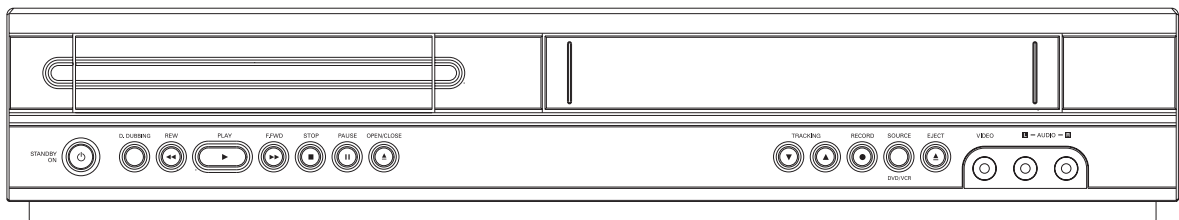


- 1 Connect
- 2 Set up
- 3 Enjoy

What's in the box?



VCR & DVD PLAYER

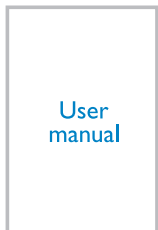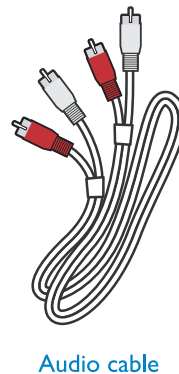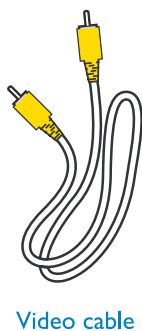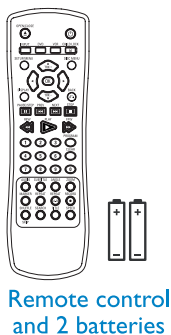




Connect

To connect to your television, follow the instructions under 'Connection to your TV'.


Connection to your TV

- 1 Disconnect the power cords of the devices from the AC outlet.
- 2 Connect the yellow video cable to the yellow VIDEO IN jack of the TV and to the yellow AV OUT video jack at rear the unit.
- 3 Connect the red and white audio cable to the respective red and white audio jack of the TV and to the respective red and white AV OUT audio jack at rear the unit.
- 4 Plug in the power cable from the DVD/VCR to an AC power outlet.

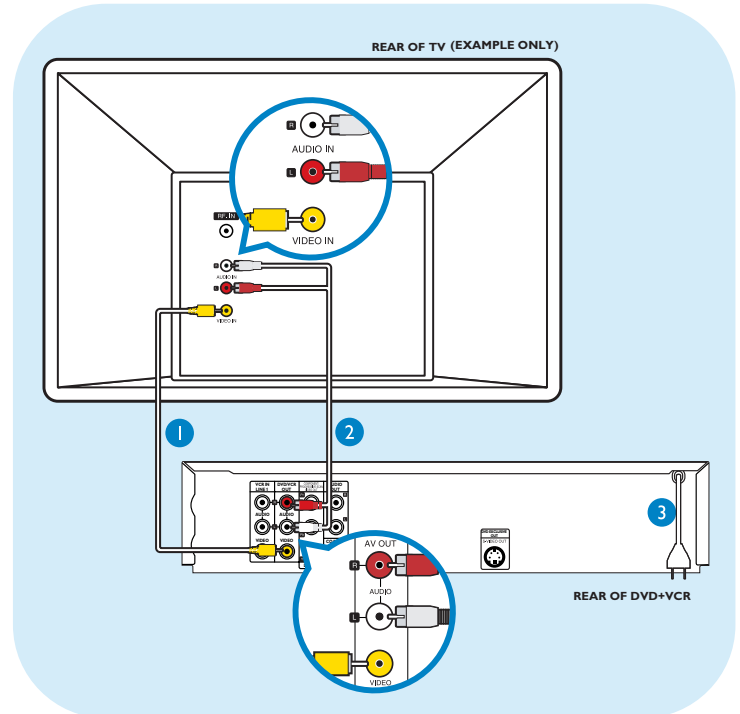

Connection to a Cable / Satellite Box

- 1 Disconnect the power cords of the devices from the AC outlet.
- 2 Make the connection as illustrated below.
- 3 Plug in the power cords of the devices to the AC outlet.

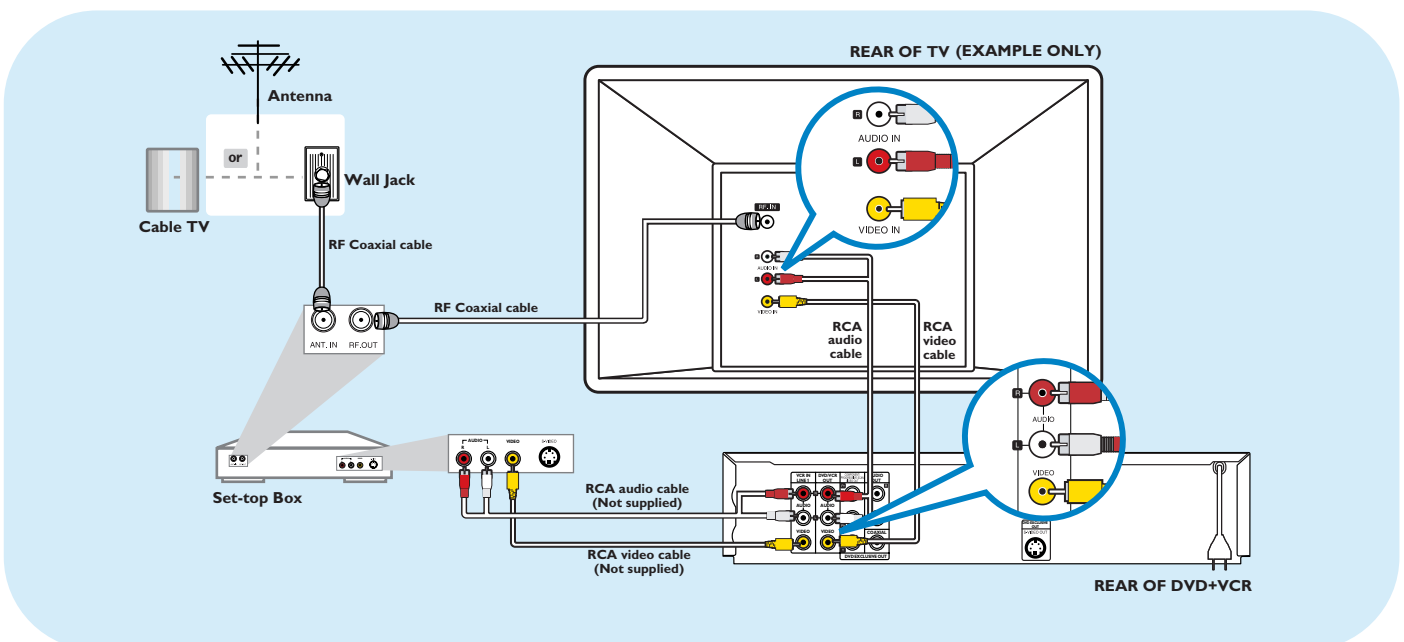


For additional connection diagrams, see the accompanying User Manual.

2

Set up

Inserting batteries

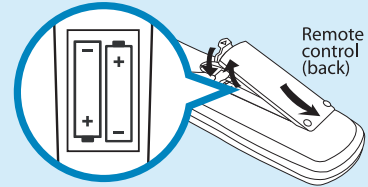


 

Note where the positive and negative ends go

Initial Settings - DVD

LANGUAGE

- 1 Press DVD on the Remote Control.
- 2 Press SETUP/MENU and the MAIN menu will appear.

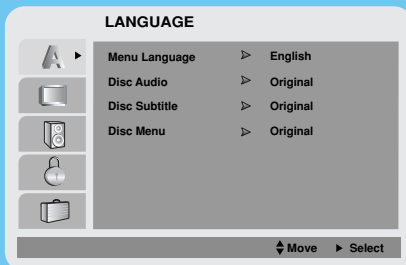
 



Highlight  and press right .




 
- selects Menu language.
- selects default Disc Audio language
- selects default Disc Subtitle language.
- selects default Disc Menu language.

 

Initial Settings - VCR

CLOCK

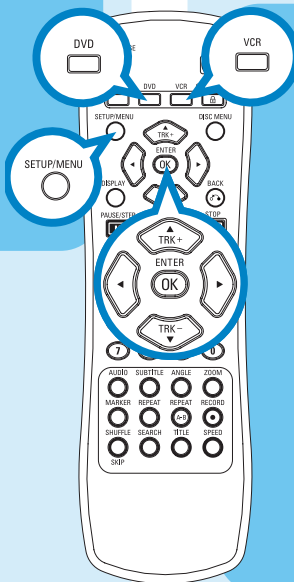- 1 Press VCR on the Remote Control.
- 2 Press SETUP/MENU and the MAIN menu will appear.
- 3 Use / to choose the CLOCK option and press OK.



Use /// to enter the necessary information.

- MONTH : Choose the month.
- DAY : Choose the date.
The day of the week will display automatically.
- YEAR : Choose the year.
- TIME : Choose the time.
Press and hold / to advance clock continuously.


Note The clock uses the 12-hour system. Be sure to set AM and PM correctly.

3


Enjoy

Playing a Disc

- 1 With the TV and DVD/VCR on, press the DVD button to put the DVD/VCR in DVD mode.

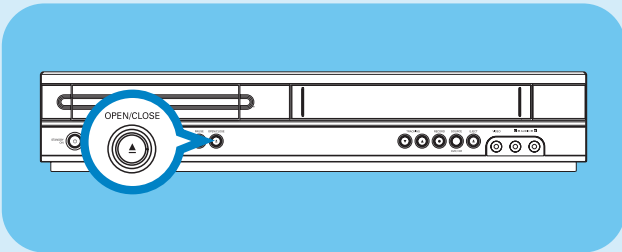

- 2 Press **▲** OPEN/CLOSE to open the disc tray. Put a Disc in the tray with the label facing up and the shiny side facing down. Press **▲** OPEN/CLOSE again to close the tray.

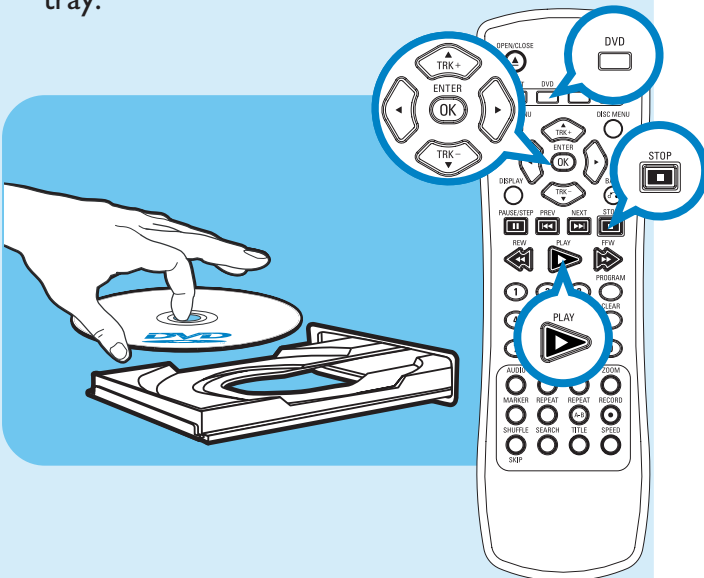

- 3 Playback may start automatically. If not, press **▶** PLAY. If a DVD Disc menu appears, use the **▲/▼/◀/▶**, **OK**, or **Number** buttons to select features or start playback. Follow the instructions in the menu.
- 4 To stop playing the Disc, press **■** STOP.

Playable Disc

The DVD Player of the DVD/VCR will play the following Discs.



DVDs must have a Region Code of ALL regions or Region 1.



Need help?

User Manual

See the user manual that came with your Philips DVD/VCR

Online

Go to www.philips.com/welcome



2007 © Philips Consumer Electronics
A Division of Philips Electronics North
America Corp
Marietta, GA 30006 0026
All rights reserved.

Printed in Indonesia
MBM37484502