

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

DVP3388K



---

EN User manual

---

ZH\_TW 使用者手冊

---

MS\_MY Manual pengguna

---

**PHILIPS**



# Contents

<b>1 Important</b>	<b>4</b>	<b>6 Advanced features</b>	<b>26</b>
Safety and important notice	4	Media copy	26
Trademark Notice	5	Create MP3 files	26
<b>2 Your DVD player</b>	<b>6</b>	<b>7 Adjust sound</b>	<b>28</b>
Features highlight	6	Karaoke settings	28
Product overview	7	Turn off vocal (cancel voice)	28
<b>3 Connect</b>	<b>9</b>	<b>8 Adjust settings</b>	<b>29</b>
Connect video cables	9	General setup	29
Connect audio cables	10	Audio setup	30
Route audio to other devices	11	Video setup	33
Connect USB device	12	Preferences	36
Connect to power outlet	12	<b>9 Additional information</b>	<b>38</b>
<b>4 Get started</b>	<b>13</b>	Update software	38
Prepare the remote control	13	Care	38
Find the correct viewing channel	14	<b>10 Specification</b>	<b>39</b>
Select menu display language	14	<b>11 Troubleshooting</b>	<b>41</b>
Turn on Progressive Scan	15	<b>12 Glossary</b>	<b>43</b>
Use Philips EasyLink	16		
<b>5 Play</b>	<b>17</b>		
Play from disc	17		
Play video	18		
Play music	22		
Play photo	23		
Play from USB device	25		

# 1 Important

---

## Safety and important notice

### Warning

- Risk of overheating! Never install the DVD player in a confined space. Always leave a space of at least four inches around the DVD player for ventilation. Ensure the curtains or other objects never cover the ventilation slots on the DVD player.
- Never place the DVD player, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this DVD player indoors. Keep this DVD player away from water, moisture and liquid-filled objects.
- Never place this DVD player on other electrical equipment.
- Keep away from this DVD player during lightning storms.
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

 
---

## About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

---

## Recycle notice



This electronic equipment contains a large number of materials that can be recycled or reused if disassembled by a specialized company. If you are disposing of an old machine, please take it to a recycling center. Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

---

## Copyright notice



This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

---

## Trademark Notice



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product.

Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format.

Plays DivX® video with menus, subtitles and audio tracks.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

# 2 Your DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

This DVD player offers higher picture quality video play for an amazing viewing experience.

---

## Features highlight

### Video upscaling to 1080p

You can now watch the DVDs in the highest picture quality available for your HDTV. This DVD player offers full high-definition video play up to 1080p resolution for an amazing viewing experience. A highly detailed picture and increased sharpness delivers a more true-to-life picture.

### EasyLink

EasyLink uses the HDMI CEC (Consumer Electronics Control) industry standard protocol to share functionality with all HDMI CEC compliant devices over HDMI. It enables the connected devices to control each other with a single remote control.

#### Note

- EasyLink (HDMI CEC) is only applicable with certain criteria. Terms and conditions may vary by product. Consult your product dealer for information.
- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

### Screen fit

View the movie in full screen on any TV with this DVD player.

### Hi speed USB 2.0 link

Simply plug your USB flash drive into the USB jack to play your MP3/WMA/JPEG/DivX/WMV files to enjoy the music play in superb sound quality.

### Media copy

You can transfer data files such as MP3, WMA and JPEG from disc to USB flash drive.

### Create MP3 files

Convert your favourite audio tracks from an audio CD into MP3 format. The created MP3 files are saved in your USB flash drive.

### Karaoke scoring function





Karaoke scoring gives a score for each performance. Have your singing performance scored for even more karaoke fun at home!

---

## Region codes

Your DVD player plays discs with the following region codes.


---

DVD region code	Countries
 	Asia Pacific, Taiwan, Korea
 	Australia, New Zealand

---


# Product overview

## Main unit

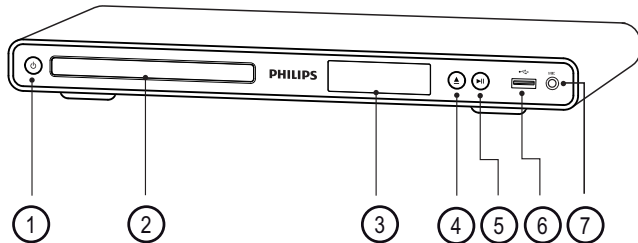

- ① **⏻** (Standby-on)
  - Turn on the DVD player or switch to standby mode.
- ② **Disc compartment**
- ③ **Display panel**
- ④ **▲** (Open/Close)
  - Open or close the disc compartment.
- ⑤ **▶||** (Play/Pause)
  - Start, pause or resume disc play.
- ⑥ **🔌** (USB) jack
  - Connect a USB flash drive.
- ⑦ **MIC**
  - Audio input from a microphone.

# Remote control

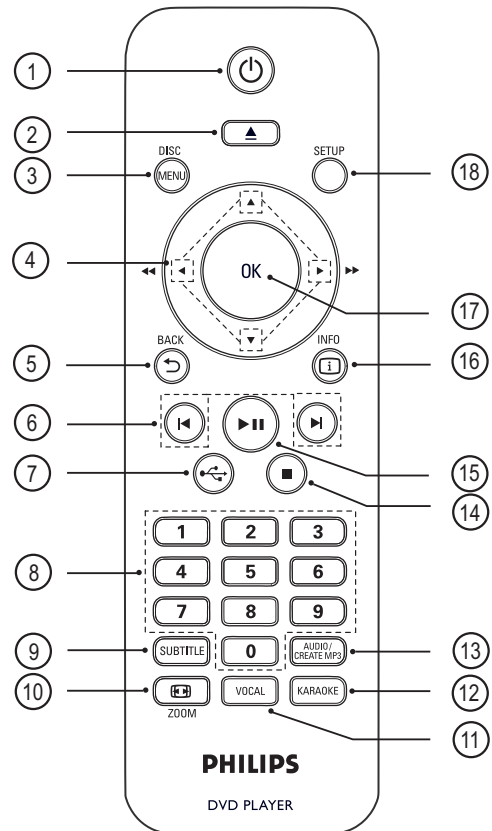

- ① **⏻** (Standby-On)
  - Turn on the DVD player or switch to standby mode.
  - Press and hold to turn off the DVD player and all HDMI CEC compliant devices.
- ② **▲** (Open/Close)
  - Open or close the disc compartment.
- ③ **DISC MENU**
  - Access or exit the disc menu.
  - Switch to disc mode.
  - For VCD/SVCD, turn PBC (Playback Control) on or off in PBC mode.

④ ▲ ▼ ◀ ▶ (Navigation buttons)

- Navigate through the menus.
- Search fast-forward (▶) or fast-backward (◀). Press repeatedly to change the search speed.
- Search slow-forward (▲) or slow-backward (▼). Press repeatedly to change the search speed.

⑤ ↶ BACK

- Return to the previous display menu.
- For DVD, navigate to the title menu.
- For VCD version 2.0 or SVCD with PBC turned on, return to the menu.

⑥ ◀/▶ (Previous/Next)

- Skip to the previous or next title, chapter, or track.
- Press and hold for fast-backward or fast-forward search.

⑦ USB (USB)

- Switch to USB mode and display the content.

⑧ Numeric buttons

- Select an item to play.

⑨ SUBTITLE

- Select DVD or DivX subtitle language.
- Access the menu to USB copy or USB delete.

⑩ ZOOM

- Fit the picture format to the TV screen.
- Zoom in or out of the picture.

⑪ VOCAL

- Change the audio channel of a karaoke disc.

⑫ KARAOKE

- Access or exit the karaoke menu.

⑬ AUDIO/CREATE MP3

- Select an audio language/channel.
- Access the menu to create MP3.

⑭ (Stop)

- Stop disc play.

⑮ (Play/Pause)

- Start, pause or resume disc play.

⑯ INFO

- For disc, display the current status or disc information.
- For slideshows, display a thumbnail view of photo files.

⑰ OK

- Confirm an entry or selection.

⑱ SETUP

- Access or exit the setup menu.



# 3 Connect

Make the following basic connections to use the DVD player.

### Basic connections:

- Video cables
- Audio cables

### Optional connections:

- Audio to other devices:
  - Multi channel receiver
  - Digital amplifier/receiver
  - Analog stereo system

### Note

- Refer to the type plate at the rear or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

### Tip

- Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at [www.connectivityguide.philips.com](http://www.connectivityguide.philips.com).

## Connect video cables

Connect this DVD player to the TV to view disc play.


Select the best video connection that the TV can support.

- **Option 1:** Connect to HDMI jack (for a HDMI, DVI or HDCP-compliant TV).
- **Option 2:** Connect to component video jacks (for a standard TV or Progressive Scan TV).
- **Option 3:** Connect to video (CVBS) jack (for a standard TV).

### Note

- You must connect this DVD player directly to a TV.

## Option 1: Connect to HDMI jack

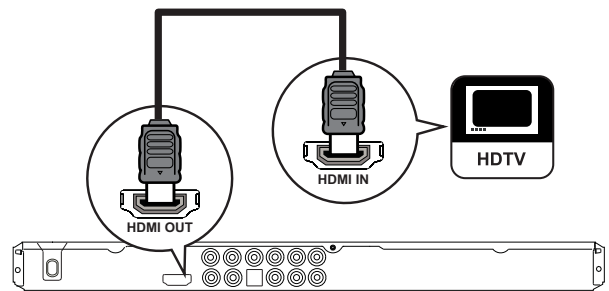

- 1 Connect a HDMI cable (not supplied) to the **HDMI OUT** jack on this DVD player and the HDMI input jack on the TV.
  - Use a HDMI-DVI adaptor in case the TV has only a DVI connection.


### Note

- If the device supports HDMI CEC, you can control compliant devices with a single remote control (see chapter 'Use Philips EasyLink').

### Tip

- This type of connections provide best picture quality.

## Option 2: Connect to component video jacks

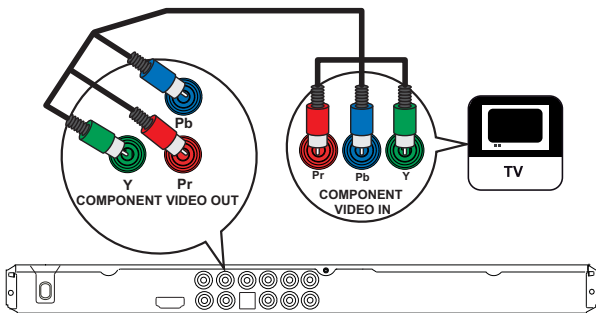


- 1 Connect the component video cables (not supplied) to the **Y Pb Pr** jacks on this DVD player and the component video input jacks on the TV.
  - If a progressive scan TV is used, you may turn on the progressive scan mode (see chapter 'Turn on Progressive Scan' for details).



### Tip

- The component video input jacks on the TV may be labelled as Y Pb/Cb Pr/Cr or YUV.
- This type of connection provides good picture quality.

## Option 3: Connect to video (CVBS) jack

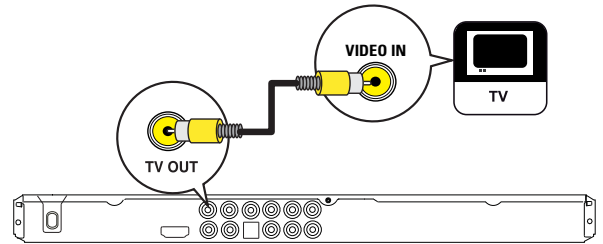

- 1 Connect a composite video cable (not supplied) to the **TV OUT** jack on this DVD player and the video input jack on the TV.




### Tip

- The video input jack on the TV may be labelled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

## Connect audio cables

Connect the audio from this DVD player to the TV to allow sound output through the TV.

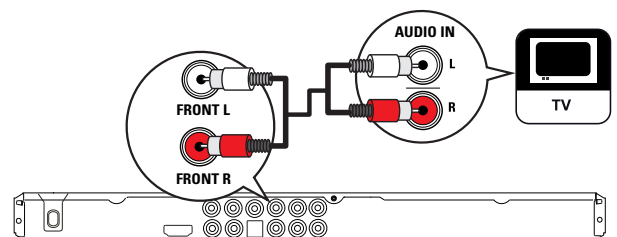


- 1 Connect the audio cables (not supplied) to the **AUDIO OUT FRONT L/R** jacks on this DVD player and the audio input jacks on the TV.

## Route audio to other devices

Route the sound from this DVD player to other devices to enhance audio play.

### Connect to multi channel receiver

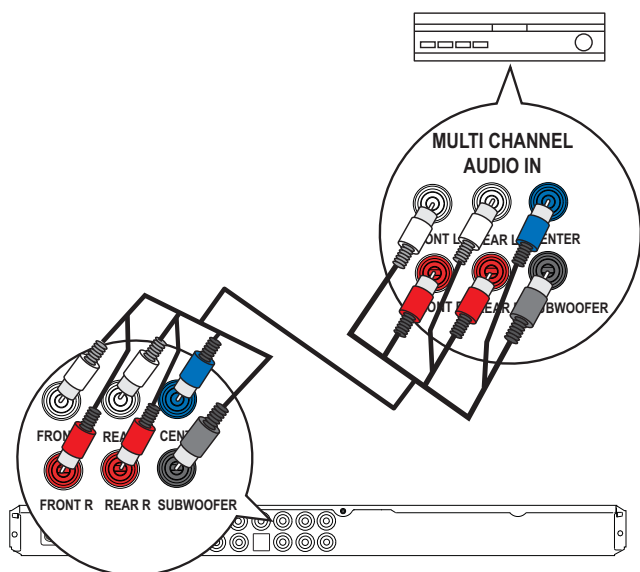


- 1 Connect the audio cables (not supplied) to the **AUDIO OUT (FRONT L/R, REAR L/R, CENTER and SUBWOOFER)** jacks on this DVD player and the audio input jacks on the device.



#### Tip

- You can optimize the audio output (see chapter 'Adjust settings' - [ **Audio Setup** ] > [ **Analog Output** ]) for details.

### Connect to digital amplifier/receiver

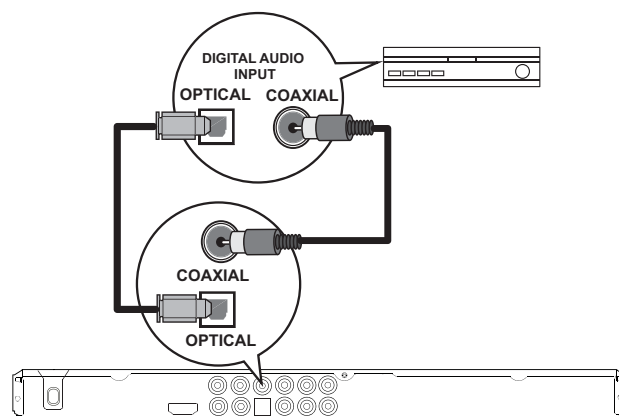

- 1 Connect a coaxial cable (not supplied) to the **COAXIAL** jack on this DVD player and the **DIGITAL IN (COAXIAL)** jack on the device.
- or
- 1 Connect an optical cable (not supplied) to the **OPTICAL** jack on this DVD player and the **DIGITAL IN (OPTICAL)** jack on the device.




#### Tip

- You can optimize the audio output (see chapter 'Adjust settings' - [ **Audio Setup** ] > [ **Digital Audio** ]) for details.

---

## Connect to analog stereo system

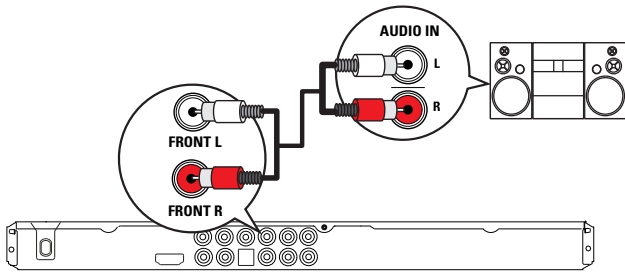

- 1 Connect the audio cables (not supplied) to the **AUDIO OUT FRONT L/R** jacks on this DVD player and the audio input jacks on the device.




### Tip

- You can optimize the audio output (see chapter 'Adjust settings' - [ **Audio Setup** ] > [ **Analog Output** ]) for details.

---


## Connect USB device

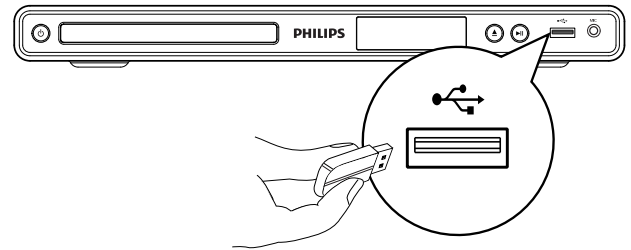

- 1 Connect the USB flash drive to the  (USB) jack on this DVD player.



### Note

- This DVD player can only play/view MP3, WMA, DivX, JPEG or WMV files that are stored on such devices.
- Press  to access the content and play the files.

---

## Connect to power outlet




### Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the DVD player.

- 1 Connect the power cord to the power outlet.  
↳ The DVD player is ready to be set up for use.

# 4 Get started

## Prepare the remote control

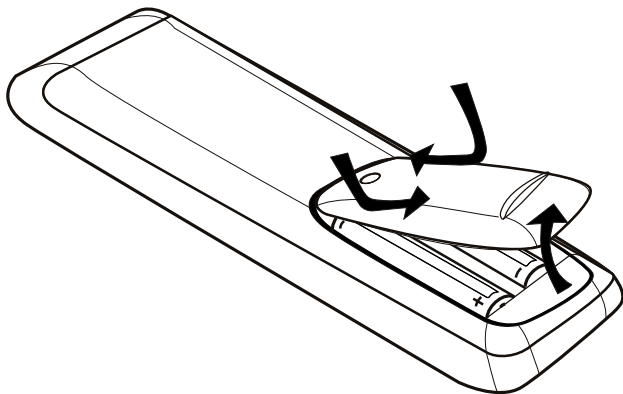


- 1 Push to open the battery compartment cover.
- 2 Insert two R03 or AAA batteries type with correct polarity (+ / -) as indicated.
- 3 Close the battery compartment.

### ! Caution

- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, they should be disposed off properly.

## Navigate through the menu

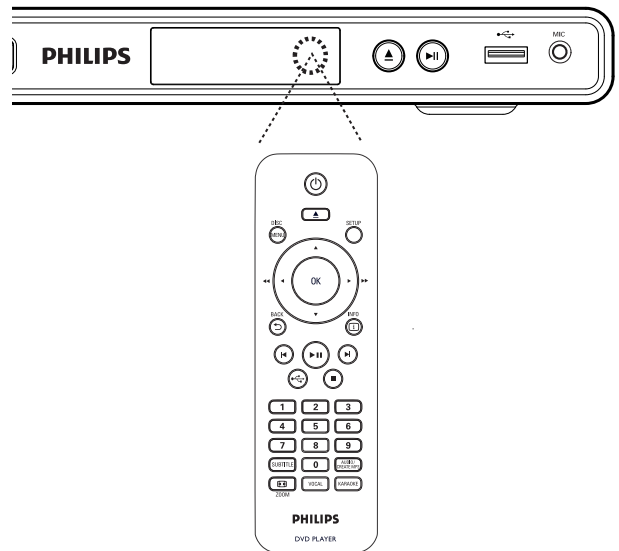

- 1 Point the remote control directly at the remote sensor on this DVD player and select the desired function.



- 2 Use the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲ ▼	Move up or down.
◀ ▶	Move left or right.
OK	Confirm a selection.
1 2 3 4 5 6 7 8 9 0	Enter numbers.

## Find the correct viewing channel

- 1 Press  to turn on the DVD player.
- 2 Turn on the TV and switch to the correct video-in channel.
  - You may go to the lowest channel on the TV, then press the Channel Down button on the TV remote control until you see the Video In channel.
  - You may press  button repeatedly on the TV remote control.
  - Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, etc..



### Tip


- See the TV user manual on how to select the correct input on the TV.
- If the audio output of this DVD player is routed to other audio device (such as audio system or receiver), turn on the audio device to the appropriate audio input channel. Refer to the device user manual for details.


## Select menu display language




 
### Note

- You can skip this setting if this DVD player is connected to a HDMI CEC compliant TV. It switches automatically to the same OSD menu language as per your TV setting.

- 1 Press **SETUP**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Select [ **OSD Language** ], then press .

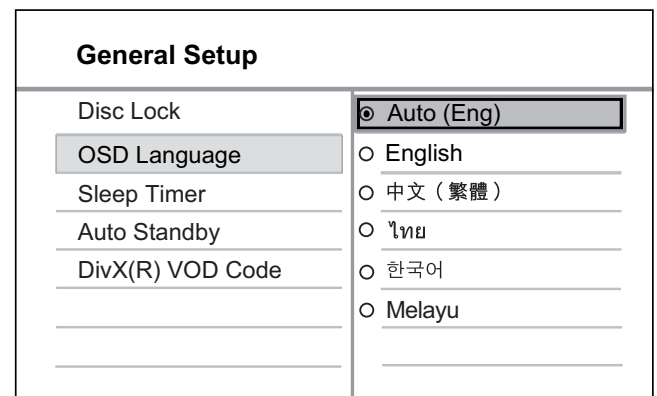

- The language options are different depending on your country or region. It may not correspond to the illustration shown here.

- 3 Press   to select a language, then press **OK**.




### Tip

- You can set the default language for DVD audio and disc menu, see chapter 'Adjust settings' - [ **Preferences** ] for details.

## Turn on Progressive Scan

Connect a progressive scan TV with component video jacks (see chapter 'Connect video cables - Option 2: Connect to component video jacks' for details).

- 1 Turn on the TV to the correct viewing channel for this DVD player.
- 2 Press **SETUP**.
- 3 Press **▼** to select [ **Video Setup** ].
- 4 Select [ **Progressive** ] > [ **On** ], then press **OK**.  
↳ A warning message is displayed.

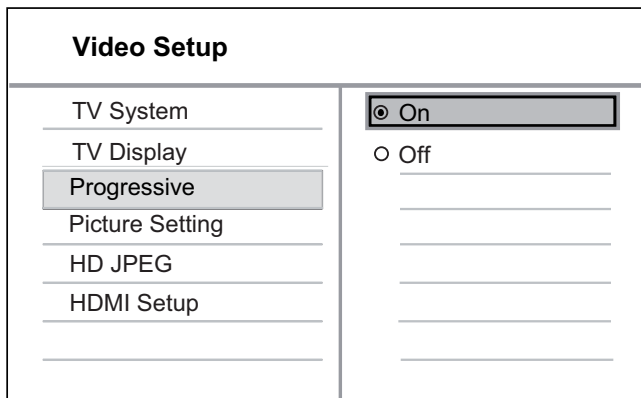

- 5 To proceed, select [ **OK** ] and press **OK**.  
↳ The progressive setup is complete.

### Note

- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recover.
- If no picture displayed, turn off the progressive scan mode as follows:
  - 1) Press **▲** to open the disc compartment.
  - 2) Press the **numeric button '1'**.

- 6 To exit the menu, press **SETUP**.

- 7 You can now turn on the progressive scan mode on the TV (see the TV user manual).

### Note

- The progressive scan setting will not be available when the HDMI video signal is detected.
- During play, when progressive scan mode is on for both this DVD player and the TV, distorted picture may display. Turn off the progressive scan feature on both this DVD player and the TV.

---

## Use Philips EasyLink

The DVD player supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

Philips does not guarantee 100% interoperability with all HDMI CEC devices.

- 1 Turn on the HDMI CEC operations on the TV and other connected devices. See TVs/ devices manual for details.
- 2 You can now enjoy the following Philips EasyLink controls.

---

### One-touch play

When you press the STANDBY button, it turns on the TV and this DVD player, then video disc play starts.

- To enable One-touch play, a video disc must be placed in the disc compartment before operation.

---

### One-touch standby

When you press and hold the STANDBY button, all connected HDMI CEC devices switch to standby mode simultaneously.



#### Tip

- The default setting for EasyLink features is on. You can change the default setting, see chapter 'Adjust settings' - [ **Video Setup** ] > [ **HDMI Setup** ] > [ **EasyLink Setup** ] for details.



# 5 Play

---

## Play from disc

### Note

- DVDs and DVD players are designed with regional restrictions. Ensure that the DVD video you play is for the same region zone as the player (indicated on its back).
- This DVD player can support play of the following file formats: MP3/WMA/JPEG/DivX/WMV.
- About WMV 9 - this DVD player only supports Main Profile (low level) and Simple Profile. Advanced Profile and DRM-protected video files are not supported.
- To play DVD-R, DVD+R or DVD-RW, the disc must be finalized.

### Tip




- If the password entry menu is displayed, you have to enter the password before it can be played.
- If you pause or stop a disc for about 5 minutes, the screen saver activates. To deactivate the screen saver, press **DISC MENU**.
- After you pause or stop a disc, if no buttons are pressed within 15 minutes, this DVD player automatically switches to standby mode.

---

## Play a disc


### Caution!

- Never place any objects other than discs into the disc compartment.

- 1 Press  to open the disc compartment.
- 2 Insert a disc with its label facing up.
  - For double-sided disc, load the side to play faces up.
- 3 Press  to close the disc compartment and start disc play.
  - To view disc play, turn on the TV to the correct viewing channel for this DVD player.
- 4 To stop disc play, press .











## Play video

### Note

- For video disc, play always resumes from the point where it was last stopped. To start play from the beginning, press  while the message is displayed.




## Control a title

- 1 Play a title.
- 2 Use the remote control to control the title.

Button	Action
	Start, pause or resume disc play.
	Stop disc play.
	Skip to the next title or chapter.
	Skip to the beginning of the current title or chapter. <ul style="list-style-type: none"><li>• Press twice to jump to the previous title or chapter.</li></ul>
	Searches fast-forward (  ) or fast-backward (  ). <ul style="list-style-type: none"><li>• Press repeatedly to change the search speed.</li></ul>
	Searches slow-forward (  ) or slow-backward (  ). <ul style="list-style-type: none"><li>• Press repeatedly to change the search speed.</li><li>• For VCD/SVCD, slow-backward search is not possible.</li></ul>

## Change video play


- 1 Play a title.
- 2 Use the remote control to change the video play.

Button	Action
<b>AUDIO/ CREATE MP3</b>	Change audio language. <ul style="list-style-type: none"><li>• Only applicable to discs with multiple audio language or channel.</li></ul>
<b>SUBTITLE</b>	Change subtitle language. <ul style="list-style-type: none"><li>• Only applicable to discs with multiple subtitle language.</li></ul>
 <b>ZOOM (Screen Fit)</b>	Fit the picture format to the TV screen. <ul style="list-style-type: none"><li>• Press repeatedly until the image is scaled to fit to the TV screen.</li></ul>
 <b>ZOOM</b>	Toggle between screen aspect ratio and different zoom factor. <ul style="list-style-type: none"><li>• To pan through the zoomed image, press the <b>navigation buttons</b>.</li></ul>
 <b>INFO</b>	Display the current status or disc information. <ul style="list-style-type: none"><li>• You can change the video play options here without interrupting disc play.</li></ul>

### Note

- Some operations may not work with some discs. See the information accompanying the disc for details.

## Access DVD menu

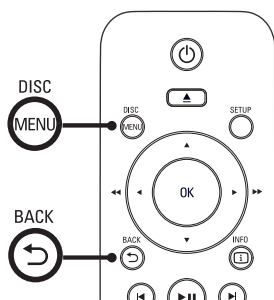

- 1 Press **DISC MENU** to access disc main menu.
- 2 Select a play option, then press **OK**.
  - In some menus, press the **numeric buttons** to input your selection.
  - To return to the title menu during play, press **↶ BACK**.

## Access VCD menu

The PBC (Playback Control) for VCD/SVCD is turned on by default in the factory. When you load in a VCD/SVCD, the contents menu is displayed.


- 1 Press **numeric buttons** to select a play option, then press **OK** to start play.
  - If PBC is off, it skips the menu and starts play from the first track.
  - During play, you can press **↶ BACK** to return to the menu (if the PBC mode is on).



### Tip

- The default setting for PBC is on. You can change the default setting, see chapter 'Adjust settings' - [ Preferences ] > [ PBC ] for details.

## Preview disc contents

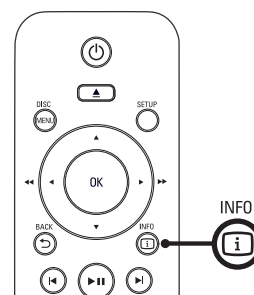

- 1 During play, press **ⓘ INFO**.
  - ↳ The disc status menu is displayed.
- 2 Select [ **Preview** ], then press **▶**.

### DVD

Select Digest Type:
Title Digest
Chapter Digest
Title Interval
Chapter Interval

### VCD/SVCD

Select Digest Type:
Track Digest
Disc Interval
Track Interval

- 3 Select a preview option, then press **OK**.
  - ↳ A six thumbnails preview screen is displayed.
  - To go to the next/previous preview screen, press **◀/▶**.
  - To start play, press **OK** at the selected thumbnail picture.

---

## Quick skip play to a specific time

- 1 During play, press **INFO**.  
↳ The disc status menu is displayed.
- 2 Select the current elapsed playing time, then press **▶**.
  - [ **TT Time** ] (title time)
  - [ **CH Time** ] (chapter time)
  - [ **Disc Time** ] (disc time)
  - [ **Track Time** ] (track time)
- 3 Press the **numeric buttons** to change the time where you want to skip to.

---

## Display play time

- 1 During play, press **INFO**.  
↳ The disc status menu is displayed.
- 2 Select [ **Time Disp** ], then press **▶**.  
↳ The display options are different depending on the disc type.

Option	Action
[ <b>Title Elapsed</b> ] / [ <b>Chapter Elapsed</b> ]	Display DVD title or chapter elapsed play time.
[ <b>Title Remain</b> ] / [ <b>Chapter Remain</b> ]	Display DVD title or chapter remaining play time
[ <b>Total Elapsed</b> ] / [ <b>Single Elapsed</b> ]	Display VCD/SVCD disc or track elapsed play time.
[ <b>Total Remain</b> ] / [ <b>Single Remain</b> ]	Display VCD/SVCD disc or track remaining play time.

- 3 Select an option, then press **OK**.

---

## View DVD play from different angles

- 1 During play, press **INFO**.  
↳ The disc status menu is displayed.
- 2 Select [ **Angle** ], then press **▶**.
- 3 Press the **numeric buttons** to change the angle.  
↳ Play changes to the selected angle.



### Note

- Only applicable to discs contain sequences recorded from different camera angles.

---

## Repeat play - video

### For DVD/VCD/SVCD


- 1 During play, press **INFO**.  
↳ The disc status menu is displayed.
- 2 Select [ **Repeat** ] in the menu, then press **▶**.
- 3 Press **▲▼** to select a repeat option, then press **OK**.



### Note

- For VCD/SVCD, repeat play is only possible if PBC mode is turned off.

## Set repeat play for a specific section

- 1 During play, press  **INFO**.  
↳ The disc status menu is displayed.
- 2 Select [ **Repeat AB** ] in the menu, then press **OK** at the start point.
- 3 Press **OK** again to set the end point.  
↳ Repeat play starts.
- 4 To cancel repeat play, press **OK** again.






### Note

- The marked section for repeat play is only possible within a title or track.

## Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. This DVD player is DivX® Certified so that you can enjoy DivX video.

- 1 Insert a disc or USB that contains the DivX videos.
  - For USB, press .
  - ↳ A contents menu is displayed.
- 2 Select a title to play, then press **OK**.
- 3 Use the remote control to control the title.

Button	Action
<b>SUBTITLE</b>	Change subtitle language.
<b>AUDIO/ CREATE MP3</b>	Change audio language/ channel.
	Stop disc play. <ul style="list-style-type: none"> <li>• For DivX, the contents menu is displayed.</li> <li>• For DivX Ultra video, press this button again to display the contents menu.</li> </ul>
 <b>INFO</b>	<ul style="list-style-type: none"> <li>• Display title elapsed play time or title remaining play time.</li> <li>• Display DivX Ultra video information.</li> </ul>




### Note

- You can only play DivX videos that were rented or purchased with the DivX registration code of this DVD player (see chapter 'Adjust settings' - [ **General Setup** ] > [ **DivX(R) VOD Code** ] for details).
- If the subtitle does not appear correctly, change the subtitle language (see chapter 'Adjust settings' - [ **Preferences** ] > [ **DivX Subtitle** ] for details).









## Play music

### Note

- For some commercial audio disc, play may resume from the point where it was last stopped. To start play from first track, press .

## Control a track

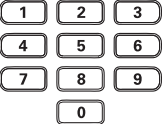- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
	Start, pause or resume disc play.
	Stop disc play.
	Skip to the next track.
	Skip to the beginning of the current track. Press twice to jump to the previous track.
	Select an item to play.
	Searches fast-forward (  ) or fast-backward (  ). <ul style="list-style-type: none"><li>• Press repeatedly to change the search speed.</li></ul>

## Quick skip play



- 1 During play, press  **INFO** until one of the following options is selected.

Display	Action
[ Disc Go To ]	Skip play to a specific time within the disc.
[ Track Go To ]	Skip play to a specific time within a track
[ Select Track ]	Skip play to a specific track number.

- 2 Press the **numeric buttons** to change the time/number where you want to skip to.

## Repeat play - audio

### For audio CD


- 1 During play, press  **INFO** repeatedly until [ Off ] is selected.
- 2 Press  to select a repeat option.

### For MP3/WMA files

- 1 During play, press  **INFO** to select a repeat option.

## Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3, .wma extensions).

- 1 Insert a disc or USB that contains the MP3/WMA music.
  - For USB, press .
  - ↳ A contents menu is displayed.
  - ↳ Play starts.
- 2 Select a track to play if play does not start automatically.
  - To select another track/folder, press **▲▼**, then press **OK**.
- 3 To return to the main menu, press **▲** until the root menu is selected, then press **OK**.



### Note

- For CDs recorded in multiple sessions, only the first session is played.
- This DVD player does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it may not display correctly on the screen because these characters are not supported.
- Some WMA is protected by Digital Rights Management (DRM), it cannot be played on this DVD player.
- Folders/files exceed the supported limit of this DVD player are not displayed or played.





### Tip

- You can display the data disc contents without folders, see chapter 'Adjust settings' - [ Preferences ] > [ Mp3/Jpeg Nav ] for details.

## Play photo

### Play photos as slideshow

This DVD player can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
  - For USB, press .
  - ↳ For a Kodak disc, the slideshow begins automatically.
  - ↳ For a JPEG disc, the photo menu is displayed.
- 2 Select the folder/album you want to play.
  - To preview the photos in the folder/album, press  **INFO**.



- To go to previous or next screen display, press **◀/▶**.
  - To select a photo, press the **navigation buttons**.
  - To display the selected photo only, press **OK**.
- 3 Press **OK** to start slideshow play.
    - To return to the menu, press **↶ BACK**.



## Note

- You may require longer time to display the disc content on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not be shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This DVD player can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files exceed the supported limit of this DVD player are not displayed or played.

## Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Rotate the photo anti-clockwise.
▶	Rotate the photo clockwise.
▲	Flip the photo vertically.
▼	Flip the photo horizontally.
ZOOM	Zoom in/ out. <ul style="list-style-type: none"> <li>• Play pause in zoom mode.</li> </ul>
■	Stop disc play.

## Play musical slideshow


Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc.





- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
  - ↳ Slideshow begins and continues till the end of the photo folder or album.
  - ↳ Audio continues to play till the end of the disc.
    - To return to the menu, press ↶ **BACK**.
- 3 To stop slideshow play, press ■.
- 4 To stop music play, press ■ again.



## Play from USB device

 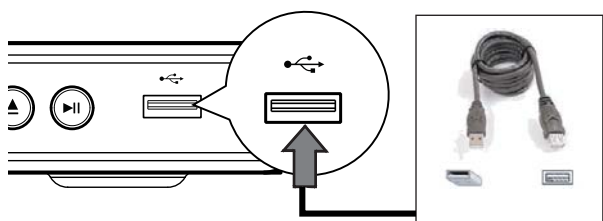This DVD player plays/views MP3, WMA, DivX, JPEG or WMV files that are stored on USB device.



- 1 Connect a USB flash drive to the  (USB) jack on this DVD player.
- 2 Press .
  - ↳ A contents menu is displayed.
  - ↳ Play starts.
- 3 Select a file to play if play does not start automatically.
  - For more information, see chapters 'Play music, Play photo, Play video' for details.
- 4 To stop play, press  or remove the USB device.
  - To switch to the disc mode, press  or **DISC MENU**.




### Tip


- If the device does not fit into the USB socket, connect it through a USB extension cable.
- Digital cameras that require additional programme installation when connected to a PC are not supported.

# 6 Advanced features

## Media copy

You can transfer data files such as MP3, WMA or JPEG from disc to the USB device.

- 1 Insert a disc contains the MP3/WMA/JPEG files.
- 2 Press **■** to stop disc play.
- 3 Connect the USB flash drive to the  (USB) jack on this DVD player.
- 4 Select the file to copy, then press **SUBTITLE**.
- 5 Select [ **Yes** ] in the menu to start to copy, then press **OK**.

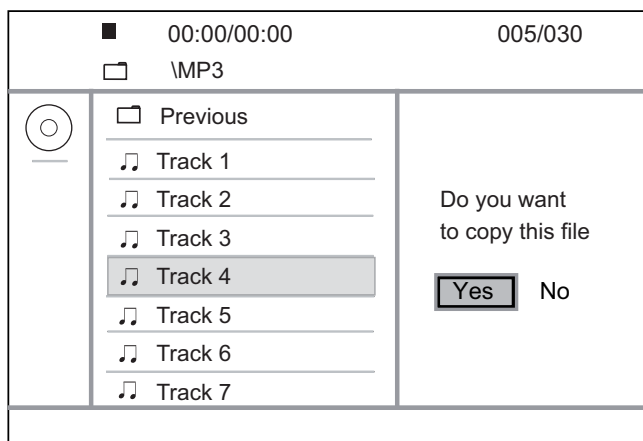

↳ Once complete, a new folder is created automatically in the USB device to store all the new data files.


- 6 To stop copy progress, press **■**, then press **OK**.

## Note

- While you copy, never press any buttons.
- Copy-protected media cannot be copied.

## Create MP3 files

You can convert audio CDs into MP3 audio files with this DVD player. The created MP3 audio files are saved in the USB device.

- 1 Insert an audio CD.
- 2 Connect the USB flash drive to the  (USB) jack on this DVD player.
- 3 During disc play, press **AUDIO/CREATE MP3**.
- 4 Select [ **Yes** ] in the menu and press **OK**.

Create MP3			
OPTIONS		TRACK	
Speed	Normal	<input type="radio"/> Track01	04:14
Bitrate	128kbps	<input type="radio"/> Track02	04:17
CRT ID3	Yes	<input type="radio"/> Track03	03:58
Device	USB 1	<input type="radio"/> Track04	04:51
Summary		<input type="radio"/> Track05	03:53
Press [OK] button to change speed.		<input type="radio"/> Track06	04:09
		<input type="radio"/> Track07	04:38
Start	Exit	Select all	Deselect all

- 5 Select the conversion options in the [ **OPTIONS** ] panel and press **OK**.

Option	Description
[ <b>Speed</b> ]	Select the write-to-file speed. <ul style="list-style-type: none"> <li>If [ <b>Normal</b> ] speed is selected, music play can be heard while creating the MP3 file.</li> </ul>
[ <b>Bitrate</b> ]	Select the quality level. Higher bitrate for better sound quality and bigger file size. <ul style="list-style-type: none"> <li>Default setting is [ <b>128 kbps</b> ].</li> </ul>
[ <b>CRT ID3</b> ]	Copy track information into the MP3 file. <ul style="list-style-type: none"> <li>Default setting is [ <b>Yes</b> ].</li> </ul>
[ <b>Device</b> ]	The created MP3 files can only be saved in USB device.

**6** Press **▶** to access the [ **TRACK** ] panel.

**7** Select the audio track, then press **OK**.

- To select another track, repeat step 7.
- To select all tracks, select [ **Select all** ] in the menu and press **OK**.
- To deselect all tracks, select [ **Deselect all** ] in the menu and press **OK**.

**8** Select [ **Start** ] in the menu to start to convert, then press **OK**.

↳ Once complete, a new folder is created automatically in the USB device to store all the new MP3 files.

- To exit the menu, select [ **Exit** ] and press **OK**.




#### Note

- While you convert, never press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB devices cannot be used to store MP3 files.

# 7 Adjust sound

## Karaoke settings

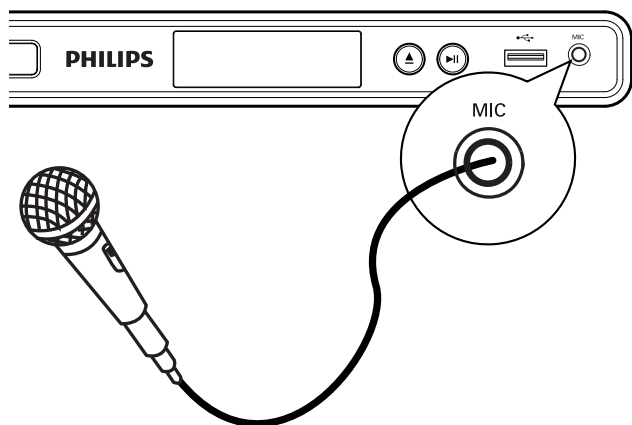

- 1 Turn on the TV to the correct viewing channel for this DVD player.
- 2 Connect a microphone (not supplied) to **MIC** jack on this DVD player.
- 3 Press **KARAOKE** repeatedly to access various setting options.

[ **MIC** ]: Press ◀ ▶ to turn on or off microphone output.

[ **Vol** ]: Press ◀ ▶ to set the microphone volume level.

[ **Echo** ]: Press ◀ ▶ to set the echo level.

[ **Key** ]: Press ◀ ▶ to set the pitch level that match your voice.


[ **Karaoke Scoring** ]: Select a karaoke rating score level.

- [ **Off** ] – no score rating display.
- [ **Basic** ] – basic rating.
- [ **Intermediate** ] – intermediate rating.
- [ **Advance** ] – advance rating.

### Note

- A karaoke score is displayed at the end of the song. Press **OK** to exit and resume karaoke session.
- Karaoke score function is only available for DVD and VCD discs.
- Set the microphone volume to the minimum level before connecting the microphone to prevent howling.

## Turn off vocal (cancel voice)

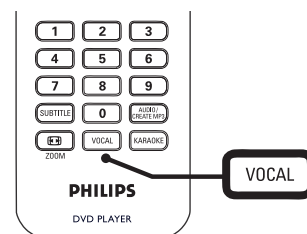





- 1 Press **VOCAL** repeatedly to toggle through various audio modes or turn off the vocal.

### Note

- You cannot cancel the voice output from MP3 discs.

# 8 Adjust settings

This section describes the various setting options of this DVD player.

Symbol	Option
	[ General Setup ]
	[ Audio Setup ]
	[ Video Setup ]
	[ Preferences ]

## Note

- If the setup option is greyed out, it means the setting cannot be changed at the current state.

## General setup

- 1 Press **SETUP**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press **▶**.
- 3 Select an option, then press **OK**.

General Setup	
Disc Lock	
OSD Language	
Sleep Timer	
Auto Standby	
DivX(R) VOD Code	

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press **◀**.
  - To exit the menu, press **SETUP**.

## Note

- See the explanations of the above options in the following pages.

### [ Disc Lock ]

Set play restriction for a specific discs. Before you start, place the disc in the disc compartment (maximum 20 discs can be locked).

- [ **Lock** ] – restrict access to the current disc. The next time you want to play this disc or unlock it, you need to enter the password.
- [ **Unlock** ] – play all discs.

## Tip

- You can set or change the password, go to [ **Preferences** ] > [ **Password** ].

### [ OSD Language ]

Select the default on-screen menu language.

### [ Sleep Timer ]

Switch to standby automatically after the preset time.

- [ **Off** ] – disable sleep mode.
- [ **15 Mins** ], [ **30 Mins** ], [ **45 Mins** ], [ **60 Mins** ] – select the count down time before the DVD player switches to standby.

## [ Auto Standby ]

Turn off or on automatic standby switching mode. It is an energy saving feature.

- [ On ] – switch to standby after 15 minutes of inactivity (for example, in pause or stop mode).
- [ Off ] – disable auto standby mode.

## [ DivX(R) VOD Code ]

Display the DivX® registration code.



### Tip

- Enter this DVD player's DivX registration code when you rent or purchase video from [www.divx.com/vod](http://www.divx.com/vod). The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

## Audio setup

- 1 Press **SETUP**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press ▼ to select [ **Audio Setup** ], then press ►.
- 3 Select an option, then press **OK**.

Audio Setup	
Analog Output	
Digital Audio	
HDMI Audio	
Audio Sync	
Volume	
Sound Mode	
Speaker Setup	
CD Upsampling	

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press ◀.
  - To exit the menu, press **SETUP**.



### Note

- See the explanations of the above options in the following pages.

## [ Analog Output ]

Select the analog audio setting based on the audio device that is connected through the analog audio jack.

- [ **Stereo** ] – for stereo output.
- [ **LT/RT** ] – for surround sound output through two speakers.
- [ **Multi Channel** ] – for multi channel output.

## [ Digital Audio ]

Select the setting based on the digital amplifier/receiver that is connected through the digital jack.

- [ **Digital Output** ] – select the type of digital output.

Option	Description
[ <b>Off</b> ]	Disable digital output.
[ <b>All</b> ]	The device supports multi-channel audio formats.
[ <b>PCM Only</b> ]	The device is not capable of decoding multi-channel audio. Audio is downmixed to two-channel sound: see [ <b>LPCM Output</b> ] setting.

- [ **LPCM Output** ] – select the LPCM (Linear Pulse Code Modulation) output sampling rate.

Option	Description
[ <b>48kHz</b> ]	For discs recorded at sampling rate of 48 kHz.
[ <b>96kHz</b> ]	For discs recorded at the sampling rate of 96 kHz.



## Note

- [ **Digital Audio** ] setting is only available if the [ **HDMI Audio** ] is set to [ **Off** ].
- [ **LPCM Output** ] setting is only available if the [ **Digital Output** ] is set to [ **PCM only** ].
- The higher the sampling rate, the better the sound quality.

## [ HDMI Audio ]

Select the audio output setting when you connect this DVD player and the TV with a HDMI cable.

- [ **On** ] – audio output through the TV.
- [ **Off** ] – disable audio output from the TV.

## [ Audio Sync ]

Set the default delay time for audio output when you play a video disc.

1. Press **OK**.
2. Press ◀▶ to set the delay time.
3. Press **OK** to confirm and exit.

## [ Volume ]

Set the default volume level when you play a disc.

1. Press **OK**.
2. Press ◀▶ to set the volume.
3. Press **OK** to confirm and exit.

## [ Sound Mode ]

Select a preset sound effect to enhance the audio output.

- [ **3D** ] – select a virtual surround sound effect that is produced from the left and right audio channels.
- [ **Movie Mode** ] – select a sound effect for movies.
- [ **Music Mode** ] – select a sound effect for music.

## [ Speaker Setup ]

When you connect a speaker system, you can optimize surround output for the connected speakers.

### • [ Front Speaker ]

Option	Description
[ <b>Large</b> ]	Produce low frequency signal below 120 Hz.
[ <b>Small</b> ]	Cannot produce low frequency signal below 120 Hz.

### • [ Center Speaker ] / [ Rear Speakers ]

Option	Description
[ <b>Large</b> ]	Produce low frequency signal below 120 Hz.
[ <b>Small</b> ]	Cannot produce low frequency signal below 120 Hz.
[ <b>Off</b> ]	No speaker is connected.

### • [ Subwoofer ]

Option	Description
[ <b>On</b> ]	A subwoofer is connected.
[ <b>Off</b> ]	No subwoofer is connected.

- [ **Speakers Volume** ] – Set the volume level of each speaker to get the ideal audio balance.

1. Press **OK**.
2. Select a speaker, then press ◀ ▶ to adjust the volume.
3. Press **OK** to confirm and exit.

- [ **Speakers Delay** ] – Set the delay time for the center, subwoofer and rear speakers if they are placed closer to the listening position, so that the sound output from all speakers reach the listening position at the same time.

1. Press **OK**.
2. Select a speaker, then press ◀ ▶ to set the delay time.
3. Press **OK** to confirm and exit.



### Note

- [ **Speaker Setup** ] setting is only available if you have set the [ **Analog Output** ] setting to [ **Multi Channel** ].



### [ CD Upsampling ]

For better sound quality in stereo mode, convert the music CD to a higher sampling rate.

- [ **Off** ] – turn off CD-upsampling.
- [ **88.2kHz** ] – convert to twice the original sampling rate.
- [ **176.4kHz** ] – convert to four times the original sampling rate.

### [ Night Mode ]

You can play DVDs with Dolby Digital mode at a low volume, without disturbing others. High volume output is decreased and low volume output is increased to an audible level.

- [ **On** ] – turn on night mode.
- [ **Off** ] – enjoy surround sound with its full dynamic range.

## Video setup

- 1 Press **SETUP**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press ▼ to select [ **Video Setup** ], then press ►.
- 3 Select an option, then press **OK**.

Video Setup	
TV System	
TV Display	
Progressive	
Picture Setting	
HD JPEG	
HDMI Setup	

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press ◀.
  - To exit the menu, press **SETUP**.



#### Note

- See the explanations of the above options in the following pages.

## [ TV System ]

If the video does not appear correctly, change the setting. By default, this setting matches the most common setting for TVs in your country.

- [ **PAL** ] – for PAL-system TV.
- [ **Multi** ] – for TV that is compatible with both PAL and NTSC.
- [ **NTSC** ] – for NTSC-system TV.

## [ TV Display ]

Select the screen format according to how you want the picture to appear on the TV.



4:3 Pan Scan (PS)

4:3 Letter Box (LB)

16:9 (Wide Screen)

- [ **4:3 Pan Scan** ] – for standard TV, a full-height screen display with the sides trimmed.
- [ **4:3 Letter Box** ] – for standard TV, a 'wide-screen' display with black bars on the top and bottom.
- [ **16:9** ] – for wide-screen TV (frame ratio 16:9).

## [ Progressive ]

If a progressive scan TV is not connected through HDMI cable, turn on progressive scan mode.

- [ **On** ] – turn on progressive scan mode.
- [ **Off** ] – disable progressive scan mode.



### Tip

- There is more detailed description available. See chapter 'Get Started - Turn on Progressive Scan' for details.

## [ Picture Setting ]

Select a predefined set of picture color settings or customize the personal setting.

- [ **Standard** ] – original color setting.
- [ **Bright** ] – vibrant color setting.
- [ **Soft** ] – warm color setting.
- [ **Personal** ] – customize the color setting. Set the level of brightness, contrast, sharpness and color saturation, then press **OK**.

## [ HD JPEG ]

Enjoy untouched and uncompressed JPEG pictures at its original resolution when you connect this DVD video player and the TV with a HDMI cable.

- [ **On** ] – display high definition picture.
- [ **Off** ] – display standard picture.



### Note

- This DVD video player supports the resolution display of 720p and above.

## [ HDMI Setup ]

When you connect this DVD player and the TV with a HDMI cable, select the best HDMI setup that the TV can support.

- [ **Resolution** ] – select a video resolution that is compatible with the TV display capability.

Option	Description
[ <b>Auto</b> ]	It detect and select the best supported video resolution automatically.
[ <b>480i</b> ], [ <b>480p</b> ], [ <b>576i</b> ], [ <b>576p</b> ], [ <b>720p</b> ], [ <b>1080i</b> ], [ <b>1080p</b> ]	Select a video resolution that best supported by the TV. See the TVs manual for details.



### Note

- If the setting is not compatible with the TV, a blank screen appears. Wait for 15 seconds for auto recover or switch to its default mode as follows:
  - Press **▲** to open the disc compartment.
  - Press **numeric button '1'**.

- [ Wide Screen Format ]** – define the wide screen format for disc play.

Option	Description
<b>[ Superwide ]</b>	Center position of the screen is stretched less than the side. This setting is only applicable if the video resolution is set to 720p or 1080i/p.
<b>[ 4:3 Pillar Box ]</b>	No stretching of the picture. Black bars are displayed on both sides of the screen. This setting is only applicable if the video resolution is set to 720p or 1080i/p.
<b>[ Off ]</b>	Picture will be displayed according to the format of the disc.



### Note

- This setting is only available if you have set the **[ TV Display ]** setting to **[ 16:9 ]**.

- [ EasyLink Setup ]** – if this DVD player is connected to HDMI CEC compliant TV/devices, all connected devices can respond to the following commands simultaneously:

Option	Description
<b>[ EasyLink ]</b>	Turn off or turn on all EasyLink features. <ul style="list-style-type: none"> <li>To disable this feature, select <b>[ Off ]</b>.</li> </ul>
<b>[ One Touch Play ]</b>	When you press the STANDBY button, it turns on the TV and this DVD player, then video disc play starts (if a video disc is found in the disc compartment). <ul style="list-style-type: none"> <li>To disable this feature, select <b>[ Off ]</b>.</li> </ul>
<b>[ One Touch Standby ]</b>	When you press and hold the STANDBY button, all connected HDMI CEC devices switch to standby mode simultaneously. <ul style="list-style-type: none"> <li>To disable this feature, select <b>[ Off ]</b>.</li> </ul>



### Note

- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.
- You must turn on the HDMI CEC operations on the TV/devices before you can enjoy the EasyLink controls. See the TVs/devices manual for details.

# Preferences

- 1 Press **SETUP**.  
↳ [ **General Setup** ] menu is displayed.
- 2 Press ▼ to select [ **Preferences** ], then press ►.
- 3 Select an option, then press **OK**.

Preferences	
Audio	
Subtitle	
Disc Menu	
Parental Control	
PBC	
Mp3/Jpeg Nav	
Password	
DivX Subtitle	

- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press ◀.
  - To exit the menu, press **SETUP**.



## Note

- Stop disc play before you can access to [ **Preferences** ].
- See the explanations of the above options in the following pages.

## [ **Audio** ]

Select the default audio language for DVDs.

## [ **Subtitle** ]

Select the default subtitle language for DVDs.

## [ **Disc Menu** ]

Select the menu language for DVDs.



## Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some DVDs, the subtitle/audio language can only change from the disc menu.
- To select the languages that are not listed in the menu, select [ **Others** ]. Then check the Language Code list at the back of this user manual and enter the respective language code.

## [ **Parental Control** ]

Restrict access to DVDs that are unsuitable for children. These types of DVDs must be recorded with ratings.

1. Press **OK**.
2. Select a rating level, then press **OK**.
3. Press the **numeric buttons** to enter the password.



## Note

- Rated DVDs above the level you set in [ **Parental Control** ] require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some DVDs have ratings printed on them but are not recorded with ratings. This function has no effect on such DVDs.



## Tip

- You can set or change the password, go to [ **Preferences** ] > [ **Password** ].

### [ PBC ]

For VCDs/SVCDs recorded with PBC (playback control), you can access the disc content through an interactive menu.

- [ **On** ] – an index menu is displayed when you load a disc for play.
- [ **Off** ] – skip the menu and start play from the first track.

### [ Mp3/Jpeg Nav ]

Select to display the folders or display all the files.

- [ **View Files** ] – display all the files.
- [ **View Folders** ] – display the folders of MP3/WMA files.

### [ Password ]

Follow the instructions on the TV to set or change the password for locked discs and play restricted DVDs.

Preferences	
Change password	
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm PWD	<input type="password"/>
	<input type="button" value="OK"/>

1. Press the **numeric buttons** to enter '136900' or the last set password at [ **Old Password** ] field.
2. Enter the new password at [ **New Password** ] field.
3. Enter the new password again at [ **Confirm PWD** ] field.
4. Press **OK** to exit the menu.



#### Note

- If you forget the password, enter '136900' before you set a new password.

### [ DivX Subtitle ]

Select a character set that supports the DivX subtitle.

[ <b>Standard</b> ]	Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish, Turkish
---------------------	---

[ <b>Hebrew</b> ]	Hebrew (except for Taiwan)
-------------------	-------------------------------



#### Note

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

### [ Version Info ]

Display the software version of this DVD player.

This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this DVD player.

### [ Default ]

Reset all the settings of this DVD player to factory default, except for [ **Disc Lock** ], [ **Parental Control** ] and [ **Password** ] settings.

# 9 Additional information

## Update software

To check for updates, compare the current software version of this DVD player with the latest software version (if available) at the Philips website.

### ! Caution

- Power supply must not be interrupted during software upgrade.

1 Press **SETUP**.

Preferences	
Disc Menu	
Parental Control	
PBC	
Mp3/Jpeg Nav	
Password	
DivX Subtitle	
Version Info	
Default	

2 Select [ **Preferences** ] > [ **Version Info** ], then press **OK**.

3 Write down the file name, then press **SETUP** to exit the menu.

4 Visit [www.philips.com/support](http://www.philips.com/support) to check for the latest software version, using the file name for this DVD player.

5 Refer to the upgrade instructions for more information.

### ≡ Note

- Disconnect the power cord for a few seconds and connect again to reboot the system.



## Care

### ! Caution

- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

### Clean discs

Wipe the disc with a micro fibre cleaning cloth from the center to the edge in a straight line movement.

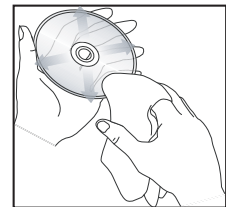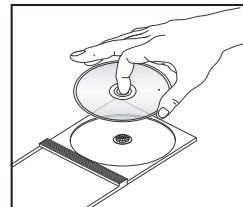

# 10 Specification



## Note

- Specification and design are subject to change without notice.

## Accessories supplied

- Quick Start Guide
- Remote control and batteries
- Audio/video cables
- Power cable (except for Taiwan)

## Playback media

- DVD-Video, Video CD/SVCD, Audio CD, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DivX-CD, Picture CD, MP3-CD, WMA-CD, WMV-CD, USB flash drive

## USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)

## TV standard

- Number of lines:
  - 625 (PAL/50Hz); 525 (NTSC/60Hz)
- Playback: Multi-standard (PAL/NTSC)

## Video performance

- Video DAC: 12 bits, 108 MHz
- Y Pb Pr: 0.7 V<sub>pp</sub> ~ 75 ohm
- Video output: 1 V<sub>pp</sub> ~ 75 ohm

## Video format

- Digital compression:
  - MPEG 2: DVD/SVCD
  - MPEG 1: VCD/DivX
- Horizontal resolution:
  - DVD: 720/1920 pixels (50 Hz); 720/1920 pixels (60 Hz)
  - VCD: 352 pixels (50 Hz); 352 pixels (60 Hz)
- Vertical resolution:
  - DVD: 576/1080 lines (50 Hz); 480/1080 lines (60 Hz)
  - VCD: 288 lines (50 Hz); 240 lines (60 Hz)

## Audio performance

- DA converter: 24 bits, 192 kHz
- Frequency response:
  - DVD: 4 Hz - 22 kHz (48 kHz); 4 Hz - 44 kHz (96 kHz)
  - SVCD: 4 Hz - 20 kHz (44.1 kHz); 4 Hz - 22 kHz (48 kHz)
  - CD/VCD: 4 Hz - 20 kHz (44.1 kHz)
- Signal-Noise (1 kHz): > 90 dB (A-weighted)
- Dynamic range (1 kHz): > 80 dB (A-weighted)
- Crosstalk (1 kHz): > 70 dB
- Distortion/noise (1 kHz): > 65 dB
- MPEG MP3: MPEG Audio L3

## Audio format

- Digital:
  - MPEG/AC-3/PCM: Compressed digital (16, 20, 24 bits fs, 44.1, 48, 96 kHz)
  - MP3 (ISO 9660): 96, 112, 128, 256 kbps & variable bit rate fs, 32, 44.1, 48 kHz
- Analog sound stereo
- Dolby surround compatible downmix from Dolby Digital multi-channel sound

## Connections

- Y Pb Pr output: Cinch 3x
- Video output: Cinch (yellow)
- Audio output (Front L+R): Cinch (white/red)
- Digital output:
  - 1 coaxial: IEC60958 for CDDA/LPCM; IEC61937 for MPEG 1/2, Dolby Digital
  - 1 optical
- HDMI output
- 5.1 channel analog output
  - Audio Front L+R: Cinch (white/red)
  - Audio Rear L+R: Cinch (white/red)
  - Audio Center: Cinch (blue)
  - Audio Subwoofer: Cinch (black)

## **Main unit**

- Dimensions (w x h x d): 360 x 37 x 209 (mm)
- Net Weight: approximately 1.3 kg

## **Power**

- Power supply rating: 110 V - 240V; 50/60 Hz
- Power consumption: < 12 W
- Power consumption in standby mode: < 0.3 W

## **Laser Specification**

- Type: Semiconductor laser InGaAlP (DVD), AlGaAs (CD)
- Wave length: 658 nm (DVD), 790 nm (CD)
- Output Power: 7.0 mW (DVD), 10.0 mW (VCD/CD)
- Beam divergence: 60 degrees



# 11 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of this unit.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this DVD player, check the following points before requesting service. If the problem remains unsolved, register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact philips, you will be asked for the model and serial number of your DVD player. The model number and serial number are on the back or bottom of your DVD player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Main unit

### The buttons on this DVD player do not work.

- Disconnect this DVD player from the power outlet for a few minutes, then connect again.

---

## Picture

### No picture.

- See TV manual for correct video input channel selection. Change the TV channel until you see the DVD screen.

- If this happens when you turn on the progressive scan setting or change the TV system setting, you have to switch to its default mode:
  1. Press to open the disc compartment.
  2. Press the **numeric button '1'** (for progressive scan) or the **numeric button '3'** (for TV System).

### No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, you have to switch to its default mode:
  1. Press to open the disc compartment
  2. Press **numeric button '1'**.

---

## Sound

### No sound.

- Ensure that the audio cables are connected and the connected device is turned on to the correct input source.

### No sound on HDMI connection.

- You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI-compatible.
- Ensure that the [ **HDMI Audio** ] setting is turned on.

### No sound during DivX movies play.

- The audio codec may not be supported by this DVD player.

---

## Play

### **DivX video files cannot be played.**

- Ensure that the DivX video file is complete.
- Ensure that the file name extension is correct.

### **The aspect ratio of the screen is not aligned with the TV display setting.**

- The aspect ratio is fixed on the DVD.

### **DivX subtitle are not displayed correctly.**

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set.
  1. Press **SETUP**.
  2. Select [ **Preferences** ] > [ **DivX Subtitle** ] in the menu.
  3. Select the character set that supports the subtitle.

### **The contents of the USB flash drive cannot be read.**

- The USB flash drive format is not compatible with this DVD player.
- Drive is formatted with different file system which is not supported by this DVD player (e.g. NTFS).

# 12 Glossary

---

## A

### Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

## D

### DivX®

The DivX code is a patent-pending, MPEG-4 based video compression technology, developed by DivX Networks, Inc., that can shrink digital video to sizes small enough to be transported over the internet, while maintaining high visual quality.

---

## H

### HDMI

High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognised by their file extension 'JPG or JPEG'.

---

## M

### MP3

A file format with a sound data compression system. 'MP3' is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer3. By using the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD. Files are recognised by their file extension '.MP3'.

---

## O

### One-touch play

When you connect the DVD player to devices that support one-touch play, you can control the DVD player and the devices with one remote control. For example, when you press Play on the DVD remote control, the TV automatically switches to the correct channel to show the DVD content.

### One-touch standby

When you connect the DVD player to devices that support standby, you can use DVD player remote control to put the DVD player and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

---

## **P**

### **PBC**

Playback Control. A system of navigating a Video CD/Super VCD through on-screen menus recorded onto the disc. You can enjoy interactive play and searching.

### **Progressive Scan**

The progressive scan displays twice the number of frames per second than ordinary TV system. It offers higher picture resolution and quality.

---

## **W**

### **WMA**

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 9 or Windows Media Player for Windows XP. Files are recognised by their file extension 'WMA'.

### **WMV**

A video file or stream in Windows Media format. It is a compression format of motion picture based on MPEG-4 developed by Microsoft.

## Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	Ivrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja	7889	Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
Česky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provençal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (International)	7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

**PHILIPS CONSUMER ELECTRONICS  
WARRANTY POLICY FOR AUSTRALIA**

Effective 1st October 2007

Philips provides the following Consumer Electronics products with a 1 Year Manufacturers Warranty:-

*Colour Televisions, Projection TV, Plasma & LCD TV, DVD Players, DVD Recorders, DVD Recorders with Hard Disk, Personal Video Recorders, Audio Systems, Wireless Audio Systems, Home Theatre systems, Digital Set Top Box, Digital Photo Display, MP3 players & Portable Audio products.*

Additionally, all Philips LCD televisions with a built-in digital tuner sold after 1<sup>st</sup> October 2007, are supported by a 3 Year Manufacturers Warranty.

**The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.**

The conditions contained in this warranty replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Please record the following information for your records and keep in a safe place.  
It is essential that you retain your original purchase receipt to make a warranty claim.

Model number : .....

Serial number : .....

Date of purchase : .....

Retailer : .....

If you require assistance with the operation of the product, its features or specifications, you may call the **Philips Technology Care Centre** on **1300 363 391** where support is provided by our trained call centre staff.

If the product fails within the warranty period then the following will apply.

**Free Repair Service – at an Authorised Service Centre**

For the products listed below, please contact one of our Authorised Service Centres on 1300 361 392.  
*Colour Television, Plasma or LCD Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorder with Hard Drive, Personal Video Recorder, LCD Projector, Wireless Audio System, Audio System, Home Theatre System, Digital Set-Top-Box or a Portable DVD player with an LCD screen for which you paid more than \$250.*

Version 1.2: 1<sup>st</sup> October 2007

**Free Replacement – at your Retailer**

For Digital Photo Frames or any product with a purchase price of less than \$250, please return the faulty product to the place of purchase. The retailer will arrange a replacement product for you.

If your Philips product develops a fault outside of the warranty period, please contact a Philips **Authorised Service Centre** on **1300 361 392** to discuss your repair options.

**Conditions of Repair Warranty**

- a. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Proof of the original date of purchase must be provided.
- b. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- c. Philips may, at its discretion choose to replace rather than repair any product covered by this Warranty.
- d. If a replacement product is supplied under the repair policy, it is warranted for the remainder of the warranty period, from the original date of purchase.
- e. Home service is provided only within the normal service area of the nearest Philips Authorised Service Centre. Home Service will be provided for television only with a screen size of 29 inch or above (product includes CRT, LCD TV, Projection TV, and Plasma TV). For televisions with screen sizes of less than 29 inch and all other products with a repair warranty, please take these products to the nearest Authorised Service Centre.
- f. This Manufacturers Warranty is limited to 3 months for products used in commercial applications.
- g. Product accessories are covered by the same warranty period. If an accessory is faulty, please contact the Philips Technology Care Centre for a replacement.
- h. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.
- i. The warranty period is valid from the original date of purchase of the product.

**This Warranty does not cover:-**

- a. Mileage or travel is not covered outside the Philips Authorised Service Centres' normal service area.
- b. Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c. Product failures caused by misuse, neglect, accidental breakage, transit damage, amateur repairs or modification by un-authorized persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d. Cleaning of video or audio heads.
- e. Reception problems.
- f. Replacement of worn or used batteries or other consumables.
- g. Second hand products.
- h. Refurbished products which are covered by a 6 month manufacturers warranty.

## **New Zealand - Guarantee and Service for New Zealand**

---

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

- 1.** The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
- 2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3.** The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4.** Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- 5.** In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.


However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**The Guarantee Controller  
Philips New Zealand Ltd.**

**P.O. Box 41.021**

**Auckland**

 **(09) 84 94 160**

**fax**  **(09) 84 97 858**



