


Quick Start Guide


DVP 5982
DVD Video Player

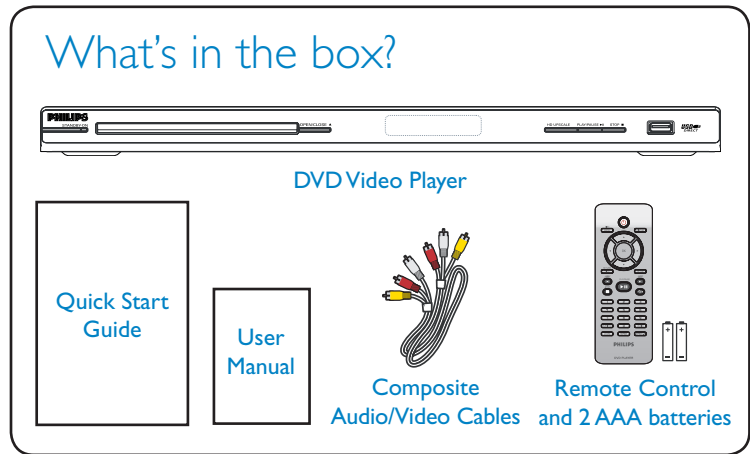

1 Connect


Basic Audio/Video Connections

Composite Video CVBS (Good Quality)

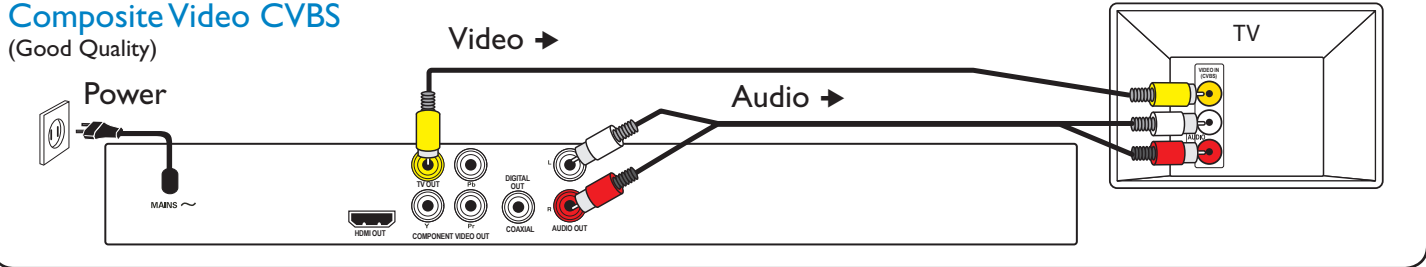


OR

Component Video (Better Quality)

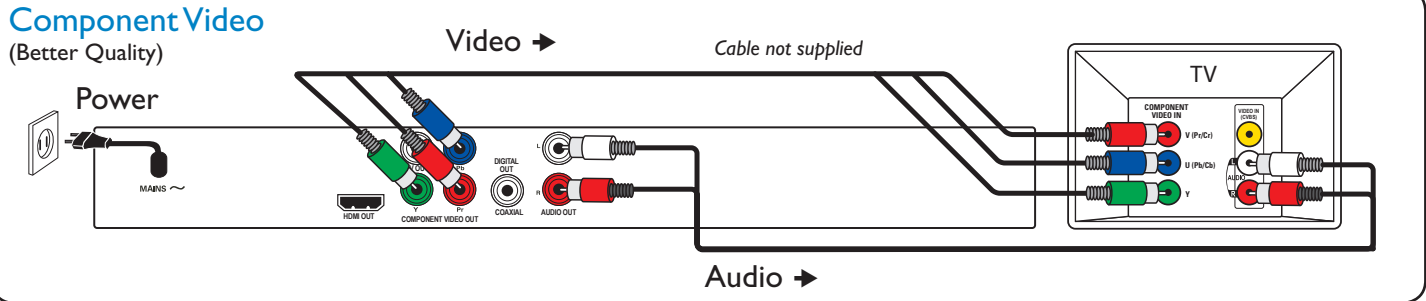


OR

HDMI (Best Quality)

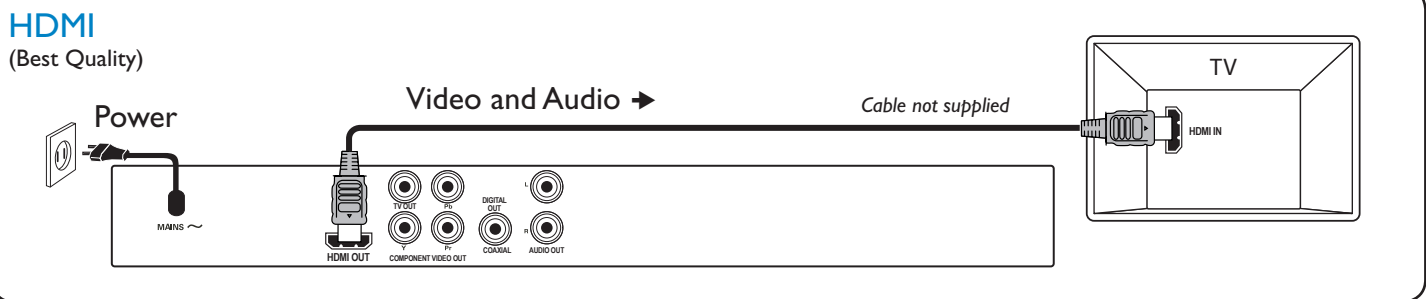


OR

RF Modulator

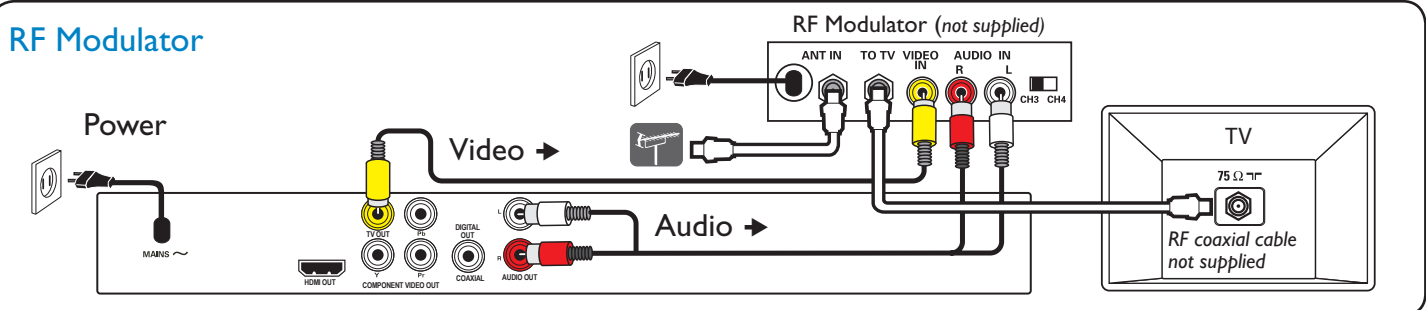

2 Set up

A Finding the viewing channel


 
- 1 Press  on the DVD player's remote control.
- 2 Switch on the TV.
 - The DVD background appears on the TV screen.
- 3 Press '2' on the TV's remote control, then repeatedly press the Channel Down button until you see the DVD background screen. This is the correct viewing channel for the DVD player.


Note For some TVs, to find the correct viewing channel, you can keep pressing the AV or SELECT buttons. If still unable to find the correct viewing channel, check the connections again or check your TV's user manual. If you are using a RF modulator, set the TV to channel 3 or 4.


B Language preference setup

Use the DVD player's remote control to select the desired On-screen language, Audio language, Subtitle language and Menu language you preferred.

Selecting On-screen language

- 1 Press **SETUP** on the DVD player's remote control.
- 2 Press  to highlight { OSD Language }, then press .

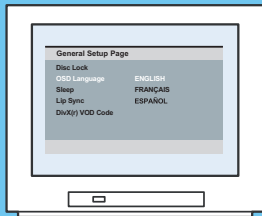

- 3 Press  to select a language and press **OK**.

Note The On-screen language for the setup menu will remain once you set it, regardless of various disc languages.

Need help?

User Manual

See the user manual that comes with your Philips DVD Player

Online

Go to www.philips.com/welcome

Hotline



Call 1-888-PHILIPS (1-888-744-5477) for our operators.


3 Enjoy

A Start playback

- 1 Playback may start automatically when a disc has been loaded in the disc tray.

 
Note If a disc menu appears on the TV:

- 1) Press  to scroll through the options available in the DVD menu.
- 2) Press **PLAY/PAUSE**  on the option you want to start playback.

- 2 Press **PLAY/PAUSE**  to start playback.

- 3 To stop playback, press **STOP** .

- 4 Press **DISC MENU** to go back to the disc menu anytime.

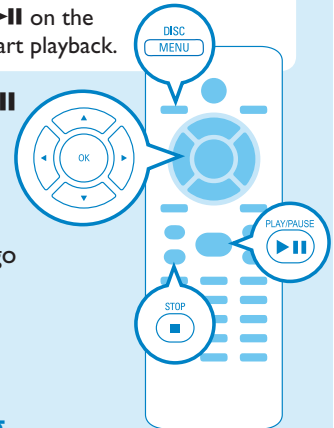

Troubleshooting

For more troubleshooting tips, see the user manual.

No power

- Check if the AC power cord is properly connected.
- Press the STANDBY-ON on the front of the DVD player to turn on the power.

No picture

- Check connection to TV and ensure the plugs are firmly in place.

No sound or distorted sound

- Adjust the volume
- Check audio connections are in the correct input source.
- For HDMI connection, check if your TV's HDMI or Digital setting is set to ON. Contact your TV manufacturer for detailed information.

No sound from Coaxial

- When HDMI Audio is set to ON, coaxial will not have any output.

2007 © Philips Consumer Electronics

A Division of Philips Electronics North America Corp

P.O. Box 671539

Marietta, GA 30006-0026

Printed in China

SL/0720/37_03

