

1. Introduction

The upgrade version of this software is **Version 0805 1**

2. Key Features added in this software version

This software version includes:

- This upgrade software solves the problem of Display with wrong spelling on '**ALBUM**' or '**TRACK**' mode.
-

3. Software Upgrade Disc Preparation

Tools Required

You will need the following items :

- a personal computer
 - a CD-R/RW drive and writing application software
 - a blank CD-R
-

4. Software Version Verification Procedure

It is important to write down the system version information of your set before you start the upgrade procedure. This information is also useful in case you need to call Philips Customer Care Center.

- 1) Keep no disc in DVD tray.
- 2) Press <STOP><1><2><3> on the Remote Control.
- 3) The software version is displayed on the TV screen.

5. How to download the software to your computer

- 1) Click the link to save the software on your computer.



- 2) Unzip the .zip file and extract files into your PC.

Note: Do not rename the filename

6. Steps to upgrade FW-D550 / FW-D596

1. Burn the files to blank CD R or CDRW, using the following settings :
 - File System CD-ROM ISO Level 2
 - Mode 1/2/XA
 - Character set ISO 9660
 - Finalised, single session
 - **Write speed slow (e.g. 2x, 4x)**

Finalize the disc. (The application may do this automatically.)

NOTE : Packet writing application for drag & drop copying cannot be used for creating an upgrade disc. Use only a dedicated CD writing application allowing 'disc at once' recording. No UDF setting as well.

2. Power up the set and open the DVD tray.
3. Insert the prepared upgrade CD-ROM.
4. Close the tray and the set will auto read the disc.
5. Upon recognize the disc, the set will start to download the new firmware. The TV screen will show the following messages in sequence : "**Disc reading**" "**Erase**" "**Writing**" "**Done**" "**Open**"
6. The whole process takes less than 2 minutes after which the set shuts down automatically and the TV screen becomes dark.

Note: Do not press any buttons or interrupt the mains supply during the entire upgrading process, otherwise the set may become defective.

7. Unplug & replug the mains cable
 8. Press "**Open**" key directly and remove Upgrade CD-ROM.
-

7. After the upgrade

Do confirm the software version by checking the system version.

Please follow the procedure described in the section “**Software Version Verification Procedures**”.

8. Software History

- **Version 0805 1** - This upgrade software solves the problem of Display with wrong spelling on 'ALBUM' or 'TRACK' mode.