 
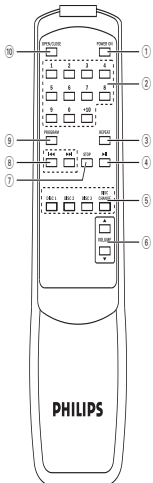 



Hook Up  
Guide

FWC185


# PHILIPS

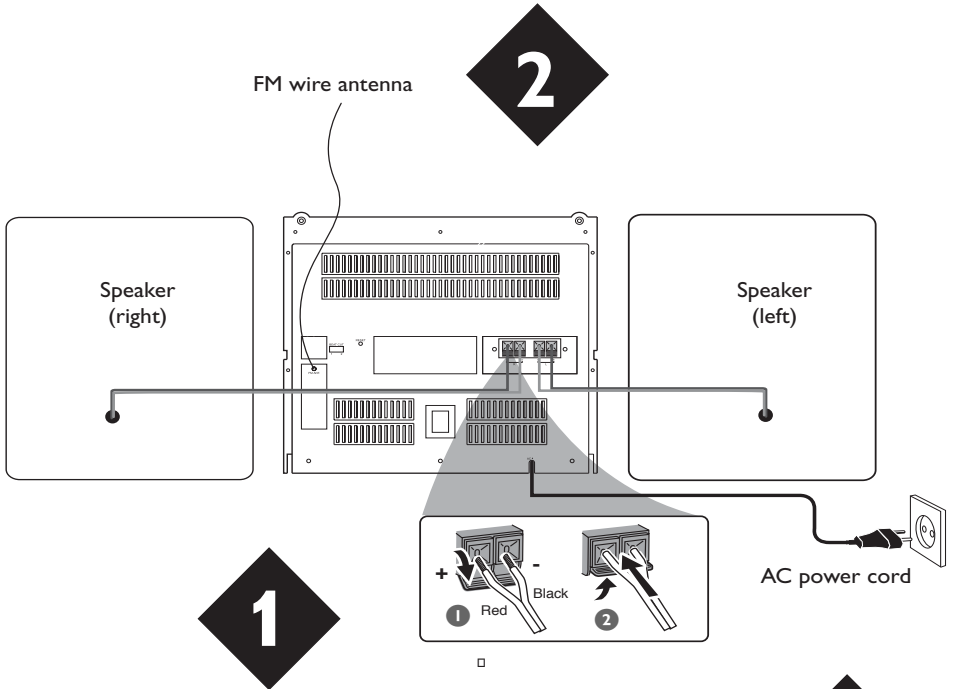

 2 x R06/AA batteries  
(not included)

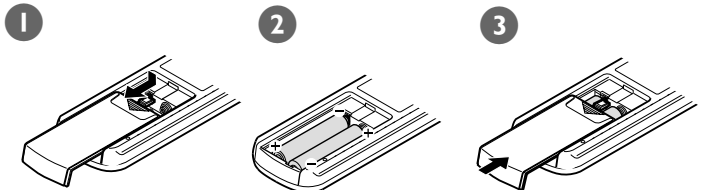

## Quick Use Guide

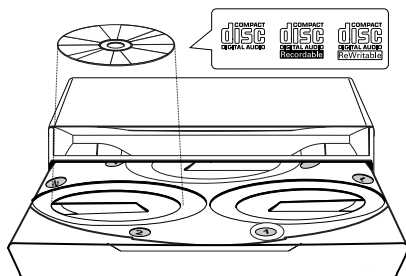 

Detailed playback features and additional functions are described in the accompanying owner's manual.

### Playing Discs

- 1 Press **POWER** to on, then push **FUNCTION** to **CD**.
- 2 Press **OPEN/CLOSE** to open the disc trays., and load your discs (with the printed side up) in the two trays.
  - To load a third disc, press **DISC CHANGE** on the remote control to rotate the disc trays.
- 3 Press **OPEN/CLOSE** to close the disc trays.
- 4 Press **▶||** to start playback.
  - To start playback from a selected disc tray, press **DISC 1, 2 or 3**.
- 5 Press **■** to stop playback.
- 6 To remove the disc, press **OPEN/CLOSE** to open the disc trays.
  - If necessary, press **DISC CHANGE** on the remote control to rotate the disc trays.

### Listening to the Radio

- 1 Press **POWER** to on, then push **FUNCTION** to **TUNER**.
- 2 Adjust **BAND** to **MW** or **FM ST**.
- 3 Turn **TUNING** to tune to a station.
  - To tune to a weak FM station, adjust **BAND** to **FM** (mono).

### Playing a tape

- 1 Press **POWER** to on, then push **FUNCTION** to **TAPE**.
- 2 Press **■▲** to open the tape deck door.
- 3 Load the tape with the open side downward and full spool to the left.
- 4 Close the tape deck door.
- 5 Press **▶** to start playback.
- 6 To stop the tape, press **■▲**.

