

# Quick Start Guide



- Step A *Connect*
- Step B *Setup*
- Step C *Enjoy*


## What's in the Box?

You should find these items upon opening the box.

Composite Video Cable

AC power cord

Remote control  
(without batteries)

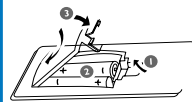

Audio cable


1  
Quick Start Guide

2  
User Manual

## Step A *Connect*


- 1 Connect the speaker cables.
- 2 Connect the composite video cable to a TV.
- 3 Connect the power supplies of the system and TV.


**Tip**  
- See the User Manual for other TV connection options.

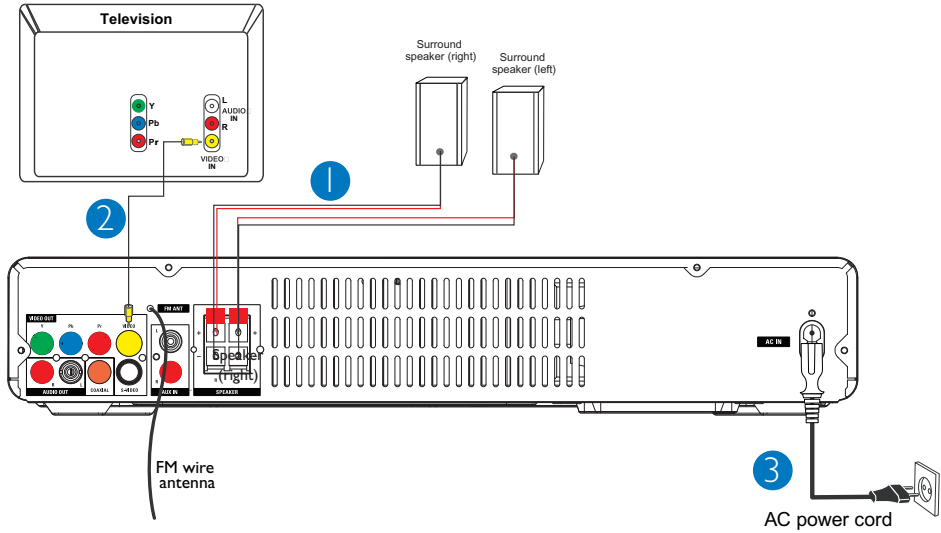

## Step B *Setup*

### Setting up the TV


- 1 Press **STANDBY-ON**  to switch on the set.
- 2 Press **SOURCE** (**DISC** on the remote) to select disc source.
- 3 Turn on the TV and set it to the correct Video In channel.

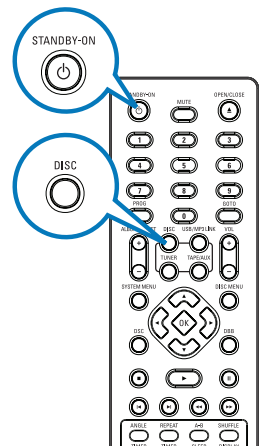

# Step B Setup

## Setting the clock



- 1 In standby mode, press and hold **CLOCK** on the set.
- 2 When the hour digits flash, press **VOLUME +/-** on the front panel or **VOL +/-** on the remote to set the hours.
- 3 Press **CLOCK** again and the minute digits flash. Then press **VOLUME +/-** on the front panel or **VOL +/-** on the remote to set the minutes.
- 4 Press **CLOCK** again to confirm the time setting.

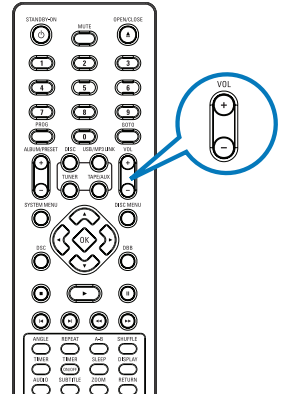

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

## Setting system menu options

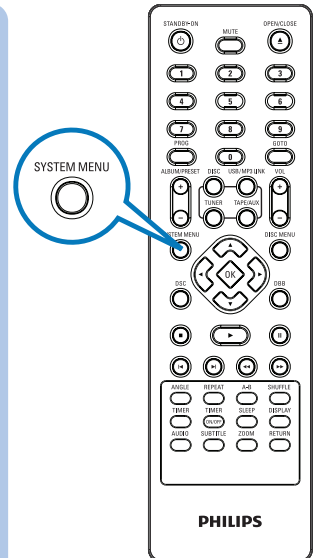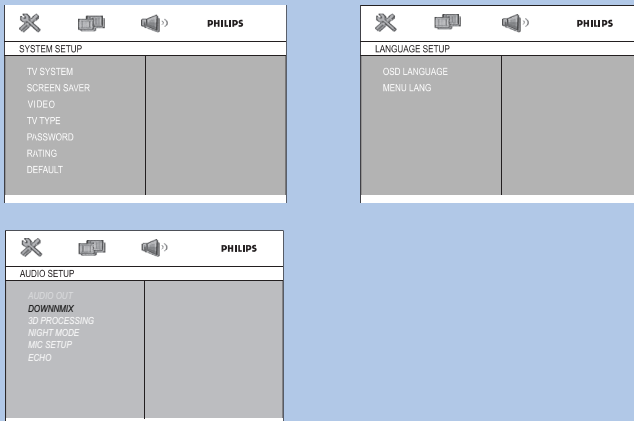


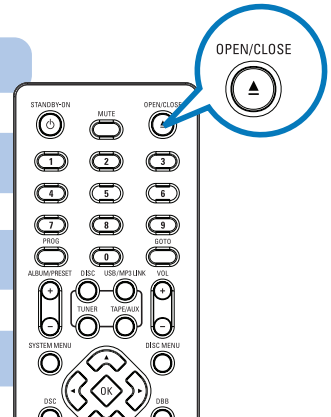
### Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

## Step C Enjoy

### Playing a disc

- 1 Press **OPEN•CLOSE**  to open the disc door.
- 2 Insert a disc with the print side facing up and close the disc door.
- 3 Playback will start automatically. If not press **▶||**.
- 4 To stop playback, press **■**.




### Programming and tuning to radio stations

- 1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.
- 2 Press and hold **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET+/-** on the set or **◀/▶** on the remote control until the desired preset station is displayed.

### Playing a USB mass storage device

With the system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this system).

- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE** once or more (or **USB/MP3 LINK** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

#### Tip

- The system only supports audio files stored in the USB device.



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>



PDCC-LL-0820