

Quick start guide









Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

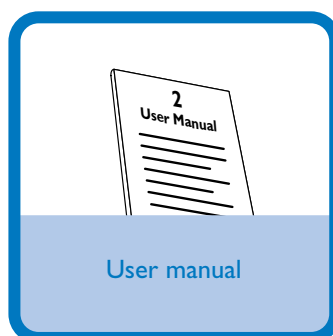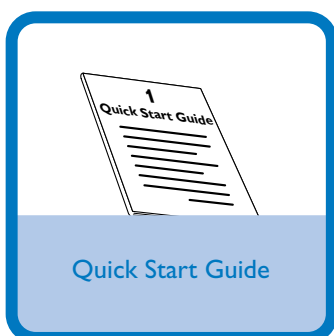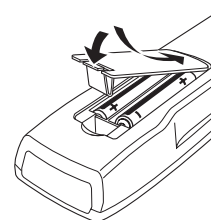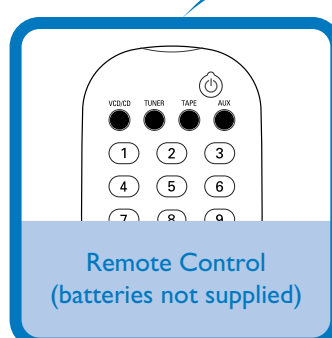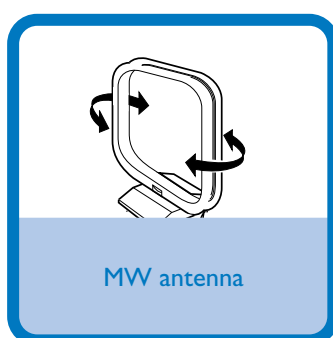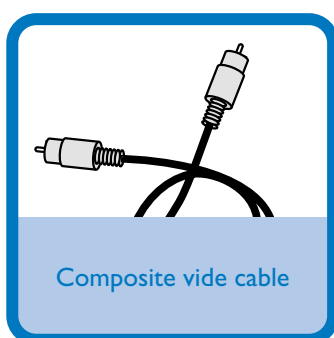

PHILIPS

Step A *Connect*

1

Connect the speaker cables.

2


Connect the MW antenna.

3

Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

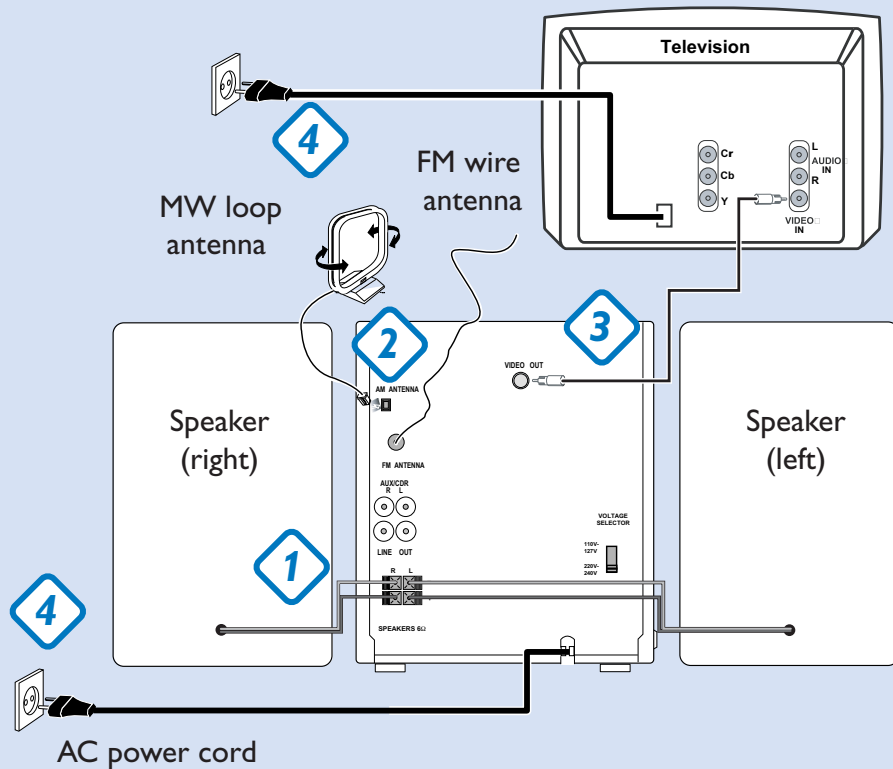

Step B *Setup*

Setting the clock

1

In standby or view clock mode, press **CLOCK•TIMER** (**CLOCK SET** on the remote) **once**. In other source mode, press **CLOCK•TIMER** (**CLOCK SET** on the remote) **twice**.

2


Press **ALBUM-/+◀▶** (**ALBUM ▲▼** on the remote) repeatedly to set the hour.

3

Press **TITLE-/+◀▶** (**◀▶/▶▶** on the remote) repeatedly to set the minute.


4

Press **CLOCK•TIMER** (**CLOCK SET** on the remote) again to store the setting.

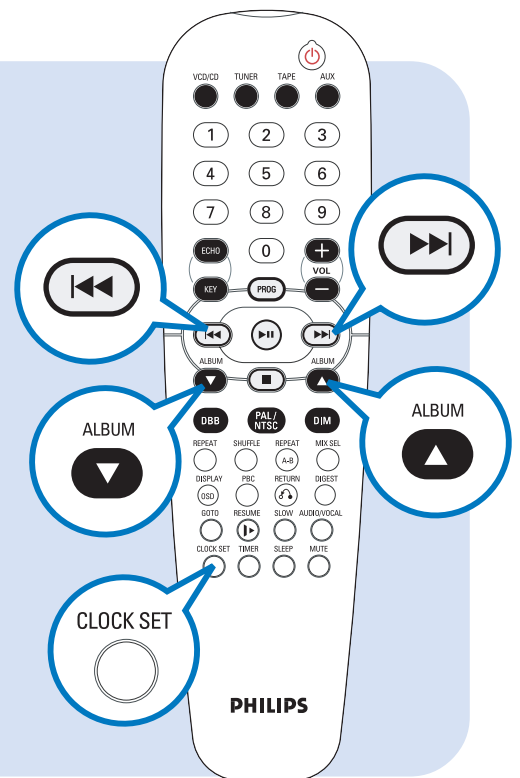

Playing a disc

- 1 Select **VCD/CD** source.
- 2 Press **OPEN•CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.
- 3 Playback will start automatically. If not press ▶ || .
- 4 To stop playback, press ■.

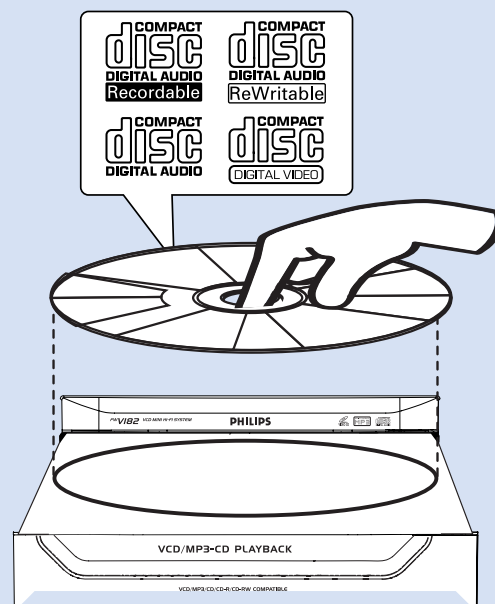

Tip

– If you load a VCD with PBC on, a menu may appear on the TV screen, enabling you to select your desired playback sequence using the Numerical Keypad (0-9) directly.

Tip

– Detailed playback features and additional functions are described in the accompany owner's manual.



Need help?

Online

Go to www.philips.com/support

