

PHILIPS **NORELCO**

*5 in 1
Grooming
Kit*



**G270
Rechargeable
Cordless
Full Size Trimmer**

4203 000 53732

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a Groomer that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store Groomer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this Groomer from the electrical outlet immediately after using, except when Groomer is (re)charging.
5. Unplug Groomer before cleaning.
6. When discarding Groomer, unplug Groomer to remove rechargeable battery. See Battery Removal instruction sheet.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Groomer for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this Groomer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the Groomer to an Authorized Norelco Service Location for examination and repair.
4. Keep the Groomer, cord and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not operate, charge or plug in Groomer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this Groomer with a damaged or broken cutter, or cutting unit as injury may occur.
8. Always attach plug to Groomer first, then to outlet. To disconnect, turn on/off switch to "OFF" position (switch is down), then remove plug from outlet.
9. To prevent possible damage to the cord, do not wrap cord around the Groomer.
10. Never put Groomer in direct sunlight or store at a temperature above 140°F.
11. This Groomer is for use on human facial hair only. Do not use this Groomer for any other purpose.
12. Always store your Groomer, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the Groomer.

SAVE THESE INSTRUCTIONS

IMPORTANT: YOUR GROOMER CONTAINS A NICKEL-CADMIUM RECHARGEABLE BATTERY.

See Battery Removal instruction sheet.

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Features


















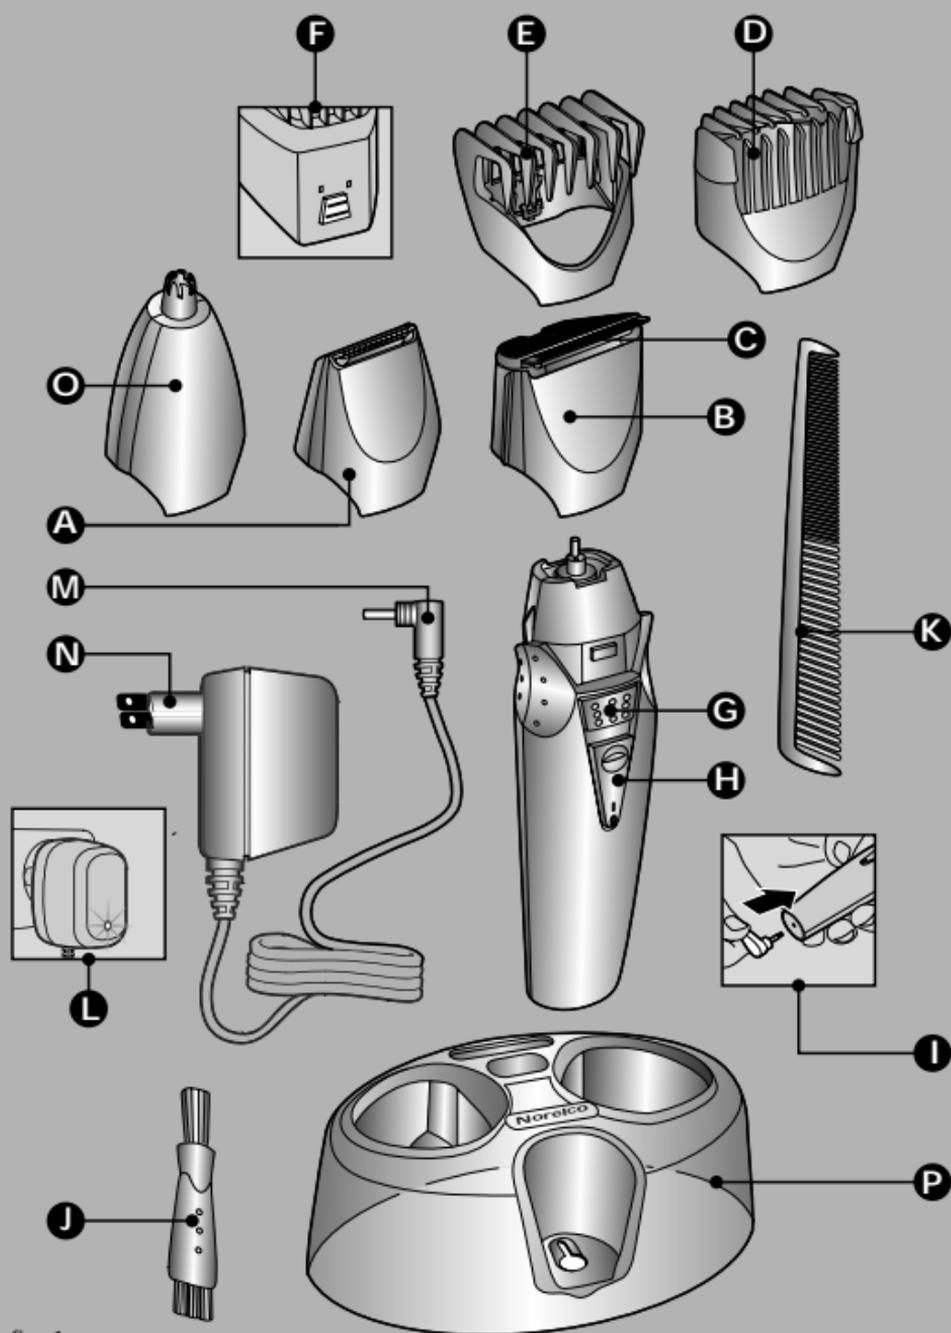


fig. 1

- A. Neckline & Sideburn Trimmer Attachment
 - B. Full Width Trimmer Attachment
 - C. Lifetime Self-Sharpening 3-Dimensional Rounded Stainless Steel Cutter Blades
 - D. AccuControl Beard & Moustache Trimmer Guide Comb
 - E. Hair Clipping Comb
 - F. 9 Position Hair Length Selector
 - G. Release Button
 - H. On/Off Slide Switch
 - I. Socket for appliance plug
 - J. Cleaning Brush
 - K. Styling Comb
 - L. LED Charging Indicator Light on Adaptor
 - M. Appliance Plug
 - N. Charging Plug
 - O. Nose, Ear, Eyebrow Trimmer Attachment
 - P. Charging/Storage Stand
- Full Two-Year Warranty
60-Day Money-Back Guarantee

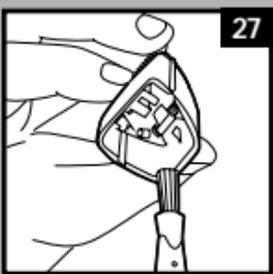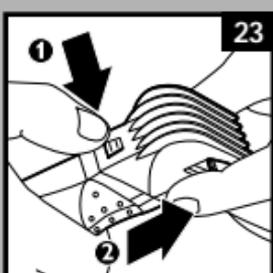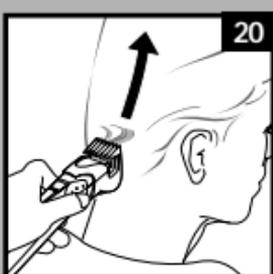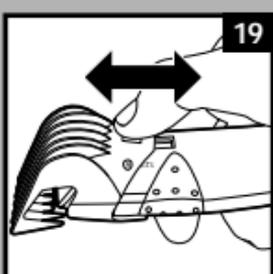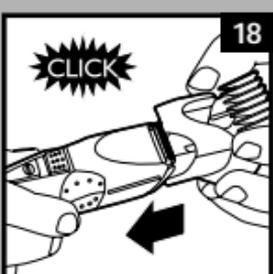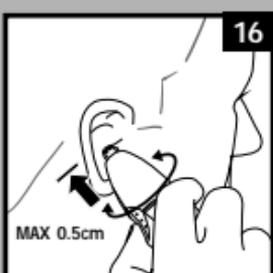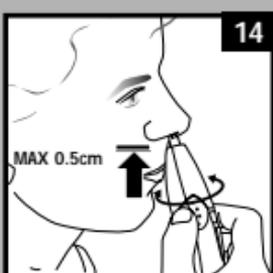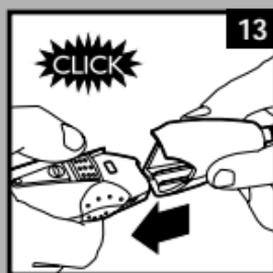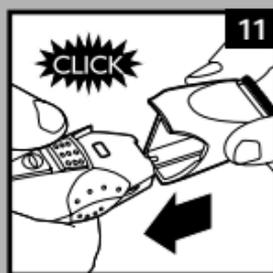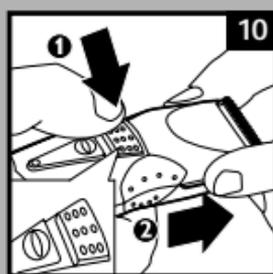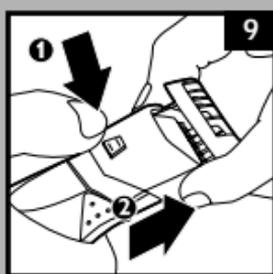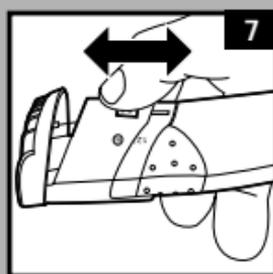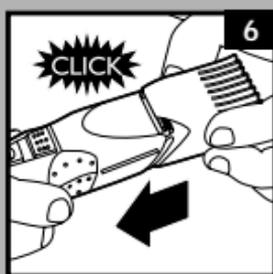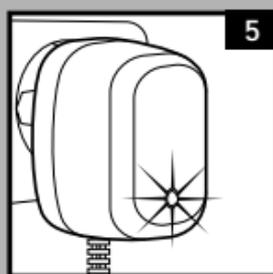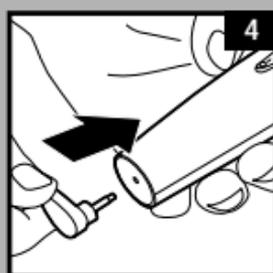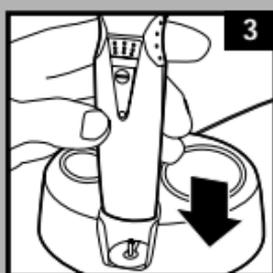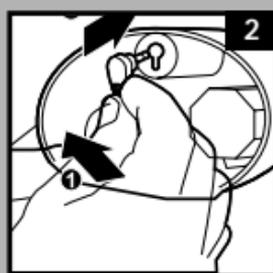

To Charge/Recharge

- ▶ Fully charge Groomer before using for the first time or after non-use for a long period of time.
- ▶ Battery performance is best if you recharge only when the battery is (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifespan of the battery.
- ▶ Continuously recharging Groomer will reduce lifespan of battery.

1 Be certain Groomer is OFF.

2 You may charge the Groomer:

- ▶ In the charging stand by inserting the plug into the socket located in the bottom of the charging stand (fig. 2). Place the Groomer directly on the charging pin in the stand (fig. 3).
- ▶ By inserting the charging plug directly into the Groomer (fig. 4).

3 Plug charging plug into any 120V AC outlet. Use only the cord provided.

4 After a few moments, the green Charging Indicator Light on the power plug will light to indicate the Groomer is charging (fig. 5).

- ▶ It will take approximately 10 hours to fully charge the Groomer for a cordless trimming time of up to 35 minutes.
- ▶ Disconnect the cord and unplug from electrical outlet.

Optimize the working life of the battery

- ▶ After the Groomer has been charged for the first time, do not recharge the Groomer between trimming sessions. Continue using it until the battery is completely empty.
- ▶ Do not charge for more than 24 hours.
- ▶ Do not keep cord permanently plugged in.
- ▶ Discharge/run down the battery completely twice a year by letting the motor run until it stops.
- ▶ If the Groomer hasn't been used for a long period of time, it must be recharged for a full 10 hours.

Cordless Trimming

- 1** Charge according to directions. Unplug Personal Groomer from outlet.
- 2** Slide ON/OFF switch ON to begin trimming.
- 3** If the battery is empty and you want to trim your beard, charge the Groomer for at least 3 hours and you will have enough power for one use (10 minutes).

Put It To The Test

Like many new products, your Norelco Personal Groomer may take a little getting used to. If you are using an electric Personal Groomer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Personal Groomer.

Your Personal Groomer features the unique AccuControl System combined with adjustable Length Settings to make trimming facial hairs or hair clipping goof proof.

Throw your scissors away and put your new Personal Groomer to the test. We guarantee precise, professional results or Norelco will refund you the full purchase price.

AccuControl System

The unique Norelco AccuControl System puts you in complete control while trimming your facial hairs with no prior experience needed. The flexing Guide Comb adjusts automatically to hug the contours of your face for a trim that is both even and accurate. And, it's easy to maneuver over those hard-to-reach areas such as the throat and chin. The Hair Length Selector allows you to choose among 9 preset hair lengths and clicks into position so you can control the exact hair length you desire or vary the length of your facial hair. The Hair Clipping Comb also features 9 preset hair lengths and clicks into position so you can control the exact hair length you desire. The Norelco Personal Groomer for professional, goof-proof results every time or your money back.

Trimming

- ▶ Make sure hair is clean and dry.
- ▶ Always comb the hair with the styling comb in the direction of growth before you start trimming.

Do not move the Groomer too fast. Make smooth and gentle movements.

Trimming your Beard & Moustache with AccuControl Guide Comb Attachment

- ▶ Use this Groomer for its intended household use as described in this manual.
 - ▶ Make sure that the Groomer is fully charged before you start trimming. This Groomer will not operate while cord is connected to electrical outlet.
- 1** Put the AccuControl comb on the full width trimmer attachment until you hear it click into place (fig. 6). The AccuControl comb will not work with the smaller neckline and sideburn trimmer attachment.
 - 2** Press the Hair Length Selector and slide it to the desired trimming length setting. The selected setting number will appear in the window to the left of the Hair Length Selector (fig.7). See Table 1 for settings.
 - ▶ If you are trimming for the first time, start by using the AccuControl comb at the maximum trimming length setting (#9) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Hair Length Selector to desired trimming length. Selector will "click" into position at each setting.
 - 3** Switch the Groomer ON.
 - 4** To trim in the most effective way, move the Groomer against the direction of hair growth. Make sure the surface of the Guide Comb always stays in contact with the skin (fig. 8).

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- ▶ If a lot of hair has accumulated in the Guide-Comb, remove the comb and blow and/or shake the hair out of the comb. You can also use the cleaning brush provided to remove hair from the comb area.
- ▶ **REMEMBER:** You must reset the hair length selector back to your desired setting every time you replace the guide comb on the appliance.

Table 1. Beard trimmer

Setting	Remaining hair length (mm)
1 Stubble	2
2 Closely Cropped	4
3 Short	6
4 Medium Short	8
5 Medium	10
6 Medium Long	12
7 Long	14
8 Extra Long	16
9 Longest	18

- ▶ The remaining hair length corresponds with the smallest distance between the cutting blade and the spot where the comb is in contact with the skin.
- ▶ Cutting without the comb attachment or setting the AccuControl guide comb to #1 position will result in a stubble beard look.

Beard Trimming Without AccuControl Guide Comb

Remove AccuControl guide comb if you are:

- ▶ Defining hair lines
- ▶ Trimming nape of neck
- ▶ Removing single, unwanted hairs

- 1** Be certain the Groomer is in the OFF position.
- 2** Remove the AccuControl comb attachment by pressing and sliding the Hair Length Selector upwards (fig. 9).

Never pull off the AccuControl comb attachment by grasping the flexible top portion. Always pull off by the bottom part attachment.

- 3** Switch the Groomer ON.
- 4** Make well-controlled movements. Touch the hair/skin lightly with the Groomer.

Defining Beard, Moustache and Sideburns

- 1 Be certain the Groomer is in the OFF position.
 - 2 Remove the AccuControl comb attachment by pressing and sliding the Hair Length Selector upwards (fig. 9).
 - 3 Detach the full width trimmer attachment by pushing the release button (fig. 10).
 - 4 Put the smaller neckline and sideburn trimmer attachment on the Groomer (fig. 11). You will hear a click.
- ▶ Hold the Groomer upright when you use the smaller neckline and sideburn trimmer attachment (fig. 12).

Using Nose, Ear & Eyebrow Attachment

- 1 Be certain the Groomer is in the OFF position.
 - 2 To attach or remove nose, ear, eyebrow attachment (or change attachments):
- ▶ Remove the AccuControl comb attachment (fig. 9).
- ▶ Remove the full width trimmer attachment by pushing the release button (fig. 10).
- ▶ Put the nose, ear, eyebrow attachment on the Groomer (fig. 13). You will hear a click.

Trimming Nose Hair

- ▶ Make sure nasal passages are clean.
- 1 Place nose, ear and eyebrow attachment on Groomer.
 - 2 Switch the Groomer ON and insert the tip of the attachment into one nostril (fig. 14).

CAUTION: Do Not insert the tip more than 3/16 in./5mm into your nostril.

- 3 Slowly move the tip in and out while turning it around at the same time in order to remove unwanted hair. For best results, make sure the side of the tip is firm against skin. This will reduce the tickling effect that can occur during trimming of nose hair.
- 4 Turn off Groomer. Wipe attachment clean after each use.

Trimming Ear Hair

- ▶ Clean outer area of ear and ear canal. Make sure it is free of wax.
 - ▶ Nose, ear and eyebrow attachment should be on the Groomer.
- 1** Switch the Groomer on and move the tip softly around the edge of ear to remove hairs extending beyond the outer ear (fig. 15).
 - 2** Carefully insert the tip into outer ear canal.

CAUTION: Do not insert the tip further than 3/16 in./5mm into the ear as this could cause damage to the eardrum (fig. 16).

- 3** Turn off Groomer. Wipe attachment clean after each use.

Trimming Eyebrow

- ▶ Nose, ear and eyebrow attachment should be on Groomer.

- 1** Switch the Groomer on and use the tip to cut individual eyebrow hairs.

The Groomer can be used for clipping single long hairs.

- 2** Put the Groomer at the root of the hair and move it along the edge of the eyebrow from the base of the nose towards the outer tip of the eyebrow in the direction of hair growth (fig. 17).

IMPORTANT: Do not use the Groomer to define or trim the entire eyebrow. Do not try to trim your eyelashes. Be careful not to get too close to your eyelashes and eyes!

- 3** Turn off Groomer. Wipe attachment clean after each use.

Hair Clipping

- ▶ Make sure that the appliance is fully charged before you start clipping hair. The appliance will not operate while cord is connected to electrical outlet.
- ▶ Before you start clipping, make sure that the head of the person whose hair you are cutting is at the same level as your chest so that all parts of his/her head are clearly visible and within easy reach.
- ▶ Only use the appliance on dry hair.
- ▶ Do not use on freshly washed hair.
- ▶ Before you begin, comb the hair in the direction of growth.
- ▶ To achieve optimal clipping results, always move the appliance slowly through the hair against the direction of hair growth.

Clipping with hair comb attachment

- 1** Put the hair clipper comb on the full width trimmer attachment and push until you hear it 'click' into place (fig. 18).
- 2** Press the Hair Length Selector and slide it to the desired setting. See Table 2.
- 3** The setting selected will appear in the window to the left of the Hair Length Selector (fig. 19).

When you are clipping for the first time, start at the maximum clipping length setting (#9) to familiarize yourself with the appliance and prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust the Hair Length Selector to desired trimming length. Selector will 'click' into position at each setting.

Table 2. Hair clipper

Setting	Remaining hair length (mm)
1	4
2	6
3	8
4	10
5	12
6	14
7	16
8	18
9	20

- 4** Make sure that the flat part of the comb is always in full contact with the scalp to obtain an even result (fig. 20-21).
 - 5** Move the appliance slowly over the crown from different directions to achieve an even result (fig. 22).
 - 6** Always move the appliance against the direction of hair growth.
 - 7** Make overlapping passes over the head to ensure that all hair that should be cut has been cut.
 - 8** Turn the Groomer off and remove the hair comb often to blow and/or shake out hair that has accumulated.
- **REMEMBER:** You must reset the hair length selector back to your desired setting every time you replace the hair clipping comb on the appliance.

Contouring without the hair clipping comb attachment

- 1** Remove the hair comb by pressing and sliding the Hair Length Selector upwards (fig. 23).

Be careful when you are clipping without comb attachment as when the appliance is turned on it will trim every hair it touches.

- 2** Tilt the appliance in such a way that only one edge of the trimming attachment touches the hair ends when you shape the contours around the ears (fig. 24).
- 3** To contour the nape of the neck or hairline, turn the appliance and hold it with the trimming attachment pointing downwards (fig. 25).
- 4** To contour the sideburns, turn the appliance and hold it with the trimming attachment pointing downwards (fig. 26).

Cleaning

- ▶ Do not use water or a moist cloth to clean the Groomer.
- ▶ Always switch Groomer OFF before cleaning.
- ▶ Do not use abrasive, scourers or liquids such as alcohol, benzene, bleach or acetone to clean the Groomer.
- ▶ Never clean, replace or remove Groomer attachments with motor ON.
- ▶ Do not apply pressure to cutters.
- ▶ Do not touch cutters with hard objects as this may damage them.
- ▶ Do not use while bathing, showering or immerse the Groomer in water or other liquids as damage to Groomer may occur.

During Use:

- ▶ If cut hairs have accumulated in the Guide Comb area, remove hairs by shaking, blowing or using cleaning brush provided. Remember to adjust the trimming length back to your selected setting when you replace the guide comb on Groomer.

Once a Week:

- 1** Make sure the Groomer is switched OFF and disconnected from the electrical outlet.
- 2** Remove any attachments.
- 3** Blow and/or shake out any hair that may have accumulated in the attachment.
- 4** Clean the outside and inside of the attachment with the brush supplied (fig. 27). The cutter is fixed to the trimming attachment(s) and cannot be removed.
- 5** Place the attachment back on Groomer or place in the storage stand (fig. 28).

This Groomer has no other user-serviceable parts. Any other service should be performed by an Authorized Norelco Service Location.

Storage

- ▶ Be sure Groomer is turned OFF. Remove cord from outlet and Groomer before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Store the Groomer and attachments in the storage stand to prevent damage.
- ▶ Do not wrap cord around Groomer or stand when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store Groomer where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Replacing The Cutting Unit

If your cutters become damaged or worn, do not continue using the Groomer. Cutters should be replaced immediately by an Authorized Norelco Service Location.

Assistance

For assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050

or visit our website: www.norelco.com

Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

Battery Removal

- ▶ This Norelco Groomer contains a rechargeable Nickel-Cadmium battery, which must be disposed of properly.
- ▶ Battery should only be removed when Groomer is to be discarded.
- ▶ Refer to Battery Removal instruction sheet for directions on removing the rechargeable battery.

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Norelco product, Model G270, against defects in materials or workmanship for a period of two years (cutters for up to five years) from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specific voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:

Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

AccuControl is a Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2005 Philips Electronics North America Corporation. All Rights Reserved.