

HEALTH CARE (HC) MAIN ON-SCREEN MENU CONTROLS

Installer: This product is not provided with a pendant control; however, it is expected that this institution (or hospital) will provide one for attachment to the appropriate receptacle on the product. As part of the installation, examine the pendant control to determine whether a marking similar to the one below appears on it:

“CAUTION - Risk of fire if used in oxygen-enriched atmosphere - return to hook or holder after use.”

If the above notice is not provided on the pendant control, remove the label provided with these instructions and attach it to the pendant control.” A separate adhesive-backed label stating **“CAUTION” “Risk of fire if pendant control is used in oxygen-enriched atmosphere. Keep pendant control away from oxygen equipment,”** can be affixed by the installer to the pendant control if necessary.

Note: Depending on the model and its features, some or all of the displays and features described below will be available. To perform setup operations for the TV Commercial mode, a RG4172BK remote with its TV Setup, Guest, and Data Communication mode capabilities can be used. Press TV SETUP, then press RECALL, to determine whether the TV is in Commercial mode. If the TV is in Consumer mode, press TV SETUP, 02, 49, 95, then M(enu), then use the +/- buttons to select Commercial mode. (See RG4172BK Remote Control Instructions, part number IB7166E002, for details.)

LANGUAGE	ENGLISH/ESPAÑOL/FRANÇAIS
CHANNEL INSTALL	▶
CABLE TUNING	ON/OFF
CURRENT RING	1/2/3/4
BRIGHTNESS	█----- 27
COLOR	█----- 27
CONTRAST	█----- 27
SHARPNESS	█----- 27
TINT	-----+----- 2
NOISE REDUCTION	ON/OFF
AVL	ON/OFF
VOLUME BAR	ON/OFF
MIN VOLUME	█----- 3
MAX VOLUME	█----- 40
SWITCH ON VOLUME	█----- 25/STANDARD
SWITCH ON CHANNEL	TV Channels 1-125/STANDARD
POWER ON	STANDARD/FORCED
CHANNEL DISPLAY	NUMBER/LABEL/ALL/NONE
KEYBOARD LOCK	ON/OFF
ESP	1-99/OFF
AUDIO/VIDEO MUTE	OFF/BLACK/BLUE
WELCOME MESSAGE	▶
CHANNEL GUIDE	POWER ON/OFF/ON
REMINDER	ON/OFF
3 DIGIT ENTRY	ON/OFF
A/CH	ON/OFF
CC	OFF/CC-1/CC-2/CC ON MUTE
SAVE CC	ON/OFF
V-CHIP MENU ITEM	ON/OFF
SAVE V-CHIP	ON/OFF
V-CHIP SETUP	▶
SLEEPTIMER	OFF/15/30/45/60/90/120/180/240
SECURITY	STANDARD/HIGH
EXIT	▶

ON-SCREEN SUB-MENU CONTROLS

CHANNEL INSTALLATION

CHANNEL	TV 1-125
CHANNEL RING	CHANNEL RING 1/CHANNEL RING 2 /CHANNEL RING 3/CHANNEL RING 4
LABEL	(- - - - -) Example; CHAN 004
VIDEO BLANK	ON/OFF
AUDIO BLANK	ON/OFF
AUTO PROGRAM	▶
EXIT	▶

WELCOME MESSAGE

MESSAGE	ON/OFF
LINE 1	(- - - - -)
LINE 2	(- - - - -)
CLEAR	▶
EXIT	▶

V CHIP SETUP

MASTER DISABLE	ON/OFF
TV RATINGS	▶
MOVIE RATINGS	▶
EXIT	▶

MOVIE RATINGS

G	VIEW/BLOCKED
PG	VIEW/BLOCKED
PG-13	VIEW/BLOCKED
R	VIEW/BLOCKED
NC-17	VIEW/BLOCKED
X	VIEW/BLOCKED
NR	VIEW/BLOCKED
EXIT	▶

TV RATINGS

TV RATINGS	ALL V S L D
TV-Y	[]
TV-Y7	[] []
TV-G	[]
TV-PG	[] [] [] []
TV-14	[] [] [] []
TV-MA	[] [] []
EXIT	▶

TO SELECT A FEATURE IN THE ON-SCREEN MENU

Press the POWER button on the remote control. Next, press the TV SETUP button. Then, press the M(enu) button. The TV's on-screen menu will appear. Now, use the ▲/▼ buttons to scroll to and highlight the feature you want to adjust. Finally, use the ◀ or ▶ buttons to make the changes. Remember, the TV must be in Commercial mode.

