


# PHILIPS

## Quick Start Card

HF3500

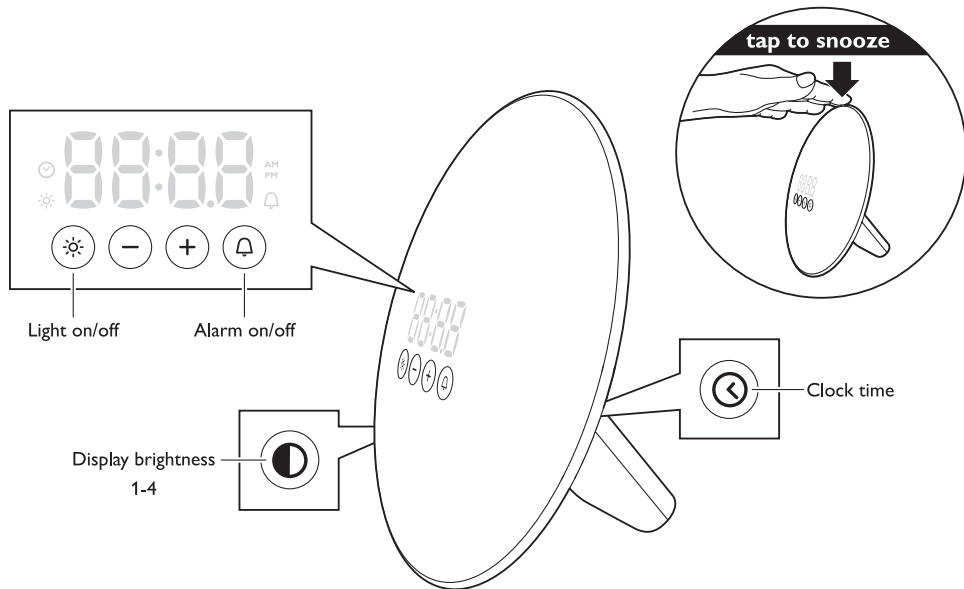

English	Dansk	Nederlands	Norsk	Suomi	Français	Português
Tap to snooze	Tryk for snooze	Raak aan om te sluimeren	Trykk for å aktivere snooze	Torkkutila napauttamalla	Appuyez pour répéter	Tocar para repetir alarme
Light on/off	Lys til/fra	Licht aan/uit	Lys av/på	Merkkivalo päällä/pois	Lumière marche/arrêt	Ligar/desligar a luz
Alarm on/off	Alarm til/fra	Alarm aan/uit	Alarm av/på	Hälytys on/ei	Alarme marche/arrêt	Ligar/desligar o alarme
Display brightness	Skærmlsstyrke	Displayhelderheid	Visningslysstyrke	Näytön kirkkaus	Luminosité de l'affichage	Brilho do visor
Clock time	Klokkeslæt	Kloktijd	Klokkeslett	Kellonaika	Heure (horloge)	Hora do relógio

Italiano	Deutsch	Español	Русский	Svenska
Toccate per attivare lo snooze	Kurz Drücken für Schlummerfunktion	Toque para retrasar la alarma	Нажмите, чтобы отложить сигнал	Tryck för att använda snooze-funktionen
Luce accesa/spenta	Licht ein-/ausschalten	Encendido/apagado de la luz	Включить/выключить светильник	Ljus på/av
Sveglia attiva/non attiva	Wecker ein-/ausschalten	Encendido/apagado de la alarma	Включить/выключить сигнал	Larm på/av
Luminosità display	Anzeigehelligkeit	Brillo de la pantalla	Яркость дисплея	Teckenfönstrets ljusstyrka
Ora	Uhrzeit	Hora del reloj	Время на часах	Klocktid

Clock time



12h/24h

AM  
PM

Alarm time



Alarm on/off



Light 1-10

