

Introduction:

 
Philips strives to continually bring you the best experience from our products. To obtain the optimal playback and latest features, you are highly recommended to upgrade the firmware of your player.

Preparation for firmware upgrade:


For upgrade via a USB flash drive:

- A PC with an archive utility that supports the ZIP-format (e.g. WinZip for Windows).
- A USB flash device with enough free space to hold the firmware file. An empty one is advised to avoid a crash among files.


(You can check the size of the firmware file at the top of the screen.)



Upgrade Procedure:

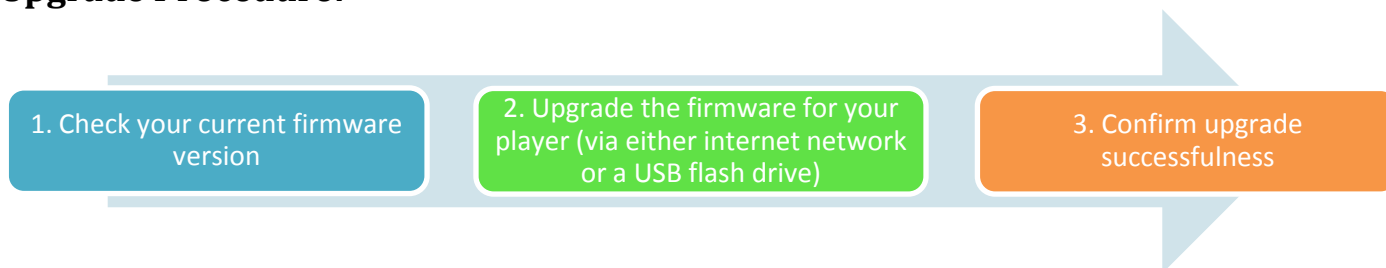 

Step 1: Check your current firmware version

1. Turn on the player.
2. Navigate on the remote control, select [Setup]  > [MISC] > [Version Info] in the TV on-screen menu and then press <OK> button.
3. The firmware version will be displayed on the TV screen.
4. Compare the firmware version displayed to the latest version. If the existing firmware in your player is of an earlier version than the new release, please proceed to **Step 2**.


Otherwise, the latest firmware is installed and hence an upgrade is not needed.

Step 2: Upgrade the firmware for your player

Upgrade firmware via USB

1. Download firmware.

Click on the Download icon at the top of the screen to download the new firmware package to your computer.

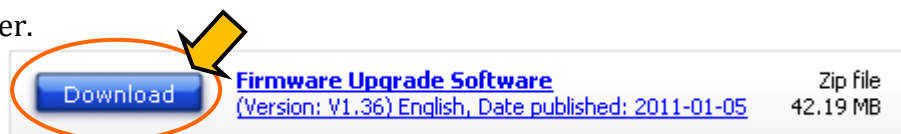 

2. Transfer firmware to a USB flash drive.

Warning: DO NOT remove the USB flash device during the firmware upgrade procedure. If an error occurs during the upgrade, retry the procedure. If you need further assistance, please call your local Philips Consumer Care Center or use our Live Chat function.

- i. Extract the firmware upgrade file from the downloaded firmware package.
Note: Please DO NOT rename either the folder name or the file name in the folder to avoid an upgrade corruption.
- ii. Copy the extracted **.img** firmware file from the folder “Firmware” to the root directory in the USB flash drive.

3. Upgrade the firmware to the player

Warning: DO NOT press any buttons or interrupt the main supply during the upgrading process, otherwise the product may become defective.

- i. Turn on the player.
- ii. **Make sure there is no USB flash device or SD card in the slots.**
- iii. In the main menu, insert the USB flash drive contained firmware file into the USB slot.
- iv. The player will search for the upgrade files in your USB flash drive. Once the files have been recognized, you will be prompted to start an upgrade.
- v. To proceed with the upgrade, select [OK] and press <OK> on the remote control. You can cancel the upgrade at this point by selecting [Cancel] displayed in the TV on-screen menu and press <OK> on the remote control.
- vi. The display will be blank for 1min, please wait until installation screen on TV.
- vii. Upon the completion of the upgrade, the product will go to standby automatically.

Step 3: Confirm upgrade successfulness

1. Go over **Step 1 Check your current firmware version** to verify if the new firmware is correctly upgraded.
2. If the latest firmware has not been installed, repeat ‘**Step 2 Upgrade the firmware for your player**’ and ‘**Step 3 Confirm upgrade successfulness**’.