

- 10 Release the lever and slide the barrel to the end of the lock of hair (Fig. 9).
- 11 Take the cool tip between your fingertips and wind the lock of hair around the barrel until you have almost reached your scalp. Make sure the end of the lock of hair is wound in the required direction (Fig. 10)
- 12 Hold the curler in this position for 10 seconds.
- 13 Unwind the lock of hair until you can open the clip again with the lever (Fig. 11)

Note: Do not pull at the curler when you unwind the lock, otherwise you would straighten the curl.

- 14 Let your hair cool down. Do not comb or brush it before it has cooled down, as this would ruin the hairstyle you have just created.
- 15 To switch off the appliance, set the on/off slide to '0'.

Temperature lock

This appliance has a locking function to fix the selected temperature setting for the duration of the curling session.

- 1 To activate the temperature lock, press and hold the temperature decrease/lock button for a few seconds. (Fig. 12)
 - ▶ The lock symbol appears on the display (Fig. 13).
- 2 To deactivate the temperature lock, press and hold the temperature decrease/lock button again for a few seconds.
 - ▶ The lock symbol disappears from the display.

Cleaning

Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

- 1 Switch off the appliance and unplug it.
- 2 Let the appliance cool down completely on a heat-resistant surface.
- 3 Clean the appliance with a damp cloth.

Storage

Never wind the mains cord round the appliance.

- 1 Switch off the appliance and unplug it.
- 2 Let the appliance cool down completely on a heat-resistant surface.
- 3 Store the appliance in a safe and dry place. You can also store the appliance by hanging it from its hanging loop.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 14).

Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Customer Care Centre in your country.

Problem	Possible cause	Solution
The appliance does not work.	There is a power failure or the socket to which the appliance is connected is not live.	Check if the power supply works. If it does, plug in another appliance to check whether the socket is live.
	You have not switched on the appliance.	Set the on/off slide to 'I' to switch on the appliance.
	The appliance switched off automatically after having been on for 1 hour.	Set the on/off slide to '0' and then to 'I' again to switch the appliance off and on again.
	The appliance is not suitable for the voltage to which it is connected.	Make sure that the voltage indicated on the appliance corresponds to the local mains voltage.
	The mains cord of the appliance is damaged.	If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
The temperature cannot be set.	You have activated the temperature lock.	Press and hold the temperature decrease/lock button for a few seconds until the lock symbol disappears from the display.

Smoke escapes when I open the clip. In some climates and surroundings, the air contains more moisture than in others. The heat of the curler causes moisture that is naturally present in the surrounding air to evaporate.

This is normal and harmless.

TRESemmé.
USED BY PROFESSIONALS

HP4684/07, HP4683/07



PHILIPS



www.philips.com

100% recycled paper
100% papier recyclé

4222.002.7071.1


Problem	Possible cause	Solution
Smoke escapes from the hair or from the curler during use.	You have put styling products in your hair (e.g. mousse, spray or gel).	Never put styling products in your hair before you use the curler.
	You have used the appliance at a temperature setting that is too high for your hair type.	Always use the appliance at a temperature setting that is suitable for your hair type.
	In some climates and surroundings, the air contains more moisture than in others. The heat of the curler causes moisture that is naturally present in the surrounding air to evaporate.	This is normal and harmless. Make sure you use a temperature setting that is suitable for your hair type. You can reduce the temperature setting if this setting still produces the desired curling result.
My hair is not curled when I remove the styler from my hair.	The appliance has not yet heated up to the set temperature setting.	Let the appliance heat up until the word 'READY' appears on the display. Do not touch the barrel, as you could burn yourself on them even if the appliance has not reached the set temperature setting yet.
	You have used the appliance at a temperature setting that is too low for your hair type.	Always use the appliance at a temperature setting that is suitable for your hair type.
The word 'READY' does not appear on the display.	The appliance has not yet heated up to the set temperature setting.	Wait a few more minutes until the word 'READY' appears on the display.
The tip of the hair is bent in the wrong direction.	You did not wind the tip of the lock in the required direction when you wound the lock around the barrel.	Make sure you wind the tip of the lock in the required direction when you wind the lock around the barrel.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. This TRESemmé Philips appliance is designed and created to give you the salon styles you want, in a quick and easy way. We hope you enjoy using this TRESemmé Philips styler.

General description (Fig. 1)

- A** Cool tip
- B** Clip
- C** Lever
- D** Handle
- E** Hanging loop
- F** Barrel
- G** Support
- H** Display
- I** Temperature decrease/lock button
- J** Temperature increase button
- K** On/off slide

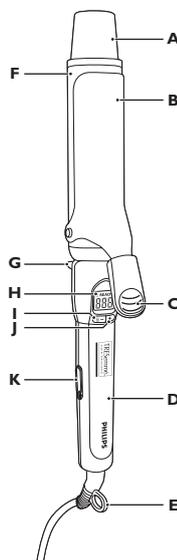

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the appliance away from water. Do not use it near or over water contained in baths, washbasins, sinks etc. When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Keep the appliance away from flammable items.
- Never leave the appliance unattended when it is connected to the mains.

Caution


- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- The barrel and the clip become hot during use. Prevent the hot surfaces of the appliance from coming into contact with your skin.
- The maximum temperature occurs just after heating up. The actual temperature during use may be lower.
- Always unplug the appliance after use.
- For safety reasons, the appliance automatically switches off after having been on for 1 hour.
- Wait until the appliance has cooled down before you store it.
- Always switch off the appliance before you put it down, even if it is only for a moment.
- Do not leave the barrel in your hair for more than a few seconds at a time to prevent damage to your hair.
- Do not wind the mains cord round the appliance.
- Only use the appliance on dry hair.
- Do not use the appliance on artificial hair.
- Do not use the appliance for any other purpose than described in this manual.
- Keep the barrel and the clip clean and free of dust, dirt and styling products such as mousse, spray and gel. Dust, dirt and styling products may cause damage to the ceramic coating.
- The barrel and the clip have a ceramic coating. This coating slowly wears away over time. This does not affect the performance of the appliance.
- If you use the appliance on colour-treated hair, the barrel may stain.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Using the appliance

Curlers are powerful styling tools and must always be used with care. As with all curlers that reach salon high temperatures, do not use the appliance frequently to avoid damage to the hair. If you use the curler incorrectly or if you use it at the wrong temperature setting, you could overheat your hair or even burn it.

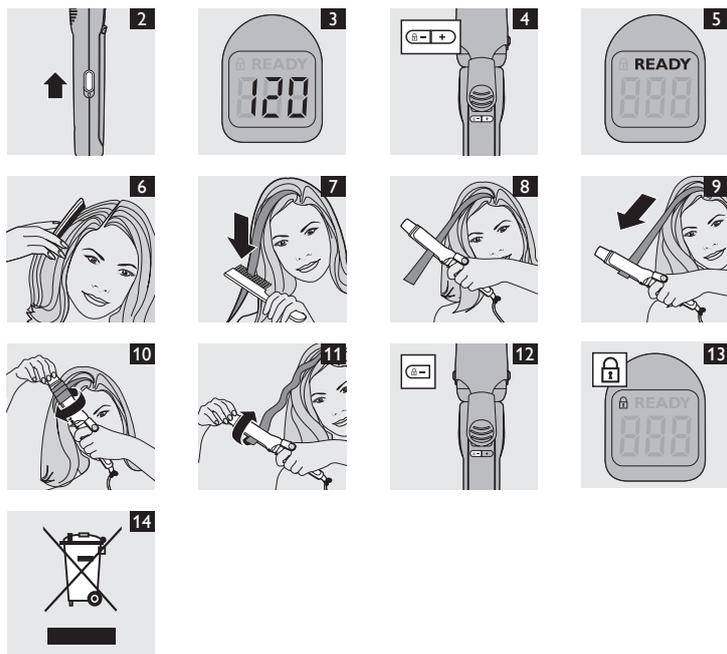

Curling

- 1** Put the plug in the wall socket.
- 2** Set the on/off slide to 'I' to switch on the appliance. (Fig. 2)
 - ▶ The default temperature setting of 120 appears on the display. (Fig. 3)
 - ▶ As soon as the appliance has heated up to this setting, the word 'READY' appears on the display.

Never leave the appliance unattended when it is plugged in. Always put the appliance on a heat-resistant surface when it is heating up and when it is hot.

- 3** Select a temperature setting that is suitable for your hair type.
 - Always select a low setting when you use the curler for the first time.
 - For thick or coarse hair, select a medium to high setting (170 and up).
 - For fine or normal hair, select a medium to low setting (160 and below).

Take extra care with pale, blonde, bleached or colour-treated hair, since it is susceptible to damage at high temperature settings.

- 4** Press the + button to increase the temperature setting or the - button to decrease the temperature setting (Fig. 4).
 - ▶ The display shows the selected temperature setting.
 - ▶ As soon as the appliance has heated up to the set temperature setting, the word 'READY' appears on the display. (Fig. 5)

- 5** If you want to lock the set temperature setting, press and hold the temperature decrease/lock button for a few seconds (see section 'Temperature lock').

- 6** Divide your hair into locks and put them aside with clips. (Fig. 6)

Note: The thinner the lock of hair, the tighter the curl becomes.

- 7** Start curling at the lower part of your head and work your way up to the crown.
- 8** Take the lock of hair you want to curl and comb it first, to get rid of tangles (Fig. 7)
- 9** Press the lever to open the clip. Place the lock of hair between the barrel and the clip (Fig. 8).